



Speckles High Chair BBCHAIRHISA Quick Start Guide

Safety Precautions

Please read all instructions carefully and keep a copy of these instructions for future reference.

- **Follow all instructions.**
- **Do not leave children in the chair unattended.**
- **The harness must always be used and correctly fitted - most injuries from high chairs are caused by falls.**
- **Position the high chair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.**
- Check that all safety locks are engaged before placing child in the high chair.
- Always keep child in view while they are in the high chair.
- Not recommended for children under 6 months old.
- The tray is not designed to hold your child in the high chair.
- Use safety locks and brakes at all times.
- Always secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.
- The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- Only use the high chair on a secure, level surface.
- Do not allow children to stand on the seat or footrest, or climb into or out of the high chair.
- When adjusting the high chair, make sure that parts of your child's body are clear of any moving parts.
- Do not carry the high chair with your child in it.
- To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window curtain cords and electrical cords. Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.
- Periodically check that all parts of the high chair are in good working order.
- Do not use the high chair if it is damaged or broken. Contact the Kogan customer support team for repair advice.
- Do not use the high chair unless all components are correctly fitted and adjusted.
- The weight of the child using this high chair should not exceed 17kgs.
- Promptly replace worn out or broken parts.

Assembly Contents



Seat x 1



Tray x 1



Foot Rest x 1



 
Leg Assembly x 2



Leg Base Moulds x 2
(Castors fitted)




Plastic Clips x 2
(1 pre-assembled)

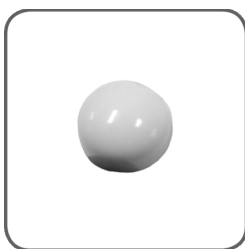


Plastic Caps x 2
(1 pre-assembled)



 Support Tube Fixing
Screws, Nuts and
Washers x 2

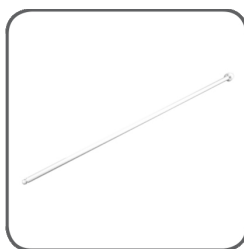

Fixing Bar (axle) x 1

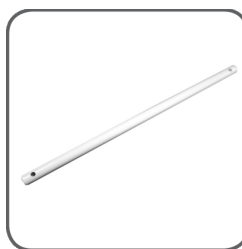 

Support Tube x 1

Assembly/Operation Instructions


To assemble the high chair

Open the main frame leg assemblies and join them together by placing the seat support tube between them. Secure with screws, nuts and washers provided.



To fit leg base mouldings

Attach the leg base mouldings onto the bottom of the front and rear legs. Ensure that the leg base moulds with "F" stickers match the "F" on the front legs. Secure the mouldings to the legs by pushing them into position. Ensure the pop-up pins are engaged.

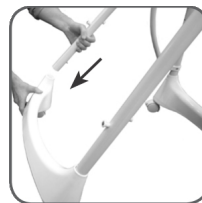

To attach the seat

Place the seat onto the support tube by inserting the pedestals into the recess at the top of the leg assemblies as shown in the image. Ensure the seat clicks into place.



1. Push the axle bar through the leg assemblies and the seat.
2. Press the plastic clip into the groove at the end of the axle.
3. To secure, press the plastic cap over the plastic clip.



1



2



3

To attach the foot rest

Place the footrest along the front of the seat assembly. Press firmly to ensure it 'clicks' into position.



To adjust the seat height

Squeeze the levers on both front legs of the chair and raise or lower to the desired position.



To attach and use tray

1. Attach tray by aligning it with the armrests, and squeezing the lever under the front of the tray, slide tray along armrests.
2. To adjust tray, squeeze the lever under the front of the tray and slide to 1 of 3 positions.



To lift the armrest


Press the button on the side of the armrest, then lift.



Harness restraints


To secure your child in the harness, push buckle (a) and (b) into the buckle housing (c), until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (d) until the desired fit is achieved in the lap, shoulder and crotch strap. To release the buckle, squeeze the top and bottom prongs until it disengages.

- **CAUTION: The harness must be used at all times and be correctly adjusted.**

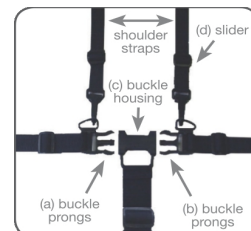

To fold the high chair

1. Remove tray.
2. Squeeze levers on both rear legs of the chair and slide upwards while pushing the rear legs towards the front legs.
3. The tray can be stored by placing it on the buttons that are located on the rear legs.

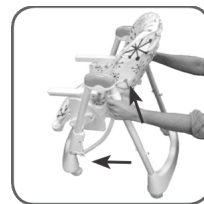

Cleaning

To ensure the long-lasting use of your high chair, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean, dry place.

Maintenance

Always check parts regularly for the tightness of screws, nuts and other fasteners – tighten or replace if required.