



CK2IN1FRPGA

Cookmaster 2 in 1 Outdoor Fire Pit Grill

Quick Start Guide

Table of Contents

Safety & Warnings.....1

Overview.....1

Assembly.....2

 





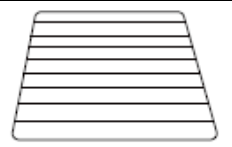

 

 
Operation.....3

Care & Maintenance.....3

Safety & Warnings

- Read all instructions before using the product and retain for reference.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The influence of alcohol and prescription or non-prescription drugs may impair ability to safely operate or assemble this product.
- Exercise the same precautions you would with any open fire.
- Do not use this fire pit for indoor heating. Toxic carbon monoxide fumes can accumulate and cause asphyxiation or death.

Overview

Part	Description	Qty	Illustration	Part	Description	Qty	Illustration
A	Top frame	4		G	Lid ring	1	
B	Leg	4		H	Bolt	36	
C	Frame support	4		I	Poker	1	
D	Log grate	1		J	Allen wrench	1	
E	Fire bowl	1		K	BBQ grill	1	
F	Mesh lid	1					

Assembly

Estimated time: 20 minutes

NOTE: DO NOT over-tighten hardware

Step 1)

Place parts on a smooth even surface. Fix 4x Top Frame (A) by using Bolt (H) into Square frame. (View Fig.1).

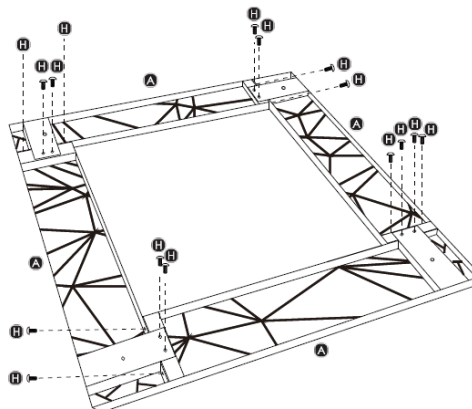


Fig.1

Step 2)

Attach Frame Support Parts (C) to Legs (B) by using Bolts (H).

Tighten all hardware with provided Allen Wrench (J) adjustable wrench until all pieces fit together securely.

Turn the assembled fire pit frame over so that it sits securely (legs down) on a flat surface. (View Fig.2)

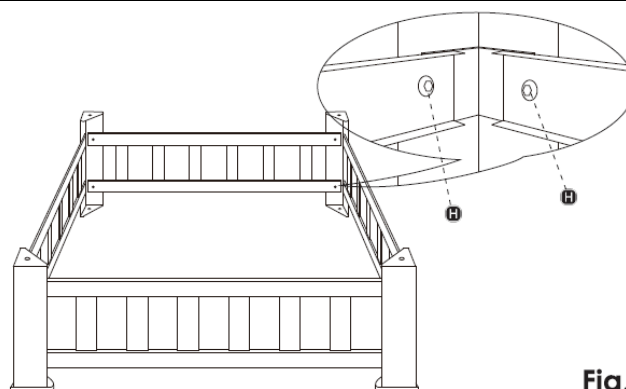


Fig.2

Step 3)

Attach Legs (B) to Top Frame (A) with Bolts (H) Hand tighten (View Fig.3)

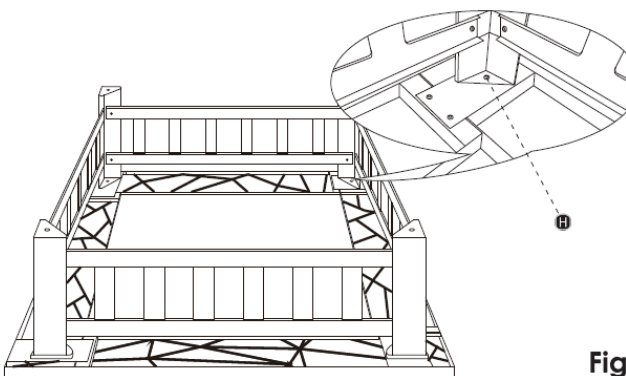


Fig.3

Step 4)

Place Fire Bowl (E) in the centre of Top Frame (A) and put Log Grate (D) in the Fire Bowl (E).

Mount Lid Ring (G) on the Mesh Lid (F) and place the assembled Mesh Lid over the Fire Bowl (E) (View Fig.4).

For BBQ use: put the BBQ Grill (K) on the Fire Bowl (E).

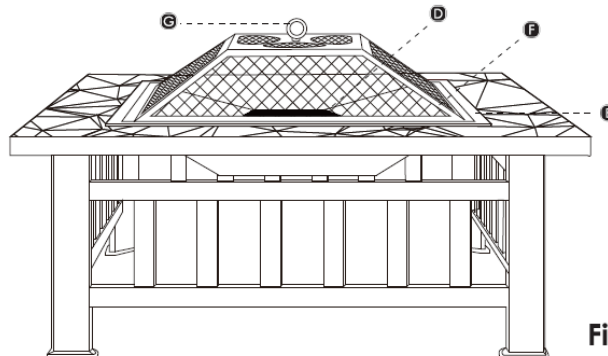


Fig.4

Operation

Place wood logs on grate and light with match. DO NOT overload logs.

Please use poker (provided) when handling.

We do not recommend pouring water over the fire unless necessary. The fire should be allowed to expire on its own.

Care & Maintenance

This fire pit is a quality-built product and is made to last for many years.

The frame structure of this unit is made of powder-coated steel extrusion and should resist rusting under normal use. Should rusting occur, we suggest using a steel brush on the affected area followed by a spray coating of high temperature anti-rust paint.

For additional rust proofing of the bowl, grate and mesh lid we recommend that a coat of high temperature primer is applied before use.

You may cover the fire pit with a protective cover (not provided) when the fire pit is not in use. Ensure the fire pit has completely cooled down first.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>