



CTHSE20RELA





Certa 20m Retractable Garden Hose Reel

Quick Start Guide

Safety & Warnings

 
- Read all instructions before using the appliance and retain for reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Parts

			
Wall Mounting Bracket	Pivot Bar	Trigger Spray Gun	Masonry Bolts + Anchors

Overview


1) Left Cover
2) Inlet Hose Connector
3) Left Case
4) Belt
5) Guide
6) Hose
7) Outlet Hose Connector
8) Drum Wheel
9) Ratchet Plate
10) Ratchet Lock Assembly
11) Centre Shaft
12) Drum Wheel Inner Cap
13) Spring
14) Spring Housing Outer Cover
15) Right Case
16) Tension Cover
17) Right Cover
18) Plastic Tube
19) Mounting Bracket

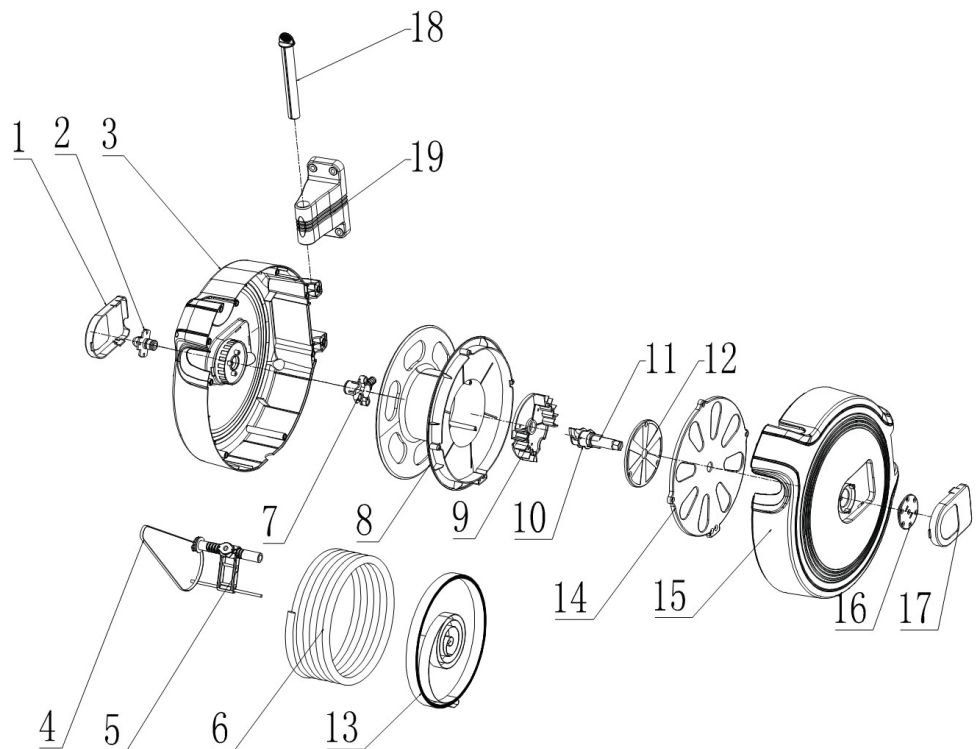

Installation


1) Choose a suitable position. Mark and drill 4 holes to correspond with the positions of the holes in the wall bracket. (Note: the bracket can be mounted on other secure structures, but fixings included are only suitable for masonry anchoring.) Ensure the holes size is suitable for the plastic masonry anchors included. Insert the plastic anchors into the wall. (Image 1, right)

 Image 1

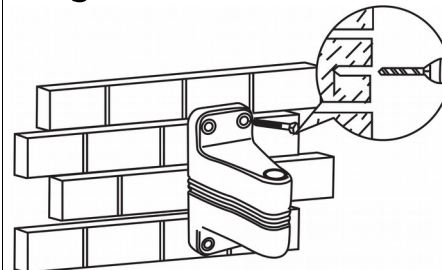


2) Fix the bracket to the wall using the bolts provided. (Image 2, below)

 Image 2

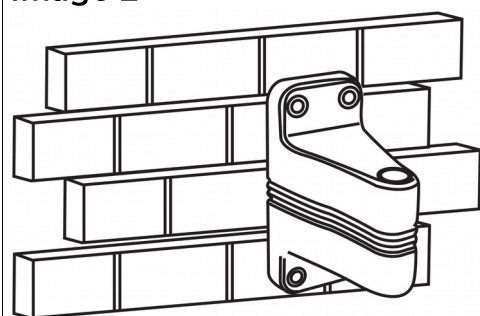

3) Align the hose reel with the vertical holes in the bracket and insert the pivot bar through the bracket and reel. (Image 3, right)

 Image 3

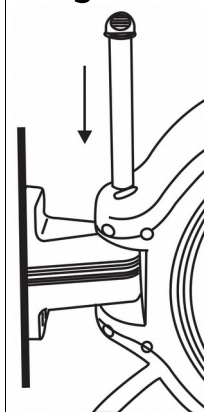

Maintenance

- Always keep the hose clean after use.
- It is recommended to turn off the water flow at your garden tap before retracting the hose.
- When not in use for a long period, it is advisable to store your hose in a covered area.

Specifications

Hose Length	Hose Size	Hose Material	Working Pressure	Inner Fitting
20m	1/2"	PVC	8Bar	3/4" BSP

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>