



## 240V Impact Wrench CTIMPWRNCHA Quick Start Guide

### Specifications

Power supply	230V~/50Hz
Power input	900W
No load speed	2300RPM
Torque	300N.M
Square drive	1/2" (13mm)
Net weight	3.89kg

### Safety Instructions

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury. Save a copy of these instructions for future reference.

#### Work Area

- Keep your work area clean and well lit.
- Cluttered benches and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or rubbish.
- Keep bystanders, children, animals and visitors away while operating the power tool. Distractions can cause you to lose control.

#### Electrical Safety

- Don't expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord to carry the tool or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- When operating a power tools outside, use an outdoor extension cord marked "W A" or "W". These cords are rated for outdoor use and reduce the risk of electric shock.

## Personal Safety


- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tools while tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- Avoid accidental starting. Be sure that the switch is off before plugging in. Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.
- Remove adjusting keys or switches before turning the tool on. A switch or a key that is left attached to the tool or rotating part may result in personal injury. Please check the sockets carefully before using.
- **Use safety equipment!** Always wear eye protection, dust mask, non-skid safety shoes, hard hat and hearing protection must be used for appropriate conditions.

## Tool Use, Maintenance and Care

- Use clamps or other methods to secure and support the workpiece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.
- Do not force tool. Use the correct tool for your application. The correct tools will do the job better and safer, at the rate for which it is designed.
- Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired or replaced.
- Disconnect the plug from the power source before making any adjustments, changing accessories or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
- Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- Check for misalignment or binding of moving parts, breakage of parts or any other condition that may affect the tools operation. If damaged, have the tool serviced and tested before use. Many accidents are caused by poorly maintained tools.
- Use only accessories recommended by Kogan.com for your model. Accessories that are suitable for one tool may become hazards when used with another tool.
- **Warning:** Please stop the tool when you want to change the running direction and change by pressing the switch once all movement has ceased.

## Applications

This tool can be used for changing tyres, shock absorber replacement, exhaust system work, lawn mower repair and small engine work, as well as assembling and disassembling nuts and bolts.

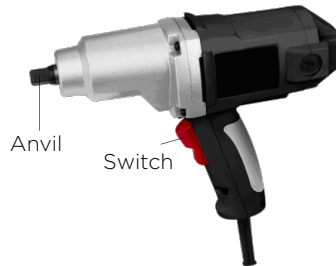

## Switch

Your tool starts and stops by depressing and releasing the rocker switch.

- Press the lower portion of the switch to go forward (clockwise).
- Press the upper portion of the switch to go reverse (anti-clockwise).



## Installing/Removing sockets or Accessories

- To install a socket into the anvil, align the hole of the socket with the anvil and push down firmly until it locks into place.
- To remove a socket from the anvil, pull the socket back out firmly.



**If you experience any issues or have any questions, please contact the Kogan customer support team.**