
 


 








# ERGO LUX

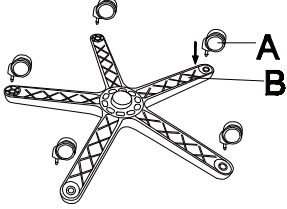
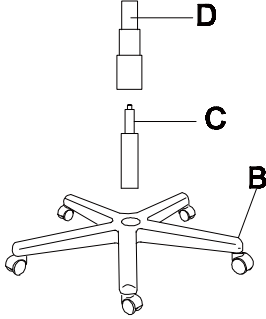
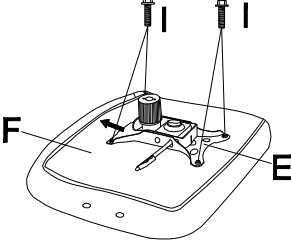
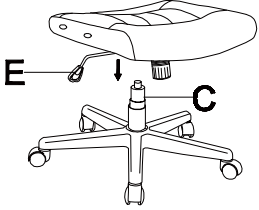
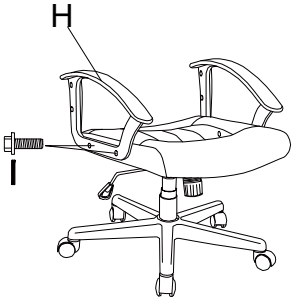
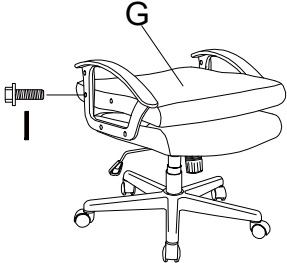
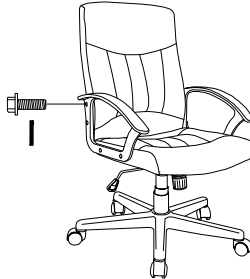
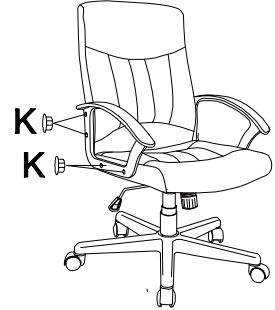
## Ergolux Princeton High Back Padded Office Chair ELCHOFFPRIA

### Parts

Lay all components out on a clean floor and ensure all parts are included. If any pieces are missing, check all packaging thoroughly, then contact the Kogan customer support team.

 <b>Ax5</b>	 <b>Bx1</b>	 <b>Cx1</b>	 <b>Dx1</b>
 <b>Ex1</b>	 <b>Fx1</b>	 <b>Gx1</b>	 <b>Hx1(L&amp;R)</b>
 <b>M6x20mm Ix12</b>	 <b>M4 Jx12</b>	 <b>Kx8</b>	

### Assembly

<b>1</b> 	<b>2</b> 	<b>3</b> 	<b>4</b> 
<b>5</b> 	<b>6</b> 	<b>7</b> 	<b>8</b> 

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>