

# ESTELLE

## 2200W Quiet Hair Dryer ESSLTHAIDRA Quick Start Guide


### Safety Warnings

- Do not use this product in the bath or shower.
- Do not use this product near a bathtub, washbasin or other products that contain water.
- If this product is being used in the bathroom, unplug it after use. It is still dangerous when in close proximity to water, even when turned off.
- Make sure the handle is fully straightened when hanging the dryer on a wall, and make sure that water cannot be accidentally splashed onto it from a bath or shower.
- Do not insert metal objects into the air inlet or outlet, as this can lead to an electric shock. Never block the air inlet or outlet.
- Please do not use this product for any purpose other than that which it is designed for.
- Do not use this hair dryer on a wig.
- When the product is connected to the power supply, do not leave it unattended.
- Close supervision is needed for children, disabled and/or incapacitated persons.
- Do not use any accessories or parts that have been supplied by other manufacturers.
- The hair dryer will automatically power off if it gets too hot. If this occurs, unplug the dryer from the power supply for a few minutes to let it cool down.
- Upon first use, a strong smell may be noted from the protective oils burning off on the heating wire. This is perfectly normal and should be gone by the second or third use of the dryer.

### Electromagnetic Field

This product meets with all criteria associated with electromagnetic fields (EMF).

### Product Layout

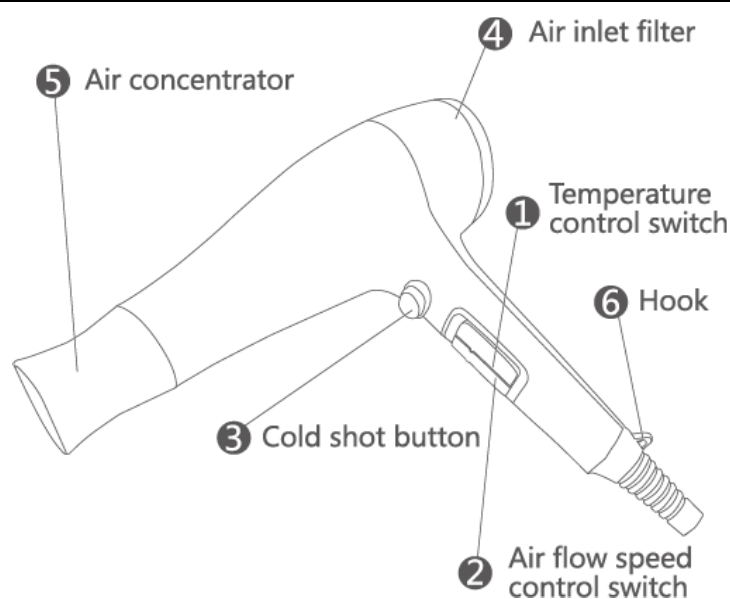

# Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact [Kogan.com](http://Kogan.com) support.

# Instructions for Use

1. Plug the dryer into a power socket.
  - Put the concentrator onto the hair dryer for precise hair drying. It will centralize the air flow onto the comb for styling. It is not recommended that this is used for regular hair drying.
  - Put the diffuser onto the hair dryer for doing hair treatments like curling.
2. Set the speed and heat settings as required.

SWITCH	SETTINGS	FUNCTION
Temperature	I	Blow dry hair gently
	II	Blow dry wet hair quickly
	III	Blow dry thick wet hair quickly
Wind Speed	0	On/Off Switch
	I	Gentle speed for hair styling
	II	Strong speed for blow drying hair quickly

3. Press the cool shot button '❄️' for a cold air blast.

**Air filter:** always make sure that the air filter is not blocked, as this may cause your hair dryer to malfunction. To keep the air inlet free of blockages, please clean all deposits off the intake cover on the back side.

## After Use

1. Turn the hair dryer off and unplug it.
2. Place the hair dryer on a heat-resistant surface until it cools down.
3. To clean this product, wipe it down with a damp cloth. Remove the concentrator or diffuser before cleaning.
4. Store the dryer in a safe, dry clean location, or store it on the hook to store by hanging.

# Troubleshooting

If the hair dryer doesn't work at all, please check the following suggestions.

Possible Cause	Possible Solution
The power socket may not be powered on.	Check to ensure that that power socket switch is turned on.
Hair dryer has cut out due to overheating.	Unplug the dryer for a few minutes to let it cool down.

If the hair dryer still isn't working after these issues have been checked, please contact the Kogan.com customer support team for assistance.