



## ENGLISH



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

### 1. Introduction

The FC 45 facial cleansing brush from offers you gentle, deep-pore facial cleansing. The facial cleansing brush not only cleans; it also improves circulation to the face.

### 2. Included in delivery

- 1 x Facial cleansing brush FC 45
- 1 x brushes
- 1 x these instructions for use
- 2 x AAA 1.5 V batterie

### 3. Signs and symbols

 
The following symbols are used in these instructions for use, on the packaging and on the type plate for the device and the accessories:

	<b>WARNING</b>	WARNING denotes danger with medium-level risk, which can lead to death or serious injury if ignored.
	<b>CAUTION</b>	CAUTION denotes danger with low-level risk, which can lead to minor or moderate injury if ignored.
	<b>NOTE</b>	Note on important information
		Observe the instructions for use
		Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
		Manufacturer
		This product satisfies the requirements of the applicable European and national directives.

### 4. Intended use

The device is only to be used on the human face (apart from the eye area). Do not use the facial brush on animals. The device is not suitable for children under 8 years. The device is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

### 5. Safety notes



#### WARNING

- Danger of suffocation by packaging material. Keep packaging material away from children.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.
- Do not allow children to play with the device.
- Store the device out of the reach of children.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.



#### Notes on handling batteries

- If your skin or eyes come into contact with battery fluid, flush out the affected areas with water and seek medical assistance.
- **Choking hazard!** Small children may swallow and choke on batteries. Store the batteries out of the reach of small children.
- Observe the plus (+) and minus (-) polarity signs.
- If a battery has leaked, put on protective gloves and clean the battery compartment with a dry cloth.
- Protect the batteries from excessive heat.
- **Risk of explosion!** Never throw batteries into a fire.
- Do not charge or short-circuit batteries.
- If the device is not to be used for a long period, take the batteries out of the battery compartment.
- Use identical or equivalent battery types only .
- Always replace all batteries at the same time.
- Do not use rechargeable batteries.
- Do not disassemble, split or crush the batteries.



#### ATTENTION

#### Risk of injury

Non-observance of the following information may result in personal injury or material damage. Do NOT use the device

- on broken skin.
  - on open wounds.
  - if you suffer from a skin disease or irritated skin.
  - immediately after sunbathing.
  - if you are taking medication that contains steroids.
- Only specialist personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. In the event of a fault or damage, have the device repaired by a certified specialist workshop.

### 6. Unit description



### 7. Initial use

#### 7.1 Inserting the brush

- Fix a brush onto the attachment at the top of the device.
- If you wish to remove the brush after use, pull it upwards.

#### NOTE

Replace the brushes every 4 months to ensure optimum results.

#### 7.2 Inserting the batteries

- Pull the underside of the battery compartment lid off from the bottom of the device.
- Insert the batteries included in the delivery into the battery compartment. Ensure when inserting the batteries that the correct polarity (+/-) is observed.
- Subsequently close the battery compartment lid carefully.

### 8. Operation

1. Moisten the brush with water. Never use the device with a dry brush as this can irritate the skin.
2. Apply the cleaning gel to your facial skin.
3. To switch the device off, hold down the On/Off button for one second. The brush will begin to rotate.
4. The device has both a fast and a slow speed setting. After switching on the device, the brush will first rotate on the slow speed setting. To switch between the fast and slow speed settings, hold down the on/off button briefly.
5. Now apply the device gently to your face and clean your facial skin using even movements to remove residue, dirt and dead skin cells. To ensure comfortable treatment, do not apply the rotating brush too firmly to the skin. Treat each section of skin for a maximum of 20 seconds only.

6. Switch off the device after use. To switch the device off, press and hold the On/Off button for one second.
7. Cleanse your face thoroughly with water to remove any residue from your skin.
8. Pat your skin dry with a towel and then apply a moisturising cream using even, circular movements.
9. The recommended application period per use is 1 minute. The device switches off automatically after 1 minute.

### 9. Maintenance and cleaning



#### ATTENTION

- Before cleaning the device, pull the brush upwards and out of the device. Clean the brush thoroughly with water after each use.
- Ensure that no water enters the hand-held device. If this should happen, reuse the hand-held device only when it has fully dried out.
- Protect the hand-held device from knocks, damp, dust, chemicals, marked temperature fluctuations and nearby sources of heat (ovens, heaters).
- Clean the unit after use with a soft, slightly moistened cloth. In case of more extreme soiling you can also moisten the cloth with mild soapy water. Do not use any abrasive cleaning products.

### 10. Replacement parts and wearing parts

Replacement parts and wearing parts are available from the corresponding service address (according to the service address list). Please state the corresponding order number. Spare brushes: 605.51

### 11. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal. The empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries.

The codes below are printed on batteries containing harmful substances:  
Pb = Battery contains lead,  
Cd = Battery contains cadmium,  
Hg = Battery contains mercury.

