

kogan

UltraFreeze Ice Maker

KA19LICEMKA

USER MANUAL



Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact Kogan.com support.

Table of Contents

Safety & Warnings.....1
 Overview.....1
 Operation.....2
 Cleaning & Care.....3
 Troubleshooting.....4


Safety & Warnings

- Read all instructions before using the appliance and retain for reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outside of indoor household use as described in this manual.
- Do not use with an extension cord unless necessary, and if so, ensure it is suitably rated and it is handled safely as is the product’s own power cord:
- Do not allow the power cord to be exposed to water, heat, direct sunlight or overhang where it can be pulled or otherwise be damaged or pose a hazard.
- This appliance contains no user-serviceable parts. If it suffers any failure or damage, cease usage and contact Kogan Support after consulting the Troubleshooting section of this manual.
- Do not touch the evaporator while making ice to avoid frostbite.
- Unplug while not in use.
- Never store or use gas and other flammable articles near the ice maker.

Overview


Main product

1)	Top lid
2)	Evaporator
3)	Air outlet
4)	Viewing window
5)	Ice tray
6)	Ice shovel
7)	Ice basket
8)	Ice scoop
9)	Control panel
10)	Max level indicator
11)	Water reservoir
12)	Drain plug
13)	Infrared LED
14)	Infrared receiver

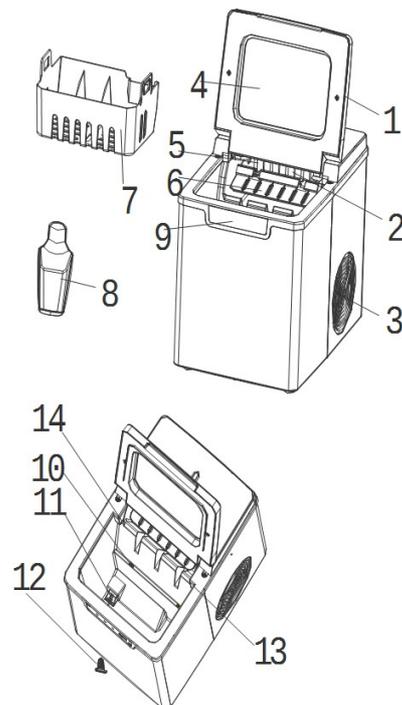

Control panel

ON/OFF	Start or stop appliance.
ICE	Blinks in standby mode, solid in working mode
ICE FULL	Lights up when ice basket full
ADD WATER	Lights up when water reservoir empty

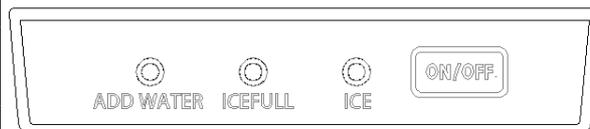

Specifications

Power source	Rated power	Refrigerant	Foaming agent
220-240V/50Hz	105W	R134a/68g	C5H10
Net weight	Housing	Size (D x W xH)	
9.03kg	ABS	348*248*295mm	

Operation

Before first use

1. Unpack the appliance, then check to ensure that all the accessories are included. If not, contact Kogan Support.
2. Install the ice maker on stable, level surface with sufficient ventilation (at least 25cm), far from heat sources such as ovens, heaters and corrosive gases to ensure good operation.
3. The ice maker cabinet should never exceed 45°. Do not turn upside down. This can cause the compressor or refrigerating system to operate incorrectly. Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported (at least 30 minutes). Before using the ice maker for the first time, please wait for 2 hours after installation.

NOTES:

- Clean before first use. (See “Cleaning & Care”)
- Do not fill the water reservoir with hot water. This may damage the ice maker. It is best to fill the water reservoir with water of room temperature or lower.
- Do not use the appliance in very cold environments (lower than 5°C).

How to use

1. Ensure that the drain plug at the bottom of water reservoir is closed well.
2. Plug the ice maker into the wall outlet: the “Ice” indicator will blink.
3. Open the top lid and remove the ice basket.
4. Fill the water reservoir with drinking water.
5. Replace the ice basket and close the top lid.
6. Press “On/Off” and the “Ice” indicator will become solid.
7. The ice-making cycle will last approximately 7-15 minutes, depending on the ambient temperature and water temperature.
8. The ice-making cycle starts with water being pumped into the ice tray situated below the evaporator. Over the next 7-15 minutes ice forms on the evaporator. Once this has completed, the ice tray will tilt backwards and the

remaining water in the ice tray is drained back into the water reservoir. The ice cubes are then dropped from the evaporator and pushed forward into the ice basket by the ice shovel. The ice tray will automatically move back into position under the evaporator and start the next cycle.

9. The “Ice Full” indicator will light up when the ice basket is full and the ice maker will stop the ice-making cycle automatically. Gently remove the ice from the ice basket with the ice scoop. About 5 seconds later, the ice maker will restart its ice making function automatically.

10. The “Add Water” indicator will light up when the water reservoir is out of water and the ice-making cycle will stop automatically. At that time, remove the ice basket and add water to the water reservoir, and then press “On/Off” again to restart the ice-making cycle.

11. When the desired amount of ice has been made, stop the ice making cycle by pressing “On/Off” and unplug the unit from the wall outlet.

12. Open the top lid and transfer the ice to a freezer.

Note: The ice will last in the ice maker for up to 18 hours, depending on ambient temperature.

13. Allow the ice maker to reach room temperature.

14. It is best to replace the water once a week. Empty the water reservoir if the ice maker will not be used for a long time.

Cleaning & Care

To keep your ice tasting fresh and your ice maker looking great, it is recommended to clean the ice maker once per week.

1. Stop the ice-making cycle by pressing “On/Off”, unplug the ice maker from the wall outlet and allow it to warm up to room temperature.

2. If residual water is found in the ice tray, gently push the ice tray back so that all water drains into the water reservoir.

3. Move the appliance 75mm away from the working table and open the drain plug to drain out excess water (see images below).

4. Remove the ice basket.



5. Clean the ice maker interior with a soft cloth soaked with warm water and vinegar, then rinse with clean water and then drain all the water.

6. Replace the drain plug firmly. Wash the ice basket and ice scoop in warm soapy water. Rinse and dry.

7. Clean the exterior of the ice maker with a soft damp cloth. Use a mild dishwashing soap, if necessary.

Note:

- Do not use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
- Do not clean the evaporator.
- Please empty the water reservoir and dry it for storage if the ice maker is not used for a long time.

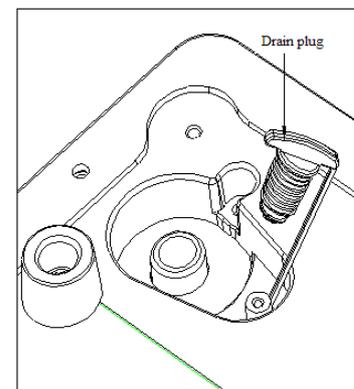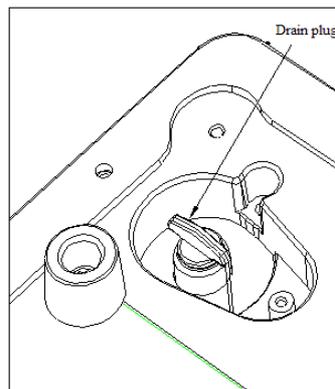

Troubleshooting

Issue	Possible Cause	Steps to Resolve
“Add Water” indicator lit	<ol style="list-style-type: none"> 1. Insufficient water 2. Water screen at the bottom of water reservoir blocked. 3. Pump malfunction. 	<ol style="list-style-type: none"> 1. Refill water reservoir and restart 2. Clean 3. Contact Kogan Support
“Ice Full” indicator lit	<ol style="list-style-type: none"> 1. Ice basket is full 2. Infrared LED and receiver not working 	<ol style="list-style-type: none"> 1. Remove ice from ice basket 2. Clean infrared LED and receiver and restart ice maker
“Add Water” and “Ice Full” indicators lit	The ice tray is not in the right position	<ol style="list-style-type: none"> 1. Check if the ice tray is blocked by something 2. Unplug, reconnect and restart appliance
Ice collects together	Making ice takes too much time	Stop making ice and restart the ice-making cycle after the ice melts
	Water temperature too low	Refill, ensure water is between 8-25°C
Ice-making cycle seems normal but no ice produced	Ambient temperature or water temperature too high	Restart in environment with ambient temperature less than 32°C and refill with cold water
	Refrigerating system leaking	Contact Kogan Support
	Refrigerating system blocked	Contact Kogan Support
Poor ice-making results	<ol style="list-style-type: none"> 1. Poor heat dissipation. 2. Water temperature too high. 3. Ambient temperature too high. 	<ol style="list-style-type: none"> 1. Leave at least 25cm clearance on all sides for proper ventilation. 2. Refill, ensure water is between 8-25°C 3. Restart in environment with ambient temperature less than 32°C

If the above steps do not resolve an issue you are facing, contact Kogan Support.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>