




2000W Ceramic Fan Heater KA20WCRFNHA User Manual

Please read these instructions carefully, and keep a copy handy for future reference.

Safety Warnings

- In order to avoid overheating, do not cover the heater.
- If the power supply cord is damaged, the heater must not be used until it has been replaced by a Kogan.com technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the heater.
- The heater must not be located directly below a power socket.
- Do not use the heater in the immediate surroundings of a bath, shower or swimming pool.
- Some parts of this heater can become very hot and cause burns. Particular attention should be given when children, animals or vulnerable people are present.
- This product should not be disposed of with the regular household waste at the end of its service life. Please contact your local council for information regarding the correct disposal methods for electrical goods in your area.

Product Layout

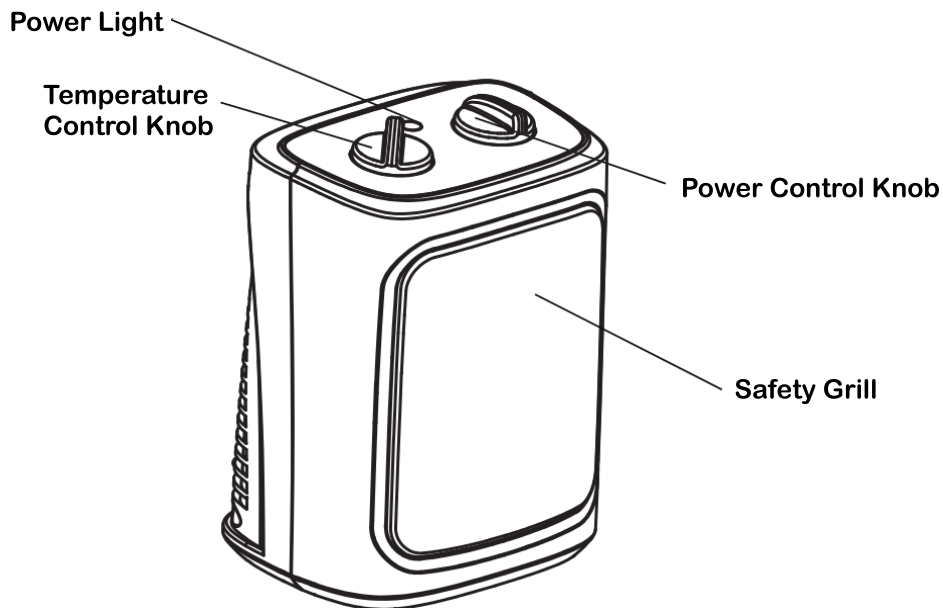

Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact Kogan.com support.

Operating Instructions

Check before turning heater on

Check that the power cord is in good condition.

Check that there are no flammable materials touching the heater.

Place the heater on a flat surface. Uneven surfaces may cause turnover switch to trigger off incorrectly as it may incorrectly sense the heater being tilted too much.

Temperature control knob

Plug the heater into a power socket and turn it on. Then turn the temperature control knob clockwise until you hear a click sound. Adjust the temperature control knob to the desired temperature.

Power selection knob

Turn the power selection knob to your choice of 3 functions;

Fan only, Low (1200W) or High (2000W).

Turning the heater off

1. Turn the power selection knob to the OFF position.
2. Turn the temperature control knob anticlockwise to the initial position.
3. Remove the power plug from the wall socket and store once the heater has cooled down.

Safety Protection

Overheat Protection: when the temperature of the heater gets too high due to an abnormal environment condition or improper use, the thermostat device can automatically cut the power to the heater. Once the heater has cooled down sufficiently, normal usage can resume.

Inversion Protection: When the heater has tipped over or been tilted too far, the safety system will automatically cut the power to the heater. Once the body of the heater has been placed upright again, normal usage can resume.

Power Specifications

Power supply: AC 220-240V ~ 50Hz

Troubleshooting

If the heater is not operating correctly, first consult with this list. If the problem persists, please contact the Kogan.com customer support team.

Problem	Possible Cause	Possible Solution
Once power has been engaged, the power indicator light does not light up and the heater does not work.	Plug may not be plugged into the wall socket securely.	Check that the plug has been inserted correctly.
	The temperature control knob has not been turned.	Check that the temperature control knob has been turned beyond the ON position.
The heater suddenly stopped during heating.	The temperature has exceeded the threshold of the thermal cut-off.	Allow the heater time to cool down before restarting it.