

kogan

2 Slice Smart Toaster KA2SMTTOASA

Please read these instructions carefully before using the toaster.

Rated Voltage: AC 220-240V, 50Hz


Rated Power: 1000W

Safety Warnings

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Touch handles and knobs only.
- To protect against electrical shock, do not immerse the cord, plug or any other part of the toaster into water or any other liquids.
- Close supervision is necessary when used by or near children.
- Unplug the unit from the power outlet when not in use or before cleaning.
- Do not operate with a damaged plug or power cord.
- Do not let the cord hang over the edge of a table or bench, nor touch a hot surface.
- Do not place on or near a hot gas or electric burner, or inside a heated oven.
- Oversized food, metal foil packages or utensils must not be inserted into the toaster, as they may cause fire or electric shock.
- Bread may burn, therefore toasters must not be used near or below curtains or other combustible materials.
- Do not attempt to dislodge food while the toaster is in operation.
- Take care to remove toast out of the toaster after cooking so as to avoid injuries.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not use the toaster outdoors.
- This toaster is designed for use in a household. It is not intended for use as part of a catering business.
- Never use the toaster with wet hands.

Product Layout

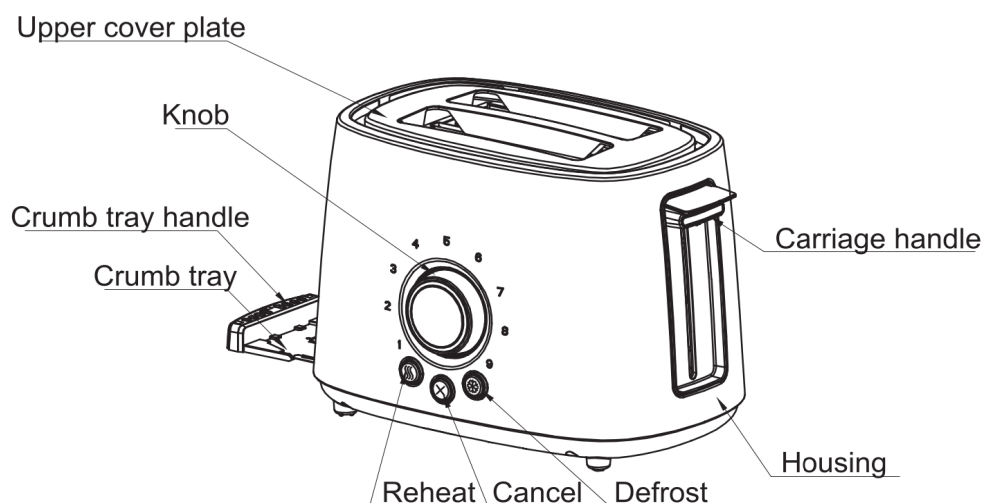

Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact Kogan.com support.

Before First Use

The product will have protective residue on the heating element for shipping. Upon first use, the heating element may emit an odour. This is normal and will not occur after several times of use. Before you toast your first piece of bread, it is highly recommended that you operated the appliance as described below, but without using any bread.

Operation

1. Ensure that the crumb tray is in position at the bottom of the toaster.
2. Put a slice of bread into the bread slot. You can insert two pieces at a single time (on per slot).
3. Plug the power cord into a power outlet.
4. Set the colour control knob to your desired toast colour. There are 9 positions, with the lowest being white and the highest being extremely dark. For toast that is at a golden colour, set the control to 5, then adjust up or down as desired for future toast.
Note: if you are cooking many pieces of toast consecutively, subsequent pieces of toast will be darker than the first pieces as the element will not need to heat up and will start toasting the bread immediately.
5. Press the carriage handle down vertically until positioned into place. The CANCEL indicator will light up and the toaster will commence toasting. Once the bread has been toasted to the set amount, the carriage handle will automatically spring upwards, at which point you can remove the toast from the slots.
Note: if the toaster is not plugged in or receiving power, the carriage handle will not lock into position when pushed down.
6. During the toasting process, you can observe the colour of the toast. If it reaches your desired level of toasting, you can press the CANCEL button and the toasting will be cancelled. The carriage handle will spring up and you can remove the toast.
7. If you are removing your bread from a freezer prior to cooking, you can press the DEFROST button prior to pushing the carriage handle down. This will cause the toaster to compensate for the frozen bread, resulting in it still being toasted to your desired level.
8. If you wish to simply reheat cold toasted bread, press the carriage handle down, then press the REHEAT button. The REHEAT indicator will light up, and the carriage handle will spring up after a preset reheat time.

CAUTION

- If the toaster starts to smoke, press the CANCEL button immediately to stop the toasting.
- Avoid toasting food with runny ingredients such as butter.
- Never attempt to remove bread jammed in the slots without unplugging the toaster from the power outlet first. Take care to not damage the internal mechanisms or heating elements when removing the bread.

Cleaning and Maintenance

- Disconnect the power from the power outlet before cleaning.
- Wipe the outside of the toaster with a soft dry cloth once it has cooled down. Never use metal polish or detergent on the body of the toaster.
- Pull the crumb tray out from the bottom of the toaster using the crumb tray handle, and empty it. If the toaster is used frequently, then the accumulated bread crumbs should be removed at least once a week. Make sure the tray is fully closed before using the toaster again.
- When not in use or in storage, the power cord can be wound under the bottom of the toaster.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>