

kogan

**Kitchen Appliance Saver Pack
Kettle**

KA4IN1APSET

USER MANUAL




IMPORTANT SAFEGUARDS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the kettle & base) corresponds with the voltage in your home. If this is not the case, contact the Kogan customer support team. Do not use the kettle.
- Do not let the cord hang over the edge of a table or counter, or rest on a hot surface.
- Do not place on or near a hot gas stove or electric burner, or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children. This will prevent the kettle from overturning and prevent damage or injury.
- To protect against fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle into water or any other liquids.
- While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
 - Be careful when refilling when the kettle is hot.
 - Close supervision is necessary when any appliance is used by or near children.
 - Do not touch the hot surface. Use the handle or the button.
 - The attached base can not be used for other than intended use
 - Extreme caution must be used when moving an appliance containing hot water.
 - The appliance is not a toy. Do not let the children play it.
 - The kettle is for household use only. Do not use outdoors.
- The use of accessory attachments, that are not recommended by Kogan, may result in fire, electric shock or personal injury.
 - Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
 - To disconnect, turn any control to “off,” then remove plug from wall outlet.
 - If the supply cord is damaged, it must be replaced by a Kogan technician in order to avoid a hazard.
 - Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
 - Do not use the appliance for other than intended use.
 - The kettle can only be used with the stand provided.
 - If the kettle is overfilled, boiling water may spill out the top.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Save these instructions.

DESCRIPTION

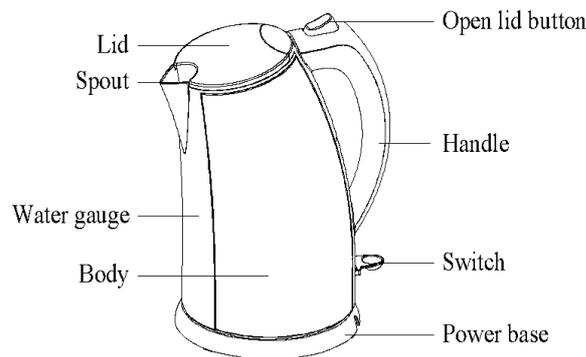

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water. Wipe the surface with a damp cloth.

NOTE: the maximum capacity of the kettle is 1.7L.

OPERATION OF YOUR KETTLE

1. To fill the kettle, remove it from the power base and open lid by pressing open lid button, fill with the desired amount of water, and then close the lid. Alternately, the kettle may be filled through the spout. The water level should not exceed the max mark, nor sit below min level. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

2. Position the kettle on the power base.

3. Connect the plug into a power outlet. Press down the switch, the indicator will light up. Then start to boil the water, the kettle will switch off automatically once the water has boiled.

NOTE: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.

4. Lift the kettle from the power base and then pour the water.

NOTE: operate carefully when pouring the water from your kettle as boiling water may result in scalding. Don't open the lid while the water in the kettle is hot.

5. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.

2. Wipe the appearance of body with a mild and damp cloth or cleaner. Never use a poisonous or abrasive cleaner.

3. Remember to clean the filter with a damp cloth at intervals. The filter can be detached for easier cleaning simply by pulling it upward. To attach, press down the filter from the two tubes on the spout's side position, making sure the groove of the front end of filter is supported.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent gloss loss.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in household tap water may form scale on the bottom of kettle, therefore causing less efficient operation. You can use a commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow the below instructions using white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.

2. Discard the mixture in the kettle, then fill the kettle with clean water, boil and then discard the water. Repeat this several times until the odour of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal centre.

