

kogan

**Kitchen Appliance Saver Pack
Hand Mixer**

KA4IN1APSET

USER MANUAL




IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed:

1. Read all instructions.
2. Before use, check that the voltage of your wall outlet corresponds to the one on the rating plate which is on the bottom of the appliance.
3. Do not operate the appliance with a damaged cord, after a prior malfunction or if the unit has been damaged in any manner.
4. Do not let cord hang over edge of table, counter or rest on a hot surface.
5. Do not immerse power cord or the body of mixer into water, as this may cause an electric shock.
6. If the supply cord is damaged, it must be replaced by a qualified Kogan technician in order to avoid a hazard.
7. Close supervision is necessary when your appliance is being used near children or elderly people.
8. Do not place an appliance on or near a hot gas stove or on a heated oven.
9. Never eject beaters or dough hooks when the appliance is in operation.
10. Do not leave mixer unattended while it is operating.
11. Unplug from outlet while not in use, before putting on or taking off parts, and before cleaning.
12. The use of attachments not recommended or sold by Kogan may cause fire, electric shock or injury
13. Remove beaters from mixer before washing.
14. Always check that the control is on the “0” position before plugging cord into wall outlet. To disconnect, turn the control to “0” position, then remove plug from wall outlet.
15. Avoid contacting with moving parts.
16. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.
17. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. Switch off the appliance before changing accessories or approaching parts which move in use.
20. Do not use outdoors.
21. Save these instructions.

KNOW YOUR MIXER

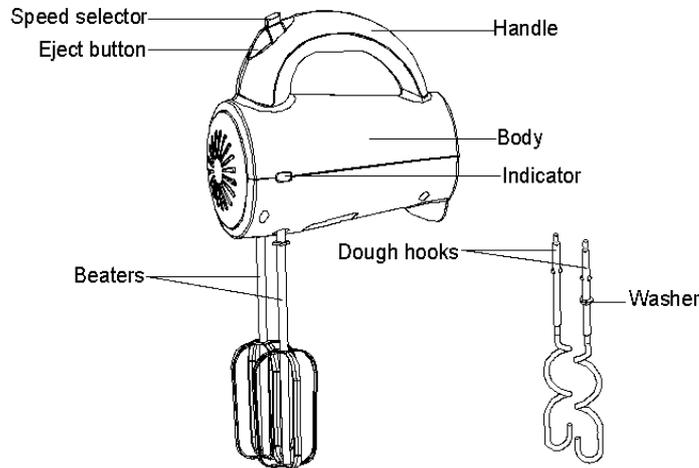

BEFORE FIRST USE

Remove any packaging and disassemble any detachable parts. Clean the dough hooks and beaters with warm water and dishwashing liquid. Before assembling the mixer, be sure the power cord is unplugged from the power outlet and the speed selector is on the “0” position.

USING YOUR MIXER

1. For the first use, cleaning the dough hooks and beaters. Before assembling the mixer, be sure the power cord is unplugged from the power outlet and the speed selector is on the “0” position.
2. Assemble proper beaters or dough hooks into mixer.
Note: for dough hooks, the one with washer can only be inserted into the big socket and the other one can only be inserted into small socket. The two dough hooks cannot be inserted in reverse. Beaters can be inserted in either socket, as they are identical.
3. Ensure that the unit is at the “0” setting, then plug in the power source. The indicator will be illuminated, it will be extinguished only after unplugging the power source.
4. Turn the speed selector to your desired setting. There are 5 settings.
5. The max operation time per time shall not exceed 3 minutes. Minimum 20 minutes rest time must be maintained between two continuous cycles. When mixing food, we suggest the speed selector first use a low speed and then use high speed to prevent the food from splashing.

6. When mixing is completed, turn the speed selector to “0” position, then unplug the cord from power outlet.

7. If necessary you can scrape the excess food particles from the beaters or dough hooks with a rubber or wooden spatula.

8. Hold the beaters/dough hooks with one hand and press the Eject button firmly down with the other hand, then remove the beaters/dough hooks

Note: Remove the beaters/dough hooks only at the “0” speed setting.

Note: During operation, prior to positioning the mixer vertically make sure the speed selector is on “0” setting.

Cleaning and Maintenance

1. Unplug the appliance and wait for it to cool down completely before cleaning.

2. Wipe over the outside surface of the mixer with a dampened cloth and polish with a soft dry cloth.

3. Wipe any excess food particles from the power cord.

4. Wash the beaters and dough hooks in warm soapy water and wipe dry. The beaters and dough hooks may be washed in the dishwasher.

Caution: the mixer cannot be immersed in water or other liquid.

COOKERY TIPS

1. Refrigerated ingredients, ie. butter and eggs should be at room temperature before mixing begins. Set these ingredients out ahead of time.

2. To eliminate the possibility of shells or deteriorated-off eggs in your recipe, break eggs into separate container first, then add to the mixture.

3. Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe. Fold into dry ingredients only until just combined. Always use the low speed.

4. Seasonal temperature changes, temperature of ingredients and their texture variation from area to area all play a part in the required mixing time and the results achieved.

5. Always start mixing at slow speeds. Gradually increase to the recommended speed as stated in the recipe.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.