

# kogan

**XtremeSteam Premium  
2200W Digital Iron**

**KA9DIGIRONA**

**USER MANUAL**



# Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact [Kogan.com](http://Kogan.com) support.


## Table of Contents

Safety & Warnings.....	1
Product Overview.....	2
Operation.....	2
Cleaning and Care.....	4

## Safety & Warnings

- Use the iron only as described in the instruction manual.
- Do not leave the iron unattended while connected to the mains supply or on an ironing board.
- Keep the iron out of reach of children.
- Do not let cord touch hot surfaces.
- Burns can occur from touching hot metal parts, hot water or steam.
- To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
- The iron must be used and rested on a stable surface.
- Unplug the iron from the mains electrical supply:
  - 1) Before cleaning
  - 2) While filling with water or emptying the water tank
  - 3) Immediately after use
- Never operate the iron with damaged power cord or plug, if it is leaking, or if it has fallen or been damaged in any way. Do not disassemble the iron.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the iron experiences any fault or damage, it must be serviced as instructed by Kogan.com.

# Product Overview

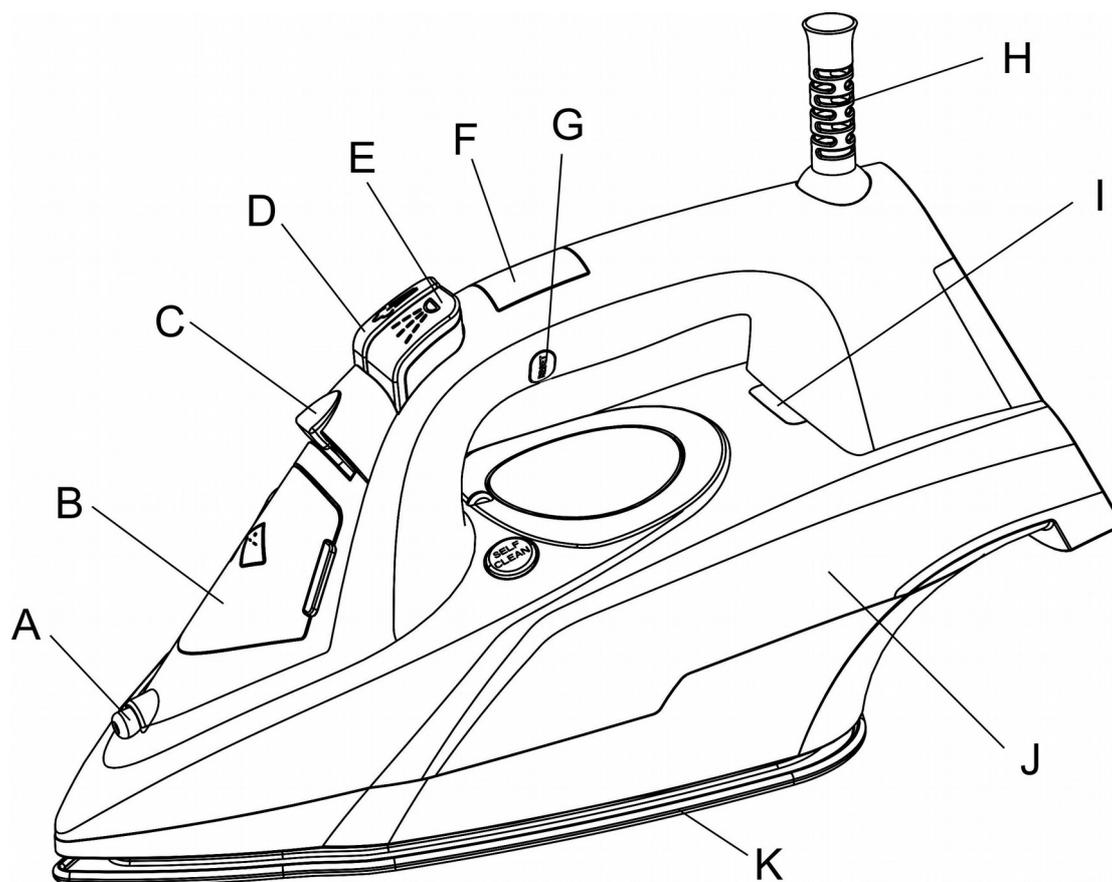

A	Spray Nozzle	E	Spray Button	I	Power Light (red)
B	Water Filling Inlet	F	LCD Screen	J	Water Tank
C	Steam Control Knob	G	Temperature Control	K	Iron Plate
D	Steam Burst Button	H	Power Cord Protector		

## Operation

### Before first use

- It is normal for small amount of smoke to be produced the first time: this will quickly dissipate.
- When using the steam function for the first time, there may be debris from the manufacturing process. Allow to clear before applying steam to laundry.


### Filling with water

- Ensure both the Steam Control Knob and LCD screen are in “OFF” position.
- Hold the iron upright so that the water-filling inlet is in a horizontal position.
- Fill with water through Water Filling Inlet until the water reaches the “MAX” mark indicated on the side of the iron. Do not fill above this mark.

## Setting temperature

Refer to ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

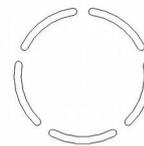 <b>OFF</b>	 <b>ACRYL</b>	 <b>NYLON</b>	 <b>SILK</b>	 <b>POLY</b>	 <b>BLEND</b>
 <b>WOOL</b>	 <b>COTTO</b>	 <b>JEANS</b>	 <b>LINEN</b>	 <b>PAUSE</b>	

## Steam ironing

Place the iron in a vertical position, connect to power and press on the Temperature Control to select the low fabric setting.

Set the Temperature Control to the “high heat” marking. The words on the LCD screen will blink to indicate that the iron is heating up.

When the blinking stops, the set temperature has been reached and the iron is ready to use.

During ironing, the words on the LCD screen automatically switches between blinking and not blinking as the thermostat maintains the set temperature (you may continue ironing during this process).

Turn the Steam Control knob to the required position.

Steam is produced as soon as the iron is held horizontally.

## Spray

Press the spray button to spray water on clothes as required.

Note: When using the water spray function, ensure that there is enough water in the water tank. You may have to pump the spray button several times at first time you use the iron in order to start the spraying function.

## **Burst / vertical steam ironing**

Press the Steam Burst button to generate a powerful burst of steam that penetrates fabric and smoothes the difficult creases. Wait for a few seconds before pressing again.

By pressing the Steam Burst button at intervals, you can also iron vertically (curtain, hung garments, etc).

Note: The burst steam function can only be used at high temperature. Stop use of this function when the words on the LCD screen blink, then start ironing again only after the words stop blinking.

## **Dry ironing**

To iron without steam, simply leave the Steam Control knob “OFF” while ironing as per the “Steam ironing” section.

## **Anti-calc system**

A special filter inside the water tank softens the water and prevents scale build-up on the iron plate. The filter is permanent and does not need replacing.

Note: Use tap water only. Distilled and demineralised water makes the anti-calc system ineffective by altering its physicochemical characteristics.

## **Anti-dripping system**

This iron is equipped with drip stop function: the iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the iron plate.

With the anti-dripping system, you can perfectly iron even the most delicate fabrics.

## **Auto-shutoff**

An electronic safety device will automatically switch the heating element off if the iron has not been moved more than 30 seconds in a horizontal position. If in a vertical position, this will happen after 8 minutes. To indicate that the heating element has been switched off, the LCD screen will start blinking.

When iron is picked up again, the LCD screen will stop blinking. The words on the LCD screen will blink to indicate that the iron is heating up again.

When the blinking stops, the iron is ready for use.

## **Cleaning and Care**

After use, lift the iron with the Water Filling Inlet downwards to empty the remaining water from the Water Tank.

Then, plug back in plug into the socket, and set the Temperature Control Dial to “MAX” for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>