

kogan

Viper AR Gaming Gun KAARGNVIPRA User Guide

Warning: Not suitable for children under 3 years of age.

Compatible with Android 4.4.4 and later and iOS 7.0 and later.

1. Before first use, scan the QR code below to download the app.
(Note: The apps are also available in the Play Store and App Store.)



Android Play Store: AR Gun




iOS App Store: AR Gun Pro

2. Open the battery cover and install 2 AAA batteries (not included), then close the battery cover.
(Note: Remove batteries when the Viper AR Gaming Gun will not be used for a long time.)
3. Activate the Bluetooth function on your mobile device and open the app.
4. Hold the trigger to turn on the Viper AR Gaming Gun.
5. When the trigger is pulled, the Viper AR Gaming Gun will pair to your mobile device automatically. Place the mobile device in the phone holder and select a game on the phone screen.

IMPORTANT: Ensure your device is securely in the holder or it may be damaged.

6. To switch to another mobile device, press the gun icon on the mobile device screen.
(Note: If no mobile device is paired, the Viper AR Gaming Gun will turn off after 1 minute.)
7. Press joystick to jump.

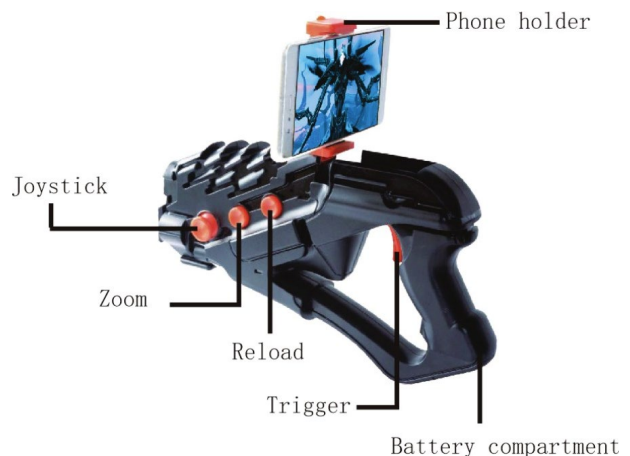

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>