

# kogan

**Ez-press Coffee Machine**

**KACOFNESDA**

**USER MANUAL**



---


## IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from electrical outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Only fill the tank with clean and cold water. Never fill the tank with mineral water, milk or other liquids.
13. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
15. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Do not leave the appliance on unattended.

17. The environment temperature of operating or storing should be more than 0°C.
18. Do not leave the appliance exposed to atmospheric conditions (sun, rain etc..)
19. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
22. Do not let the coffee maker operate without water.
23. Do not use outdoors or for commercial purpose.
24. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
25. Save these instructions.

# KNOW YOUR COFFEE MAKER

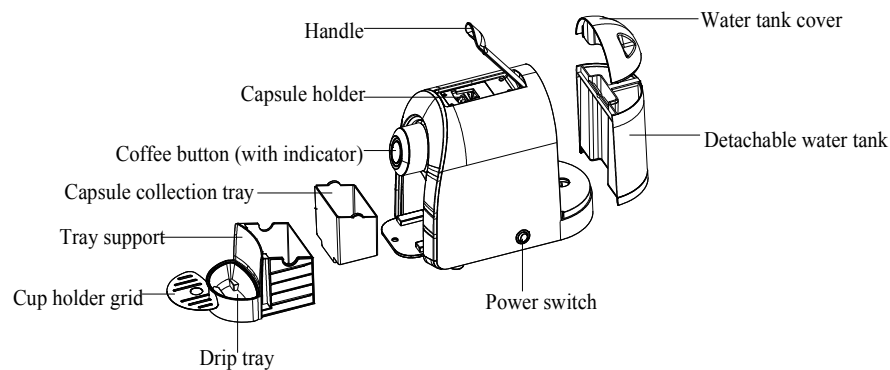

## FOR THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank, then lift the handle and open it. Insert the empty capsule supplied then close the handle. Place a container on the cup holder grid, insert the plug, turn on the power switch and the red indicator will light. Wait until the blue indicator is lit, then press the coffee button and the nozzle starts to let out water and allow it flow for 2 minutes. The flow will not stop automatically, so stop it by pressing the coffee button again. Then discard the water. Clean all detachable parts thoroughly with warm water. Keep the empty capsule for subsequent washing operations.

**NOTE:** While pressing down the coffee button, the machine may produce a pumping sound, this is normal. The sound tells you that water is pumped for brewing coffee.

## USING YOUR COFFEE MAKER

1. Fill the detachable water tank with drinking water. The water level should not exceed the MAX level marked on the tank.
2. Open the handle by lifting it and insert a coffee capsule. Close the handle by pushing it down directly.
3. Plug the power cord into the outlet. Turn on the power switch and the red indicator will turn on, it will not extinguish until you turn off the power switch. Wait until the blue indicator turns on.

**CAUTION:** During brewing, never open the handle. Otherwise the coffee capsule will be expelled into the collection tray.

4. Position a cup on the cup holder grid. Make sure the drip tray is assembled in place.
5. Once the blue indicator lights up, press the coffee button, the coffee will flow out from the coffee nozzle. Once the desired quantity has been reached, press the coffee button again to stop flowing.

**NOTE:** The flow will not stop automatically, if want to stop it press the button again.

**NOTE:** We recommend the best coffee capacity is 30ml for each coffee capsule.

6. Once you have made coffee, always expel the spent capsule. Capsules are automatically expelled into the capsule collection tray by opening the handle.

**Caution:** Never open the handle during brewing cycles.

7. If you want to another cup, insert a new capsule for operation.
8. Empty the capsule collection tray and rinse the unit and tank frequently.
9. Always turn the coffee maker off and disconnect the power supply when not use.

## **CLEANING AND MAINTENANCE**

Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet. We recommend that the following is performed on a regular basis:

1. Use the specifically provided empty capsule, prepare 1 or more cups to wash the coffee distributor.
2. Use a dry cloth to wash the removable water tank.
3. Empty the capsule collection tray and clean it.
4. Clean the capsule holder with a dry cloth.
5. Use a damp cloth to gently wipe the cup holder grid. Empty the capsule collection tray and rinse it.
6. Clean the machine using a damp cloth, never submerge the machine.
7. Replace all parts and keep for next use.

## **REMOVING MINERAL DEPOSITS**

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use the appliance, the detail is as follows:

1. Fill the water tank with water and descaler to the MAX level in the gauge of coffee maker (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Turn on the power switch, the red indicator will turn on. Wait until the blue indicator turns on.
3. Lift up the handle and insert the empty capsule supplied. Then close the handle.
4. Position a container on the cup holder grid.
5. Press the coffee button and allow the liquid to flow for 1 minute. Then stop flowing by press the coffee button again.
6. Wait for 20 minutes with the machine turned on.
7. Press the coffee button until all of the water is used up.
8. Rinse the tank well and fill with clean water. Press the coffee button until all of water is used up.

**NOTE:** For descaling and rinsing operations, use the empty capsule supplied.

## TROUBLE SHOOTING

<b>Problem</b>	<b>Solution</b>
No indicator.	Check that the plug has been inserted correctly into the socket, that the power button has been pressed and that the corresponding red light is on.
The machine makes a strange noise.	Check that there is water in the tank
The lights are on but no coffee comes out.	The capsule inserted may be faulty. Wait for a few seconds, then try again with a new capsule.
There are signs of water at the bottom of machine.	Make sure that the tank has been fitted correctly into position.
A slight hiss can be heard after the coffee has been released.	This is not a fault, but normal settling of the pressure control valve.

## ENVIROMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.