



FULLY FITTED ELECTRIC BLANKET

KAELBLFFSBA, KAELBLFFSDA, KAELBLFFSQA & KAELBLFFSKA

SAFETY & WARNINGS



Read the instructions for use



Do not bleach



Do not tumble dry



Do not iron



Do not dry clean



Do not insert pins



Do not use folded or rucked



Maximum washing temperature 40°C, mild process




Not to be used by very young children (0-3) years

IMPORTANT SAFETY INSTRUCTIONS

- Read this user guide thoroughly and retain for future reference.
- Ensure you understand how the electric blanket works and how to operate it before first use.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug. Do not pull on the cord.
- Turn the power off and remove the plug whenever the electric blanket is not in use or before cleaning.
- Do not use any controller other than the one supplied with this product (model PS7G-H/L). Do not cover the controller and do not exert pressure on the controller.
- This product is designed to only be used as an under blanket. It is not suitable to use as a heated throw or blanket.
- Do not use if the blanket is damp or wet.
- This blanket is not intended for medical use in hospitals.
- Do not use in conjunction with another heating appliance.
- When in use ensure the blanket and power cord does not get stuck or twisted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and contact Kogan.com for support.
- If the power cord or link is damaged, cease use immediately and contact Kogan.com for support.
- This appliance is not suitable for anyone insensitive to heat or people who are unable to react to overheating.
- Children under the age of 3 are not to use this appliance due to their inability to react to overheating.

OVERVIEW

Controller

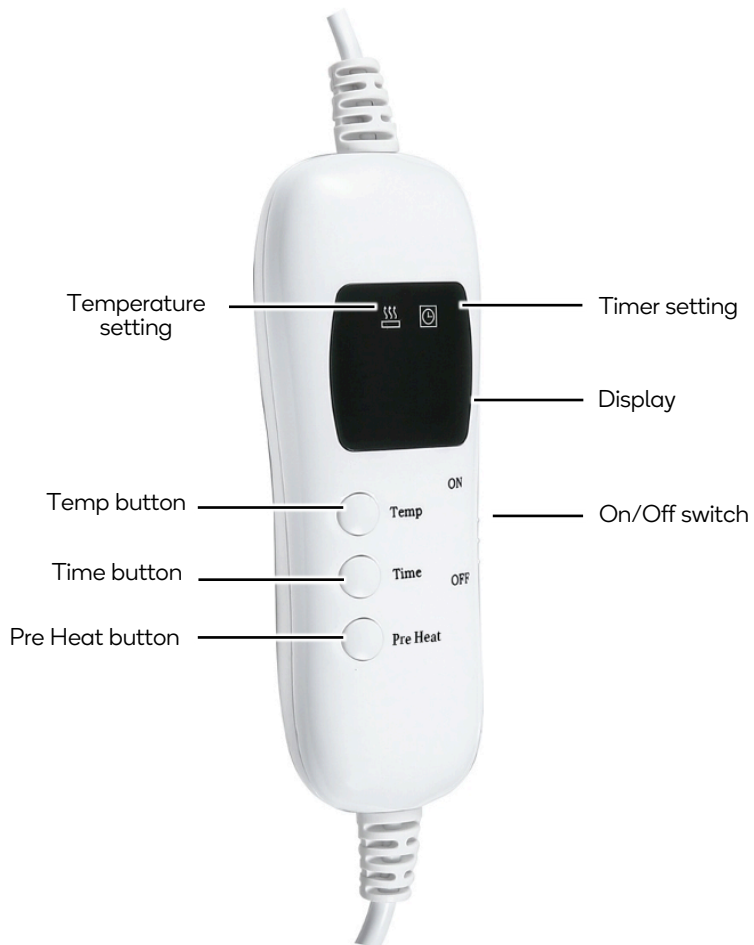

INSTALLATION

Fitting the electric blanket:


The electric blanket should be laid on a firm and un-adjustable mattress. The blanket should be laid flat from shoulder to feet when sleeping.

The electric heating blanket must be spread with the attached controller positioned towards the top of the bed. The side with the switch should preferably be placed near the shoulder for convenient operation.

To prevent the blanket from moving or creasing during use, fit the blanket securely to the mattress. Any creased spot tends to cause overheating which may be hazardous.

Controller:

- To install the controller, insert the plug into the mating connector on the electric blanket until the locking tab snaps firmly into place.
- To remove the controller, lift the locking tab with your finger and pull the plug directly out. Do not pull the controller cable and Do not try and pull the controller plug out without lifting the locking tab as you will damage the socket.

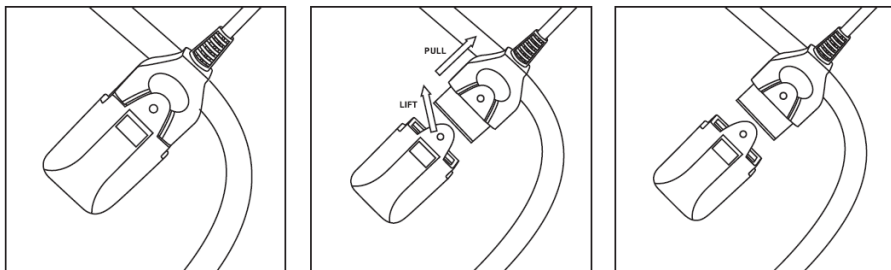

Note:

Single bed models will come with only one controller. All other sizes include two controllers.

OPERATION

With the blanket fitted to your bed and the controller connected, ensure the power cord can safely be connected to your power supply without creating a tripping hazard. Once plugged in, the controller should be within easy reach of the user.

Controller:

By default, when you first turn on the electric blanket, both the temperature and timer will be set to 0.

Pressing the Temp button will cycle through the different temperature settings (L, 1, 2, 3, 4, 5, 6, 7).

Pressing the Time button will cycle through the different timer settings (1 – 9), increasing by one hour at a time.

Pressing the Pre Heat button, the temperate will display as “H” and the blanket will begin to pre-heat for an hour. After an hour the blanket will automatically switch the temperature to the “L” setting.

After pre-heating, you can manually select the desired heat setting according to your needs. If you intend to sleep with the blanket on or use it for an extended time, set the temperature to either the “L” or “1” setting.

STORAGE

After use:

When the electric blanket is not in use, switch the controller to the off position and remove the plug from the power outlet. If the blanket is not to be used for a long period of time, store the blanket in a cool and dry place.

Storage:

When not in use, allow it to cool down before folding, then gently fold the blanket and place back into the packing bag it arrived in.

- Ensure the blanket is dry before folding and packing it away.
- The blanket should be stored in a cool, well ventilated, dry location.
- Do not use any mothproofing agents on the blanket.
- Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used.
- Damage of the insulation material will cause safety problem.
- Do not place any heavy objects on the blanket during storage. Doing so may crease the appliance and cause damage.

TROUBLESHOOTING

Fault Codes:

If the temperature is displayed as “P”, unplug the electric blanket and double check whether the coupler on the electric blanket has been properly connected. Turn on the electric blanket and if the fault still does not go away, the internal connection of the electric blanket may have a problem and needs to be replaced. Please contact Kogan.com for support.

If the temperature is displayed as “E”, it means the electric blanket has an internal short circuit and has been broken. Please cease use immediately and contact Kogan.com for support.

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com