

kogan

2200W Electric Frying Pan KAELCFRYPNA User Manual

Product Specifications

Voltage: 220-240V
Frequency: 50/60Hz
Power: 2200W

Product Layout and Functionality

Glass lid

The clear glass lid allows you to monitor the cooking process without lifting the lid and allowing the heat to escape, ensuring the selected temperature is maintained.

Steam vent

Allows you to accurately control moisture levels during cooking.

Cool touch handle

EasyClean non-stick cooking surface
Enables fat-free cooking and easy wipe down cleaning.

Control probe inlet

Pan tilt lever

When the lever is in the lowered position the cooking pan is tilted, forcing juices to collect at one end of the pan. Both hands are then free for basting.

Extra large cooking vessel

The large rectangular frypan (380mm x 295mm) is 78mm deep, ideal for cooking extra large meals or liquid-based dishes.



Control probe

The probe is thermostatically controlled and incorporates an indicator light that switches off automatically when the selected temperature has been reached, it then cycles on and off to indicate that the temperature is being maintained.

Safety Warnings

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Read all instructions and save them for future reference.
- After removing the packaging, make sure that the product is complete and undamaged. If in doubt, do not use the unit and contact the Kogan customer support team.
- Do not leave packaging materials (plastic bags, polystyrene..) within reach of children as they can be dangerous.
- Children should be supervised to ensure they do not play with the device.
- The electrical safety of the appliance is guaranteed only if it is plugged into an efficiently grounded outlet that meets national electrical safety standards. Kogan.com can not be held responsible for damage that occurs due to incorrectly installed power outlets or poorly maintained powerboards/adapters.
- If the appliance stops working or malfunctions in any way, please contact the Kogan customer support team. In the event of failure, switch the appliance off and unplug it from the wall. The appliance does not contain any user serviceable parts.
- The appliance must only be used for domestic home use.
- Any other use is considered as not being consistent with the purposes for which the appliance was designed, and is therefore dangerous. Kogan.com is not responsible for any damage caused as a result of misuse, erroneous and irresponsible and/or damages for repairs performed by non-qualified personnel.
- As protection against electric shock, do not immerse the appliance, the cable or the plug into water or any other liquids.
- Do not touch hot surfaces. Use the handles and designated controls.
- **CAUTION:** When in operation, the appliance reaches high temperatures. Necessary measures must be taken to avoid burns, fire and other damage to persons or materials in contact with the baking pan, or any parts of the appliance. During use and during the immediate cooling period, only use the handle to open and close the pan.
- After cooking, keep your hands and face away from the hotplate when opening the lid as very hot steam may be released.
- Unplug the appliance from the power outlet when not in use and before cleaning. Allow the unit to cool thoroughly before putting on or taking off parts, or prior to cleaning or storing the appliance.
- Do not let the cord hang over the edge of the table or worktop where the unit is situated. Do not allow the cord to be tangled or make contact with hot surfaces. Do not leave your appliance on a gas burner or an electric stove. Do not use appliance near a hot oven while in operation.
- Do not use abrasives or caustic cleaners.
- Before using the appliance, ensure there is sufficient space above the unit and to either side to allow for adequate air circulation. Do not let the appliance come into contact with curtains, wallpaper, kitchen towels or other flammable materials during use.
- **CAUTION:** Be mindful of using the unit on surfaces where heat may be a problem and cause reactions. It is recommended that you use a small insulating pad.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Unplug the unit from the power supply and contact the Kogan customer support team.
- The use of accessory attachments not recommended by Kogan.com may cause injuries or malfunctions. This device is not intended to be operated by an external timer or a remote control system.
- Do not use outdoors.

Usage

- Remove all packaging materials and stickers.
- Wipe the plates down with a damp sponge or cloth to remove any dust. Wipe dry with a soft cloth or paper towels.
- Select the location that the unit is going to be used, ensuring you leave enough space between the back of the unit and the wall to allow the heat to flow without damage to cabinets and walls.
- Plug the cord into a standard electrical outlet, then turn the knob 1-3 degrees. If required, flick the switch to turn on the top plate. The red light and the switch light will both be on. The red light will cycle on and off as the heating element activates to maintain the temperature.
- To remove foods from the flat plate, do not use metal utensils as they can damage the non-stick coating. Always use a silicon spatula, wooden utensils or rubber tipped tongs.
- When cooking, be careful to not spill any sauces or juices between the baking pan and the housing. If this does occur, ensure you clean it as quickly as possible once the unit has cooled down after cooking.
- Note that steam may be released when you open the glass lid. Caution should be taken to ensure your face and hands do not come into contact with the steam.
- After use, turn the temperature knob to the off position. Unplug the unit from the power socket and allow it to cool to room temperature before cleaning and storing.

Care and Maintenance

- Wipe the lid, base and cooking plates with a damp cloth and non-abrasive soap or dish washing detergent. Wipe with a soft clean cloth, then towel dry.
- Store the clean machine in a dry, cool place.
- Never store the unit while it is still hot or plugged in.
- Never wrap the cord tightly around the appliance itself. Do not put any stresses on the cord where it enters the unit as this may cause it to fray and break.

If you have any further questions regarding the use of this product, please contact the Kogan customer support team.