



# 2000W Flame Effect Tower Heater KAHTPREMDCA Quick Start Guide

## Table of Contents

Safety & Warnings.....	1
Overview.....	2
Operation.....	2
Cleaning & Care.....	4
Troubleshooting.....	4

## Safety & Warnings

- Read all instructions before using the appliance and retain for reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outside of indoor household use as described in this manual.
- Do not allow the power cord to be exposed to water, heat, direct sunlight or overhang where it can be pulled or otherwise be damaged or pose a hazard.
- Do not insert any objects, metal or otherwise, into the heater or outlet.
- Do not spray pesticide or any flammable spray near the heater.
- This appliance contains no user-serviceable parts. If it suffers any failure or damage, cease usage and contact Kogan Support after consulting the Troubleshooting section of this manual.

CAUTION: Some parts of this product can become very hot and cause burns.

WARNING: Do not cover the heater as it may overheat.

### WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN



- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.



# Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.


If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact [Kogan.com](http://Kogan.com) support.

# Overview


1. Front cover
2. Air outlet
3. Flame effect display window
4. Swing holder
5. Base
6. Power cord
7. Control panel
8. Power switch
- 9 Remote control

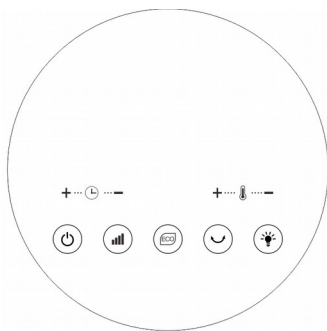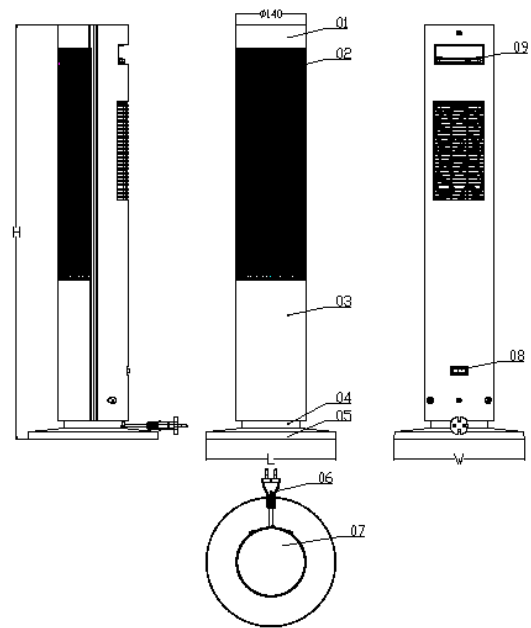

Control panel

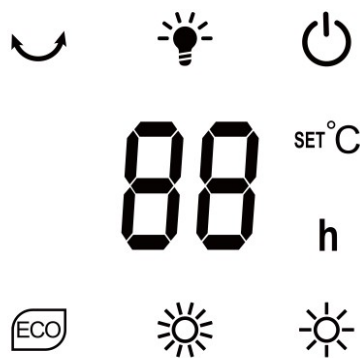

Display panel

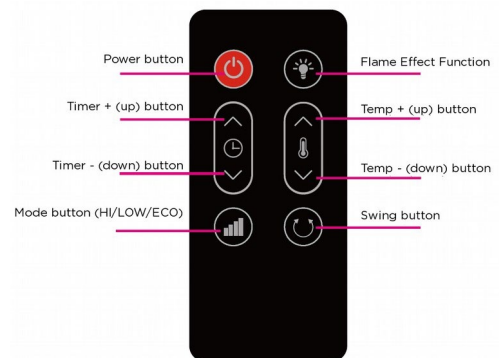 

Remote control

## Specifications


Power	Noise Level	Dimension (L*W*H)
2000W, ~220-240V, 50Hz	≤55 dB	260mm*260mm*830mm


# Operation

## Installation

1. Remove machine, base and remote control from package.
  - It is recommended to retain all packaging for ease of transport in case it is necessary in future.
2. Inspect machine to confirm it is undamaged and in working order.
3. Place heater on a stable surface and connect to base.

## Appliance function

Once plugged in, the appliance will beep and enter standby mode. The power indicator  will illuminate.

Under standby mode, functions are disabled: press  to begin operation. Press again to power off.

If there is no fan power, the fan will turn off after 10 seconds.

### Heating setting (High/Low)

Press to change from low to high heating power. Another press sets low power again, followed by recycling.

### Eco mode

Press to enter or exit Eco mode. The default temperature is 22°C. When the room temperature is between 18-22°C, the device will operate with low power. When it reaches 22°C, it will shut off.

### Swing bar

Press to turn the swing function on or off.

### Time setting (12h) + ... -

Press to enter timer setting (within a range of 0-12 hours). The + and - keys will change 1 hour per press. Press and hold for 1 second to change more rapidly. Press the time setting key again to commit changes. If 5 seconds elapses without this confirmation, the display will return to default and no changes will be made.

### Temperature (15°C-35°C) + ... -

Press to enter temperature setting. Press + and - to set temperature (between 15°C and 35°C), one degree per press. Press the Temperature key again to commit changes.

When time and temperature have both been set, the timing and room temperature will display alternately in 30 second intervals. When the timing has not been set, only the set temperature will be displayed.

### Flame effect

Press to turn the flame effect function on or off.

### Auto shutoff

The appliance will turn off automatically if the temperature exceeds 60°C (NTC over-heating protection).

The heater also has a sensor which will shut off if it detects it has been tipped over.

### Other functions

- The appliance will retain settings in memory with the exception of timer settings.
- For the first 10 seconds after being powered off on high-power heating setting, it will function on low-power setting.

- After 1 minute from last command, the display will reduce to 1/3 brightness. When another command is received, it will resume normal brightness.

## Remote control battery replacement

1. Remove the battery compartment cover on the back side (Image 1).
2. Pay attention to the battery polarity, and insert the battery (Image 2).
3. Push the battery door into the remote control.

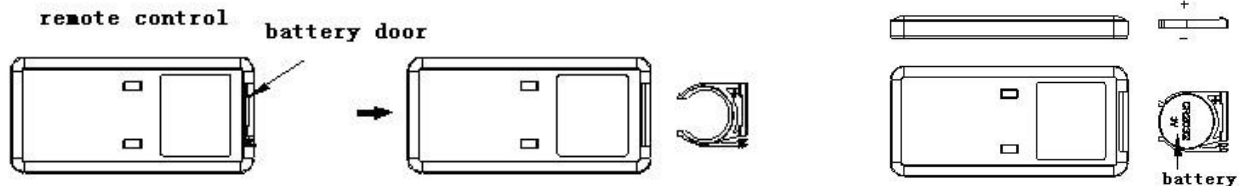 


Image 1

Image 2



### WARNING:

As described in the “Safety & Warnings” section of this manual, keep batteries out of reach of children as swallowing can cause serious injury or death.

## Cleaning & Care

Make sure that the device is switched off, unplugged and has cooled completely before commencing cleaning or maintenance.

Use a soft cloth to wipe the dust from the heater’s surface.

If the surface is dirty, it is better to use a soft cloth moistened with lukewarm water mixed with a neutral detergent.

Do **NOT** use gasoline, thinner or any other caustic or abrasive substances, as they may damage the surface.

- Allow the heater to cool and dry completely before packaging or storing.

Store in a cool, dry and well-ventilated area.

## Troubleshooting

If you experience any issues with the appliance:

- Inspect the appliance for any signs of physical damage.
- Unplug and wait 10-15 minutes for any residual charge to leave the product, then try using the product again.

If you have any ongoing issues or concerns regarding your product, contact the Kogan Support team.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>