

Kids Picnic Table with Umbrella

KAKDTABLUMA


Assembly Guide

Product Information and Safety


Please read these instructions carefully and retain for future reference.

- This product is suitable for children in the age range of 3 - 6 years old.
- This item is not suitable for children under the age of 3 years.
- The maximum load weight for this item is: Table 20kgs, Seating 80kgs (4x20kgs)
- Assembly of this product should only be carried out by a competent adult.
- Regularly check all fastenings or fixings to ensure that they are properly tightened and secured.
- Do not use if any components are damaged or missing.
- Plastic bags can be dangerous. Please keep all bags and packaging away from children and babies.
- Do not allow children to stand on the table top or the seats.


Components

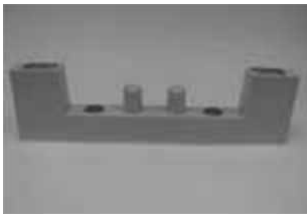

A x 2pcs

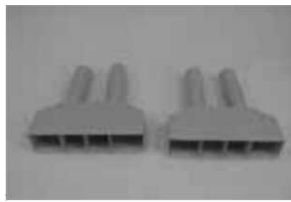


B x 2pcs

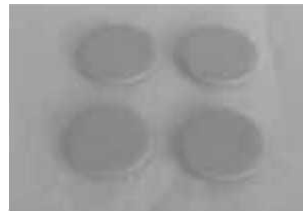

C x 4pcs




D x 2pcs

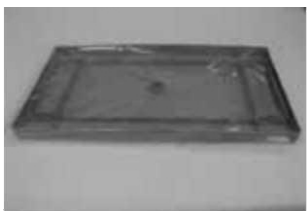

E x 1pc



 F x 1pc



G & H

Product Care Instructions - Read Before Use

- Clean the product with mild soap and water, then rinse thoroughly. Allow to dry completely.
- Do not use bleach, acids or solvents on the products. Store inside or under a suitable cover during winter.
- Remove the umbrella from the table during windy weather.

Assembly

1. Place part A (x2) leg base standing upright. **Fig 1**
2. Insert part B (leg insert) into tube fitting of part A, pushing down firmly. **Fig 2**
3. Insert safety caps (part C) into holes provided in part A. **Fig 2**
4. Place the bench seats (part D x 2) between the two part A sections, fitting into the slots provided. Press down firmly into position. **Fig 3**
5. Place the table top (part E) across the center of the legs, making sure each end is fitted into place. **Fig 4**
6. Insert Part G into Part H. **Fig 5**
7. Insert the combined parts G and H into the hole in the table top (part E). **Fig 6**
8. Insert the umbrella through the hole of the table. Care must be taken when opening or closing the umbrella to ensure that you do not trap or pinch your fingers.
9. Always ensure that the product is fully erected and in its intended position before use. Check that all parts are locked into place before children use the product. Always use on a flat, firm surface.

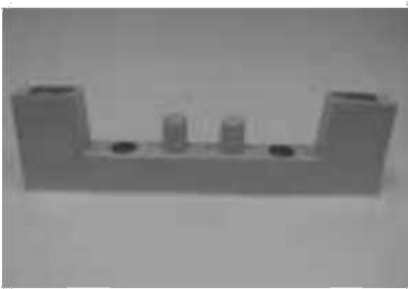


Fig 1

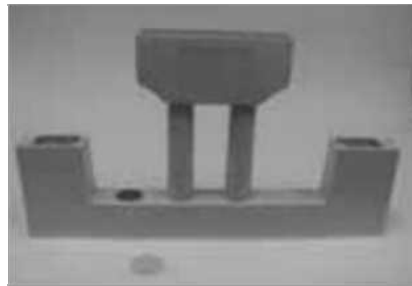


Fig 2

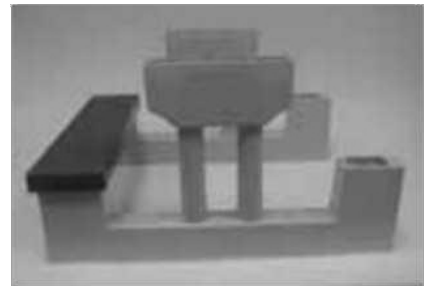


Fig 3

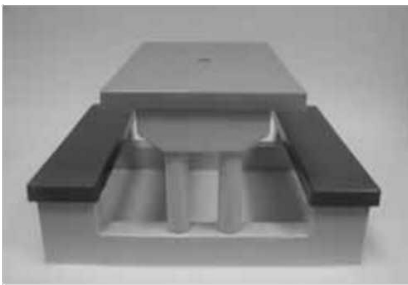


Fig 4

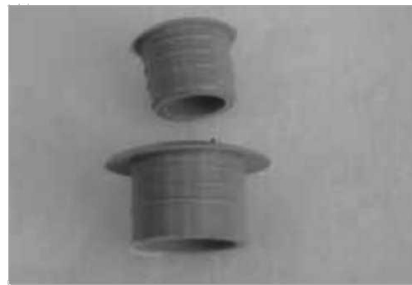


Fig 5



Fig 6

