

kogan

Cordless Glass Kettle

KAKTTLCRDLA

Quick Start Guide

Important Safeguards

When using electrical appliances, basic safety precautions should always be taken, including the following:

- Read all instructions!
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock or injury to persons, DO NOT immerse cord, plug or power base unit into water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug unit from the power outlet when not in use or before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or been damaged in any manner. Unplug the unit from the power source and contact the Kogan.com customer support team.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on, or near a hot stovetop, or into a heated oven.
- Always fill the kettle first, then set the kettle down onto the power base, then finally plug the cord into the power outlet. To disconnect, remove the kettle from the power base, then remove the plug from the wall outlet.
- Do not use this appliance for anything other than the intended use.
- Always make sure that the lid is closed during operation. Scalding may occur when the lid is open during use.
- Extreme caution must be used when moving a kettle containing hot water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge and experience, unless they have been given supervision or instruction concerning use of the kettle by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the kettle.
- For household use only.
- Never boil water while the lid is open. The kettle will not shut off, and boiling water may splash out of the kettle. This can cause severe injuries.
- Never try to remove the lid.
- When opening the lid, handle it gently and do not try to push it beyond its normal resistance. If you break the lid, the kettle will not work.
- Never fill the kettle with anything other than water.
- Do not add any instant soups or other soluble ingredients to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces, or to melt cheese, butter or any other items.
- Never immerse the kettle in liquid. Never put the kettle or the base into the dishwasher.

Before First Use

Read all important safeguards and operating instructions before using this kettle.

Fill the kettle and boil it for the first time, then discard the water. This will remove dust and any residue from the manufacturing process. The kettle will then be fine to use as normal.

Usage

Boiling Water

1. Remove kettle from base.
2. Open the lid until it stands vertically. DO NOT BEND LID BACK FURTHER!
3. Fill with the desired amount of fresh cold water. The kettle has minimum and maximum markings. Never underfill or overfill the kettle.
CAUTION: Never fill above the MAX line. If you fill water up above the max line, boiling water will be pushed out of the spout. This can cause severe injuries and burns.
4. Close the lid.
5. Place the kettle on the power base.
6. Plug the power base into the wall outlet.
7. Gently push the ON switch upwards. The blue indicator light will turn on and the kettle will begin to heat the water.
8. When the water comes to a boil, the kettle will turn off automatically. The on-switch will flick down itself and the light will turn off.
9. Lift the kettle from the power base and pour the water out slowly.
10. Replace the kettle onto the power base.
11. If you wish to bring the remaining water to a boil again, repeat step 7.

Helpful hints

- Never try to boil water with the lid open.
- Do not leave water standing in the kettle for extended periods of time. Discard unused water.
- If the kettle is ON without water, the kettle will automatically switch off (the blue indicator light will turn off, but the switch will NOT flick itself down). Slide the switch downwards manually to the complete OFF position.
- If you remove the kettle during heating – before the auto shut-off – the blue indicator will go out but the switch will stay in the ON position. If you place the kettle back down onto the power base, the light will turn on again, indicating that the heating process is continuing. You can slide the switch downwards to the OFF position if you do not wish to continue heating the water.

Cleaning

- Always unplug the cord of the power base before cleaning.
- Make sure the kettle is cold.
- Clean the exterior of the kettle with a clean, damp, soft cloth.
- Never use abrasive cleaners or scouring agents.
- Rinse out kettle and wipe dry with a soft, lint-free cloth.

Attention

Over time the stainless steel cover of the heating element inside the bottom of the kettle may change colour slightly. This is caused by the intense heat of the heating element. It is perfectly normal.

If your tap water has a high iron content, brownish stains may appear on the stainless steel element (this is known as “boiler scale”). These stains can be wipe away with a soft cloth and mild detergent. Rinse kettle thoroughly with fresh water.

Decalcification

Hard water can leave calcium spots inside the kettle. Use a commercial descaling agent and follow the instructions that come with the agent.