





## Wide Angle Lens Converter KALENS52MMA & KALENS58MMA Quick Start Guide

### Attention:

- Do not look directly at the sun or a bright light source through the lens or camera. Looking at the sun is hazardous and can result in loss of sight.
- Do not leave the lens exposed in the sun without the lens cap attached. The lens cap can help protect the lens from the sun's rays and could cause a fire if left uncovered.
- Big temperature differences can cause condensation inside the lens. It is advised to put the lens in an airtight bag before exposing it to temperature changes and letting it adjust gradually.
- High temperatures can cause the lens to malfunction. Do not leave the lens in excessive heat conditions or in direct sunlight.

### Parts

1. Protective Lens Cap
2. Wide Angle Lens
3. Macro Lens
4. Protective Lens Cap

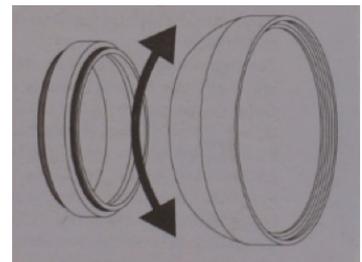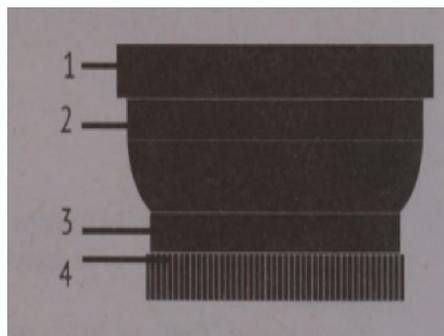

### Focusing the lens



It is advised to put your camera in the Manual Focus (MF) mode in order to focus accurately.

# Operation Instructions

## Mounting and detaching the lens

**Caution:** Please handle with care in order to prevent scratching the glass of the lens.

1. Take the lens out of the protective pouch and screw off the base protective lens cap (4).
2. The lens converter can be unscrewed into two pieces (Macro lens and Wide Angle lens). If you wish to use the Wide Angle lens (2), make sure that the Wide Angle lens is mounted on the Macro lens (3) and screw both together onto your existing camera lens in a clockwise direction. To use, simply remove the lens cap (1) and start shooting.
3. If you wish to only use the Macro lens (3), screw off the Wide Angle lens (2) in a counter clockwise direction to detach, leaving only the single element Macro lens attached to your existing camera lens.
4. After detaching your lens, instantly attach the lens cap (1). It is advised to keep both lens caps (1 & 4) on whenever the lens is not in use. This will protect your lens from scratches, fingerprints or soil that might damage the lens.