



27" FULL HD 165Hz FREESYNC GAMING MONITOR

 
(1920 x 1080)

KAMN27FG6TA

SAFETY & WARNINGS

- Read all instructions before using the monitor and retain for future reference.
- Unplug the monitor before cleaning it.
- Use a clean, slightly dampened cloth to wipe the main monitor body.
- To clean the screen, turn it off unplug it and wait for it to cool completely, then wipe it with a dry micro-fibre cloth.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.
- This monitor is designed with ventilation holes on the back of the casing. Do not cover or block them.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces or other sources of heat.
- Place monitor in well ventilation room.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cable.
- Do not open the back panel of the monitor, as it contains a high-voltage current even when not plugged in.
- Before disposing of any packaging, place all items on a soft, clean and flat surface to ensure all components are accounted for.


OVERVIEW



Monitor



Stand bracket

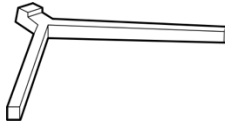


Stand base




M4x20mm Screw (x2)



M5x12mm Screw

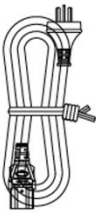

Power adapter

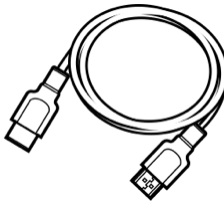


HDMI cable



User guide

OVERVIEW

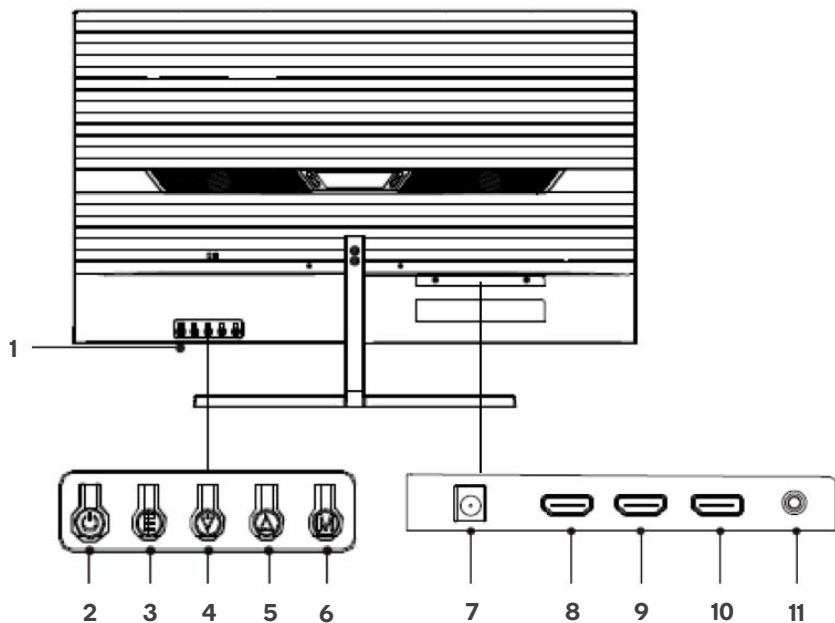

- 1 LED indicator
- 2 Power button
- 3 Exit button
- 4 Down button
- 5 Up button
- 6 Menu button


- 7 Power input
- 8 HDMI
- 9 HDMI
- 10 DisplayPort
- 11 Audio out (3.5mm jack)

ASSEMBLY


Before disposing of any packaging, place all items on a soft, clean and flat surface to ensure all components are accounted for.

Monitor stand

- 1 Lay the monitor on a cloth with the LCD panel facing down to prevent it from being damaged. Attach the stand bracket to monitor using the x2 M4x20 screws.

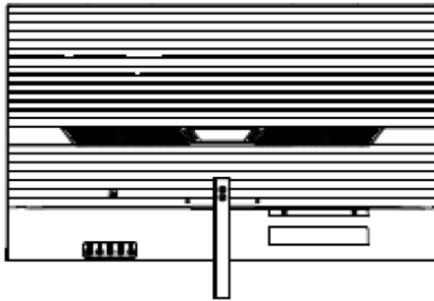


- 2 Attach the stand base to the stand bracket and secure it in place using the M5x12 screw.

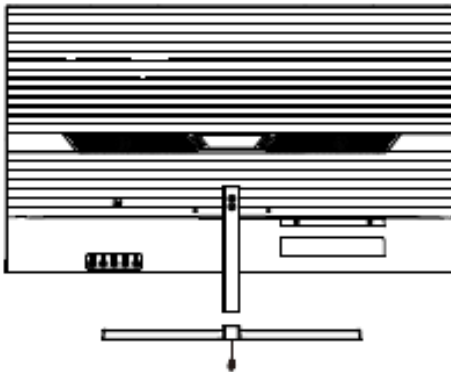

Monitor adjustment

The angle of the stand can be adjusted forward 5° and backwards 15° to achieve a comfortable viewing experience.

Note: Take care not to touch the screen area when adjusting the angle of the monitor.

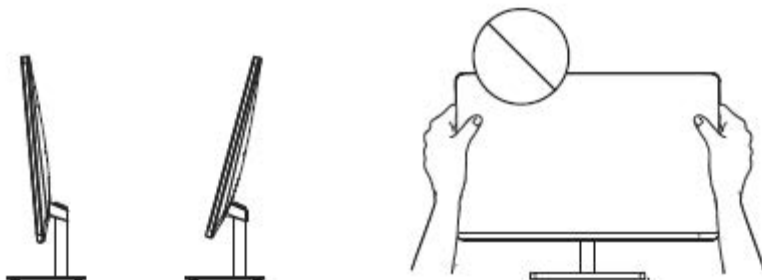

VESA MOUNT



VESA mounting pattern 100 x 100mm, screw size M4.

Note: VESA mount or mounting accessories are **NOT** included.

Before installing the VESA mount onto this monitor, ensure the stand has been removed.

To ensure sufficient ventilation, install the monitor at least 10 cm away from the wall and leave approximately 10 cm of space at either side of the monitor.

1. Place a clean, dry and lint-free cloth on a flat, stable surface.
2. Gently lay the monitor on the cloth with the LCD screen facing down.
3. Identify the 4 mounting holes on the back of the monitor (Figure 1).
4. Assemble the VESA mount as per the instructions provided.
5. Ensure that all screws (not supplied) are tightened and secured properly.


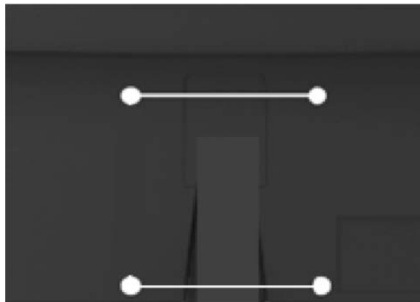


Figure 1

CONNECTIVITY


Power

1. Turn the PC and the monitor off before connecting them.
2. Connect the included power adapter to the monitor's power input.
3. Connect the power adapter to the power outlet.

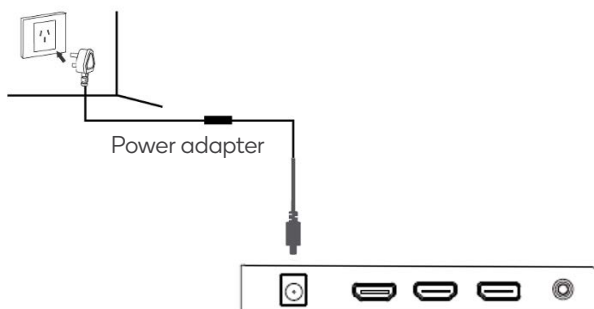


HDMI

Use the included HDMI cable to connect the monitor to your computer.

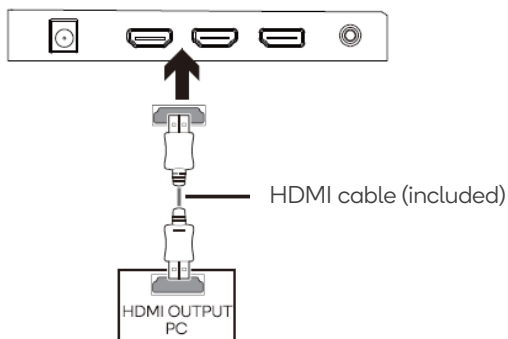

DisplayPort


Use a DisplayPort cable to connect the monitor to your computer.

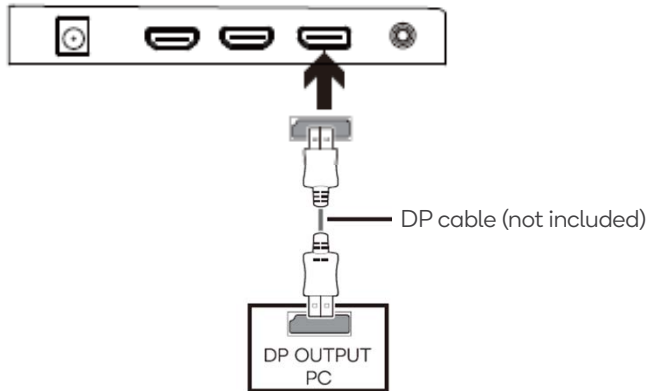

Audio

1. Connect a 3.5mm audio cable to the audio out on the monitor.
2. Connect the audio cable to the 3.5mm port on your headphones or speakers.


Note: The monitor may need to be set as the PC's default sound output device.

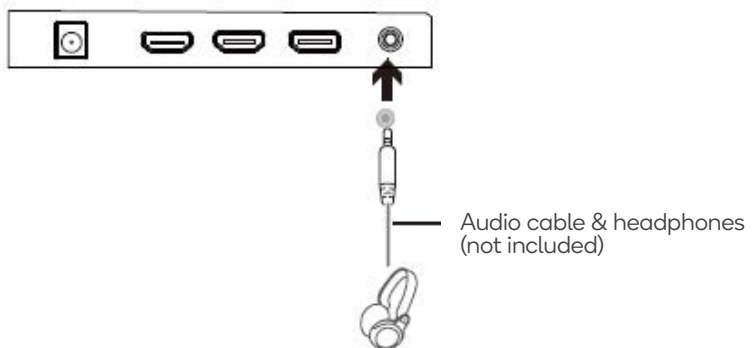

OPERATION

1. Connect the monitor to the input device via HDMI or DisplayPort.
2. Use the power button to turn the monitor on.

Monitor Controls

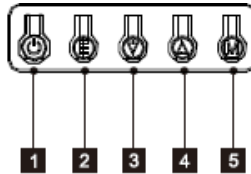

1. **Power button:** Press to turn the monitor on/off.
2. **Exit button:** Press to exit menus.
3. **Down button ▼:** Press to move down in the menus.
4. **Up button ▲:** Press to move up in the menus.
5. **Menu button:** Press to display the OSD menu or enter sub-menus.
6. **LED indicator** Changes colors to indicate status, see table below.

LED Indicator	Monitor status
Blue	Power on
Red	Standby / No input signal
Off	Power off

FreeSync

- In order to use this feature, ensure your hardware has FreeSync capability and the graphics drivers are fully up to date.
- Connect your monitor using HDMI. You may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu.
- See your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

OSD menu

1. To view the OSD menu, press the Menu button.
2. Use the buttons “▼▲” to navigate the functions.
3. With the desired function highlighted, press the Menu button to enter the submenu.
4. After making adjustments, press the Exit button to save the changes and return to the OSD menu.
5. Press the Exit button to exit the OSD menu.




Refer to the following pages for a detailed list of the OSD menu functions.

Main Menu	Sub-Menu	Options	Description
Input Source	DP	N/A	Select input
	HDMI 1	N/A	
	HDMI 2	N/A	
Brightness/ Contrast	Brightness	0-100	Adjust display brightness
	Contrast	0-100	Adjust display contrast
	Backlight	0-100	Adjust display backlight level
	Sharpness	0-4	Set display sharpness
	ECO	Standard, Game, Movie, Text, FPS, RTS	Preset colour modes
	DCR	On, Off	Turns dynamic contrast ratio function on/off
Color Setting	Color Temp.	Warm, Normal, Cool, User,	Select colour temperature mode or allow manual colour configuration (User mode only)
	Red	0-100	Adjust RGB values (User mode only)
	Green	0-100	
	Blue	0-100	
Picture Quality Setting	Saturation	0-100	Adjust display saturation
	Low Blue Light	0-100	Blue light reduction adjustment
	Gamma	Off, 1.8, 2.0, 2.2, 2.4, 2.6	Set gamma
	Colour Gamut	sRGB, Adobe, DCI-P3, Off	Set screen colour gamut
	HDR	Off, Auto, 2084	Set HDR source
Display	Aspect	16:9, 4:3	Set aspect ratio
	FreeSync	On, Off	Turn FreeSync on/off
	OD	On, Off	Turn OD on/off
	MPRT	On, Off	Turn MPRT on/off

OSD	Language	English, Francais, Deutsch, 简体中文, Italiano, Русский 日本語, 한국	Set OSD language
	OSD H- Position	0-100	Adjust the OSD's horizontal position
	OSD V- Position	0-100	Adjust the OSD's vertical position
	Transparency	0-100	Set OSD overall transparency
	OSD Timer	10-60	Set how long the OSD remains open after last input
Other	Auto Powerdown	On, Off, 10-120	Set Auto Powerdown
	Mute	On, Off	Enable or disable mute
	Volume	0-100	Adjust volume level
	Reset	N/A	Reset monitor configurations

SPECIFICATIONS

Screen size	27"
Aspect ratio	16:9
Backlight	E-LED
Brightness	250cd/m ²
Panel	VA
Resolution	1920 x 1080
Refresh rate	165Hz
Response time	12ms
Viewing angle	≥170°(H) / 170°(V)
Contrast ratio	4000:1
VESA mounting	100 x 100mm
Colours	16.7M
FreeSync	Yes
Signal Input	HDMI 2.0 x2, DP x 1
Power	DC 12V  3A

Audio

Speakers	No
Audio Out	Yes

Accessories

Power adapter	Yes
HDMI cable	Yes

Additional functions

Low blue light	Yes
Flicker free	Yes

Physical dimensions

Dimensions (w. Stand)	615.4 x 192.9 x 433.3mm
Dimensions (w/o Stand)	615.4 x 38.7 x 363mm
Net weight	3.9kg
Gross weight	5.2kg

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com