

kogan

www.kogan.com



Charging your Clip-on MP3 Player

Your Kogan Clip-on MP3 Player charges via the Mini USB connection located on the bottom of the unit using the supplied cable.

For first time use, we recommend charging for around 4 hours.

Transferring music

Your Kogan Clip-on MP3 Player accesses music from a Micro SD card. We provide a 4GB memory card to make sure you're ready to go out of the box.

To transfer music, you can connect your Clip-on MP3 Player to any PC or Mac using the supplied USB cable. After a few seconds, a new removable disk should appear in your file browser.

To add music to your device, simply drag-and-drop files across from other folders.

When you're finished transferring music, make sure to eject or safely remove the removable disk.

Playback

To turn the Clip-on MP3 Player on and off, toggle the power switch on the top edge of the device.

The Play/Pause button in the center of the control dial and the Next/Previous buttons (to the right and left of the control dial respectively) allows you to control track playback.

Playback order is determined alphabetically by folder name and then alphabetically by file name.