


kogan

KAMP38GSLVA

USER MANUAL



****** MP3 PLAYER with USB FLASH DISK ******

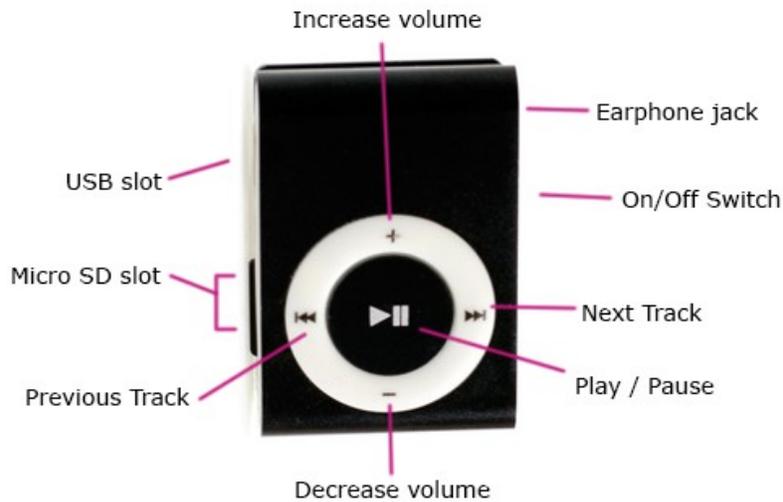

GETTING STARTED

- i. Connect player to system via USB cable. Make sure the device is switched off at this time.
- ii. The device should be recognised and the relevant hardware should begin to install automatically.
- iii. Locate the MP3 player's root directory (note: usually titled 'Removable Disk' or similar on first use)
It will be titled, for example, E: or F:

LOADING YOUR MP3 PLAYER

You are now able to drag and drop audio files from your system to your MP3 player. The player, with its Micro SD card located on the side of the device, has an external capacity corresponding to that of the card. Essentially, this card contains the total number of files you put on your MP3 player and you will require a Micro SD card to use this device. Do not remove the Micro SD card during operation. Make sure the device is switched off to enable connectivity.

You may create sub-directories within the Micro SD card, allowing you to order your files. To delete files, simply highlight the specific items you would like to remove and hit 'Delete' on your keyboard. When you are finished loading your device with files, safely remove the device from the system. Do not remove the device during file transfer.

USING YOUR MP3 PLAYER

First, locate the On/Off switch on the side of the device. The MP3 player will power on. Similarly, to turn the device off, you may toggle the switch. You will require a set of earphones to use the device, to be connected with the jack located just above the On/Off switch.

The front of the device focuses on the main operation of the MP3 player. To play a file, press the main button - i.e. the Play/Pause (▶||) button located in the centre of the device. Pressing the button again during a track will pause and holding down the button will turn off the device. To toggle between songs press between the Next Track (▶▶) and Previous Track (◀◀) buttons. To scan/search either backward or forward through songs, you can hold down these buttons respectively.

The remaining buttons, marked (+) and (-) , control the volume of the device. You can hold down each button to increase/decrease volume quickly.

Music will play in alphabetical order of the filenames. If you have stored your music in sub-directories, then once all of the tracks in one directory have played, the next directory alphabetically will play.

CHARGING YOUR MP3 PLAYER

The MP3 player runs on an internal lithium battery which will automatically charge when connected via USB.

WARNINGS / DISCLAIMERS

- Avoid using your MP3 player at an extreme volume. Experts advise against continuous loud and extended use of such devices.
- Don't drown out the world with your MP3 player: be aware of your surroundings and be careful!
- Do not use headphones/earphones while driving, cycling or operating any motorized vehicle.
- Do not expose the device to extreme moisture or sunlight. It will affect normal operation and, in some extreme cases, prove dangerous to the user.
- Do not disassemble.
- If you believe the player has malfunctioned or requires repair, please refrain from attempting to repair it yourself. Refer all servicing matters to qualified personnel, or contact your relevant customer service centre.