

Multi Key Holder with Torch KAMPKYHOLDA

Instructions

Step One

Place the multi key holder on a flat surface with the posts facing upwards.



Step Two

Add keys/other items with teeth facing inwards, using washers between the keys. Use extenders if required.



Step Three

Make sure the keys are flush with the top of the post. Use extenders for additional keys.



Step Four

Add the back plate, then secure with the screws provided.



WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN



- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.

If you have any additional questions regarding the use of this product, please contact the Kogan.com customer support team.