


# kogan

## Noise Cancelling On Ear Headphones KANCHPOEBKA Quick Start Guide

### General Operations

1. Install 2 x AAA batteries into the battery compartment (as shown at right), ensuring that the polarities match up with the markings in the compartment.
2. Turn the power on and the power indicator will illuminate. Connect an audio device to the headphones and adjust the volume accordingly. The noise cancelling technology will decrease the volume of outside sounds.
3. When the headphones are turned off, the noise cancelling functionality will also be inactive.

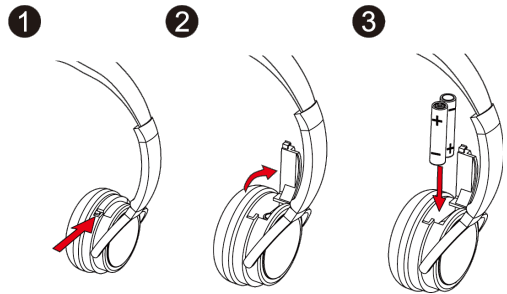

### Working Conditions

- Working temperature: -10°C ~ 60°C
- Working humidity: 20°C ~ 90°C

### Troubleshooting

| Problem                                       | Suggested causes and solution   |
|---|---|
| Noise cancelling functionality isn't working. | <ul style="list-style-type: none"><li>• Batteries are not installed.</li><li>• Batteries are installed to the incorrect polarity.</li><li>• Battery power is low.</li></ul> Please change the batteries as shown above. |

### Care and Maintenance

- Please turn the headphones off when not in use.
- If the headphones will not be used for a long period of time, please remove the batteries.
- Wipe headphones clean with a soft cloth. Do not immerse headphones in water.

**If you have any queries or warranty concerns, please contact the Kogan customer support team.**