



# KAODWMKSLBA Outdoor Wall Mounted Key Safe Lockbox Quick Start Guide

## Table of Contents

Warnings.....	1
Opening Before First Use.....	1
Setting a Code.....	2
Checking the Code.....	2

## Warnings

- Read all instructions carefully before using the lock or setting a combination and retain for reference.
- We cannot accept liability for any malfunction due to incorrect setting.
- We cannot accept liability for any damage or loss of property. This product is used entirely at the owner's risk.
- There is no factory-preset code: you will need to set your own code before use.

## Opening Before First Use

1. Slide down the black button marked CLEAR.
2. Slide down the silver button marked OPEN.



3. The cover can now be removed to set your own code.



4. Remove white backing plate by removing the central screw as pictured.



## Setting a Code

1. Select your code (minimum 3 numbers). You will see ten small black screws with small arrows facing upwards.



2. Using the small key provided, turn the arrows so that the desired numbers face downward.



3. Slide down the black button marked CLEAR.



4. Replace the white cover. NOTE: Always use the CLEAR button after attempting to open.



## Checking the Code

1. Slide down the black button marked CLEAR.

2. Type the code in (in any order).

3. Slide down the silver button marked OPEN.

4. The cover can be opened and keys, etc. added.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>