

kogan

Remote Control Racing Boat KARCTBOTBGA Quick Start Guide


Warnings and notices

- Make sure there is no equipment working at the same frequency in the vicinity to avoid interference.
- Users under 14 years old should be under supervision of an adult.
- Please do not use device in a swimming pool or body of water that has people swimming in it to avoid injuries.
- Please check on how dirty the water is prior to using the boat. We suggest you don't use unit in dirty water as it may affect the functionality of the unit.
- If the boat is not going to be used for an extended period of time, remove the batteries from the controller and the boat.
- Remote control range is 30 metres. Please ensure that the boat does not go out of control range.
- Propellers will stop rotating when the boat is removed from the water.

Charging

Please use dedicated charger supplied to charge the battery pack. The standard charging time is 1.5 hours. (During charging, the battery pack will warm up. This is expected behaviour).

NOTE: Please take care of the battery pack. Before charging, please completely discharge the battery pack. Please charge the battery pack according to standard charging time to prolong battery life.

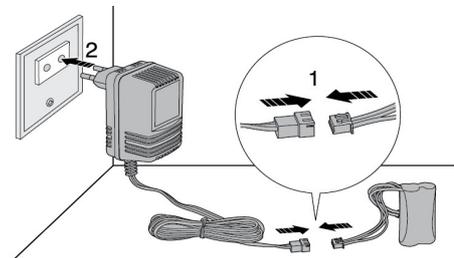


Antenna Installation


1. Installation of transmitter antenna: insert the antenna into the hole at the top of the controller, then tighten it.




2. Installation of boat antenna: insert the antenna into the PVC pipe, then insert the PVC pipe into the hole on the boat.

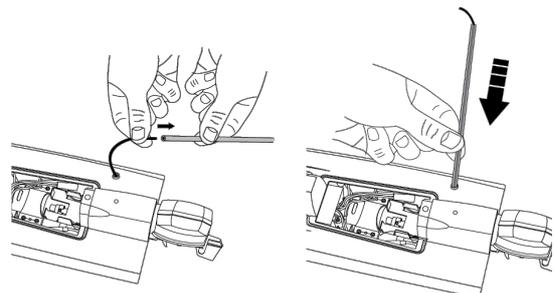


Battery Installation

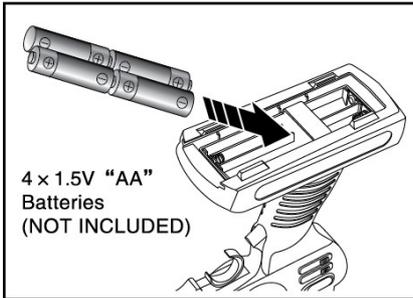

Remove the battery cover on the controller. Place 4 x AA batteries into the battery compartment, noting the correct polarities. Replace the battery cover.

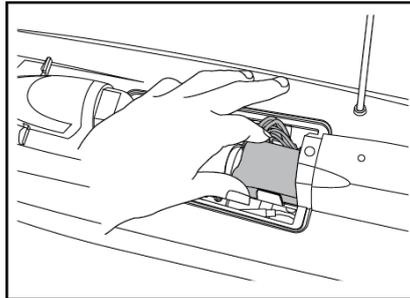

Place the rechargeable battery pack in to the bracket at the rear area of the boat hatch and stick it in with the magic sticker tightly. Ensure it is secure.

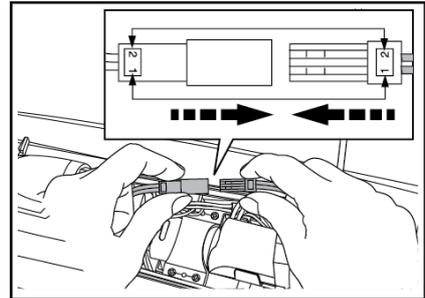


Connect the socket of the rechargeable battery pack as shown above.

Installation of Hatch Cover


As shown to right, place the cabin cover over the hull and buckle downward. The cabin cover will automatically stick to the magnet core of the hull.

The hatch cover should now be sealed.

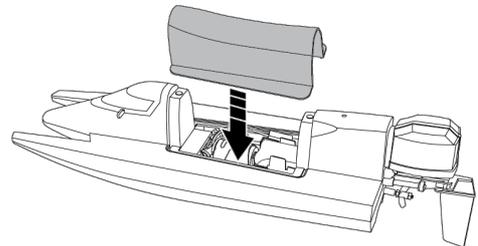

Switch

Move the switch to the ON position before turning on the controller. Keep your hands away from the propellers and make sure there are no objects around the propellers.

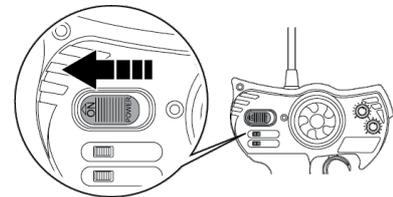


Operation

During use, please extract the antenna on the remote controller to its fullest extent. Put the boat into the water and pull the throttle lever back or push it forward. The propellers will be rotating and the boat will be racing backwards and forwards.

While using the throttle, you can rotate the left/right steering wheel to turn the boat in the water.

When there is insufficient power, the power indicator will go dark and you will need to replace with a new battery.

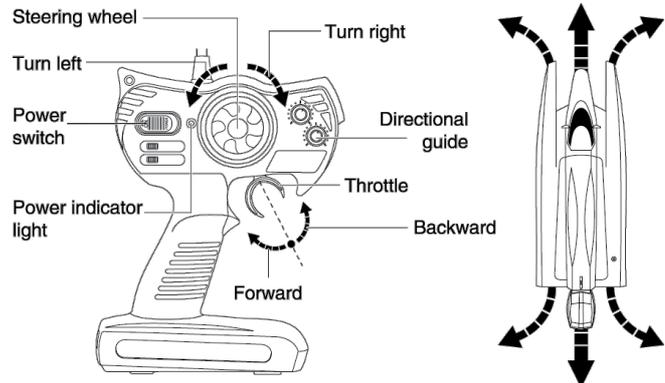

If you have any further questions regarding the use of this product, please contact the Kogan.com customer support team.