

kogan

RGB Gaming Mouse KARGBGAMMSEA Quick Start Guide

Table of Contents

Specifications.....	1
Overview.....	1
Software.....	2
Macro manager.....	2
Settings.....	3
Troubleshooting.....	4

Specifications

Dimensions	125.5*68.6*39.6mm
Acceleration	20G / 60IPS
DPI	500 / 1000 / 2000 / 3000 / 4000
Polling rate	125 / 250 500 1000 Hz
Backlight	RBG
Cable length	1.8 metres
Operating systems	Windows XP/7/8/8.1/10
USB interface	USB 1.1 / 2.0

- Requires 50MB free disk space

Overview

1. Left click
2. Forward
3. Back
4. Right click
5. Scroll
6. DPI cycle




Software

Via the software suite (available on the Kogan website), you can adjust the button configuration and customise.

Different configurations can be saved to each profile to maximise your gaming experience in every game you play.

Select “Configuration” to create profiles.

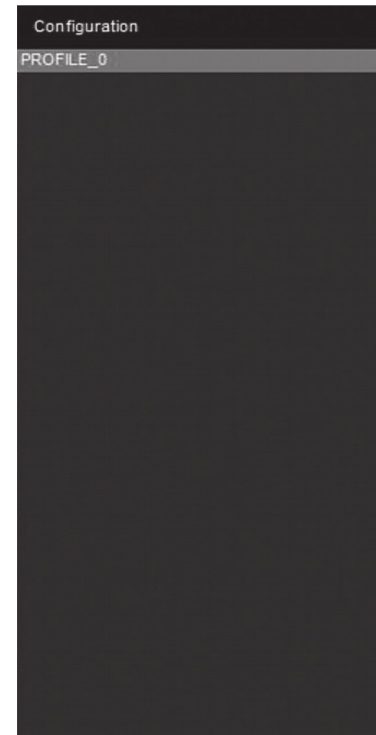


Macro manager

1. Select “Macro manager” to begin script recording.
2. Create a name for the script and press Enter on your keyboard to confirm.
3. Press “Start record”.
4. Input the desired script.
5. Press “Stop record” when your script is complete.

More macro tools:


- Record delays between keys
- Loop times: loops the script, number of loops can be changed
- Time delay: double click on a recorded macro to change the time

NOTE: Press “OK” to accept changes and exit the macro manager.

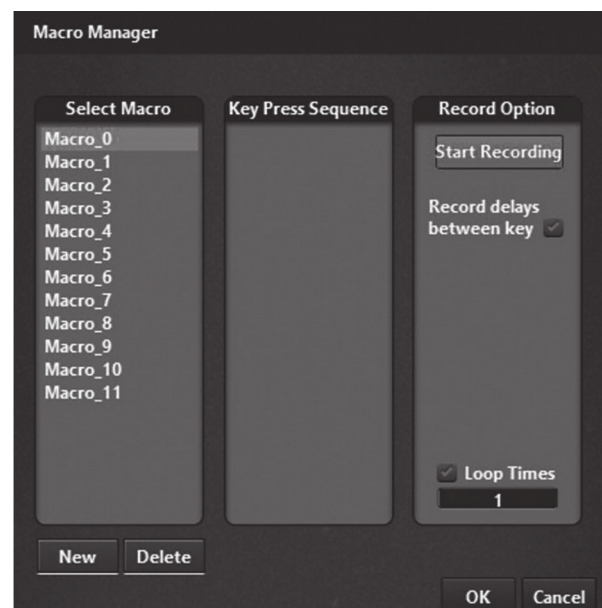


To assign macro script to button:

1. Go to “button assignment”.
2. Select any of the buttons from 1-6.
3. You can find your macro keys in the drop-down menu under “Macro assignment”.
4. Select the macro and the button to assign it to.
5. Press “Save” to confirm and change the default button to your macro script.

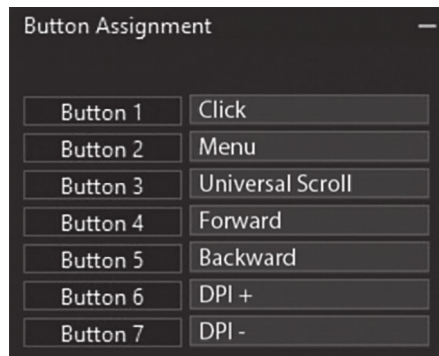


Settings

- Select “X/Y sensitivity setting” to adjust X and Y axis individually.

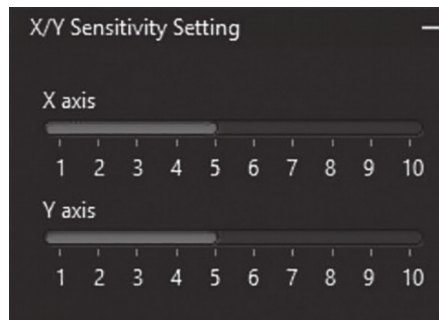


- DPI settings and backlight colour:


1. Use the DPI cycle button to select DPI.
2. Click on the numbers to customise DPI level.
3. Slick on the colour box to select the colour for the LED indicator.

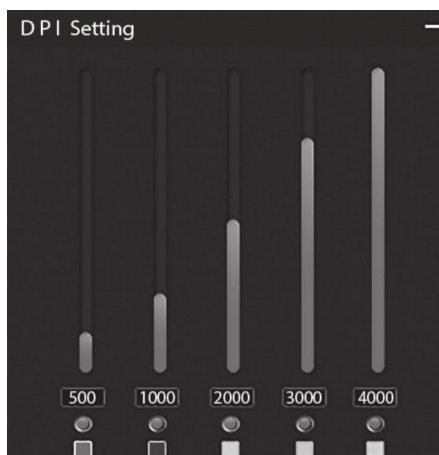


- Lighting effects

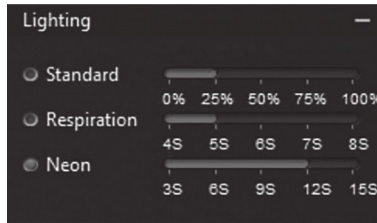


- USB report rate
 - 4 levels available

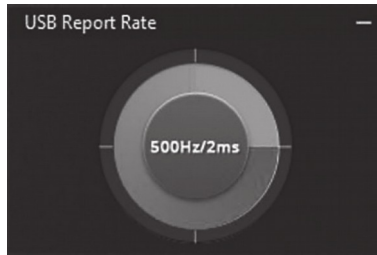


- Double click speed

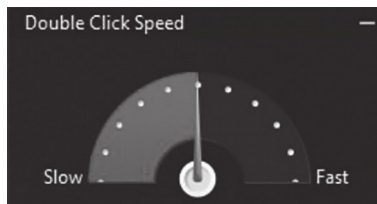

- Scroll speed

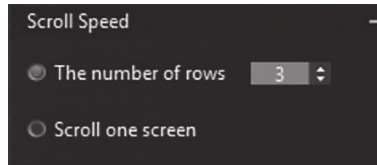

- Angle snap
 - Change cursor movement

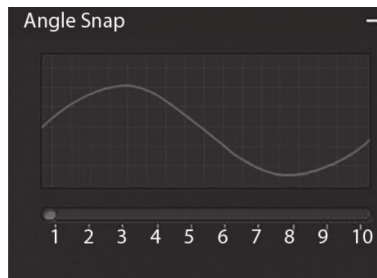

Troubleshooting

- Insert the USB cable into another USB port of the computer.
- If you are using a USB hub, try connecting the mouse directly to your computer.
- For a desktop computer, try connecting to USB ports located directly on the motherboard at the back of the chassis instead of those on the front panel.
- Check the USB port for foreign objects or dust.
- Unplug and reinsert the USB connector.
- Restart the computer.

If the above steps do not resolve any issue you are facing, contact Kogan Support.

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>