

# Wi-Fi Range Extender

## KARPRWL11NA

### Quick Start Guide

Please try connecting to the Universal Wi-Fi Range Extender wirelessly following the steps below:

1. Reset the Wi-Fi Range Extender. This can be done using the reset button on the side of the device.
2. Connect to the Extender on your device via Wi-Fi.
3. Type <http://192.168.10.1> in your web-browser.
4. At the login screen, type the following:  
Username: admin  
Password: admin
5. Navigate to the 'Repeater' section and select your local network.  
You will be required to login with the password (Security Key) for your local network at this point.
6. The Wi-Fi Range Extender will automatically disconnect you, and you will have to reconnect to it using your local network's password. The extender will be broadcasting in this stage as your home network, it will no longer be called "Wi-Fi Extender"

If you are able to access the internet after this, your repeater is working.

## Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact [Kogan.com](http://Kogan.com) support.