

< ^ Z ò ì ^ h

USER MANUAL

---

## INDEX

 
---

Safety -----	1
Front panel function -----	2
Function keys -----	2
Back panel function -----	3
Back panel function of subwoofer -----	3
Remote control -----	4

---

## SYSTEM CONNECTION

---

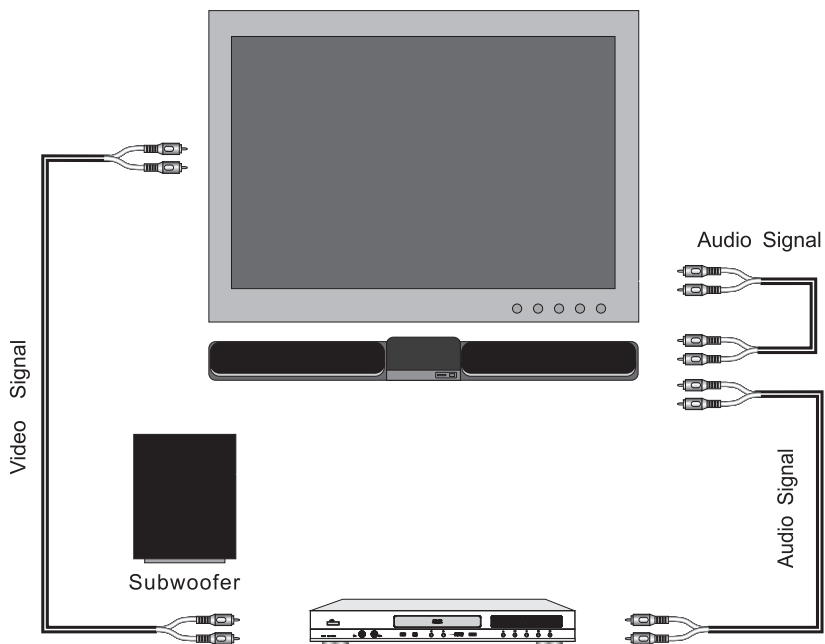

---

## SAFETY

---

### WARNING NOTICE

Please pay full attention to all warnings on the machine as well as in this manual

### WATER & MOISTURE

Do not expose this machine directly to water or indirect moisture

### VENTILATION

When in use, please keep air holes ventilated. Keep at least 20cm from other articles. Never expose the machine to high temperatures or fire. Never put the machine in any place unventilated

### POWER CORD PROTECTION

The power cord must not be squeezed or trampled; the plug should not be damaged.

### CLEANING

Please shut off the power and pull out the power supply plug before cleaning, do not use detergent, just a wet dust cloth is okay.

### AVOID LIGHTENING STRIKES

If not used for a prolonged period, please pull out the power supply plug to avoid lightning strikes

### AVOID CONTACT WITH UNIDENTIFIED SUBSTANCES OR LIQUID

Avoid contact with unidentified substances or liquid, this may cause a short circuit, burning or electric shock.


### HANDLING AND PLACEMENT

This machine is a substantial unit, please handle carefully, The machine should be placed on a stable and horizontal stand.


### REMINDER

Since this machine is computerized, if there is a strong electromagnetic disturbance, it will be influenced, in this instance, turn the power off and allow the unit to reset, The machine should then work properly.

## FRONT PANEL FUNCTION

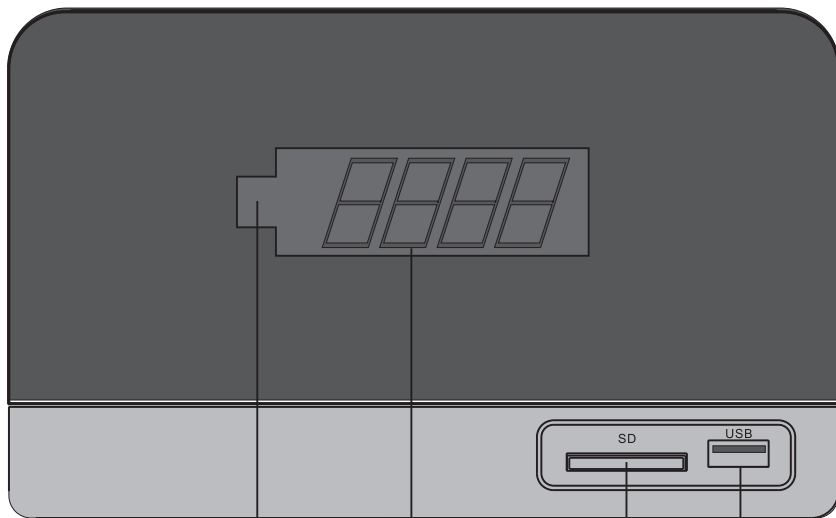


## FUNCTION KEYS

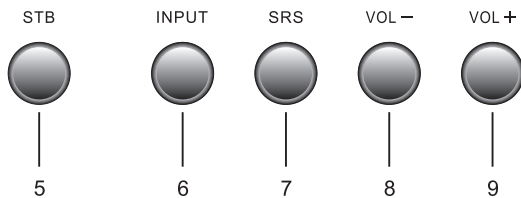


- |                 |                    |
|-----------------|--------------------|
| 1. IR           | 6. Input selection |
| 2. Display area | 7. SRS key         |
| 3. SD card slot | 8. Volume-         |
| 4. USB port     | 9. Volume+         |
| 5. STANDBY key  |                    |


**BACK PANEL FUNCTION**

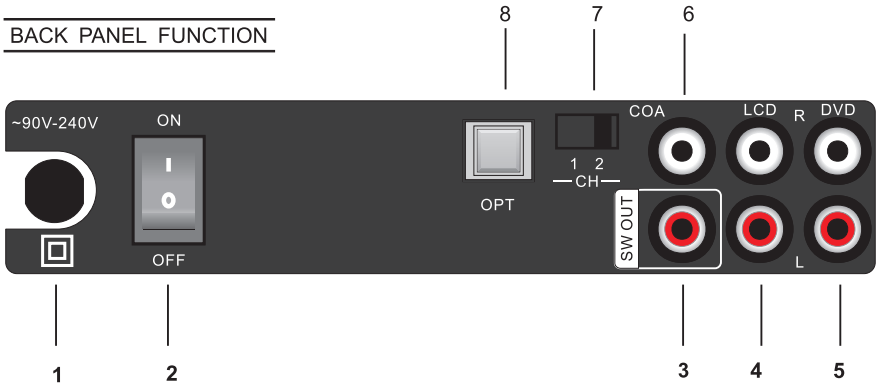

 - 1. Power cord
- 2. Power On/Off
- 3. Subwoofer output
- 4. TV audio signal input
- 5. DVD audio signal input
- 6. Coaxial input
- 7. Band select
- 8. Optical input

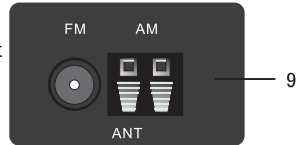

**BACK PANEL FUNCTION OF SUBWOOFER**

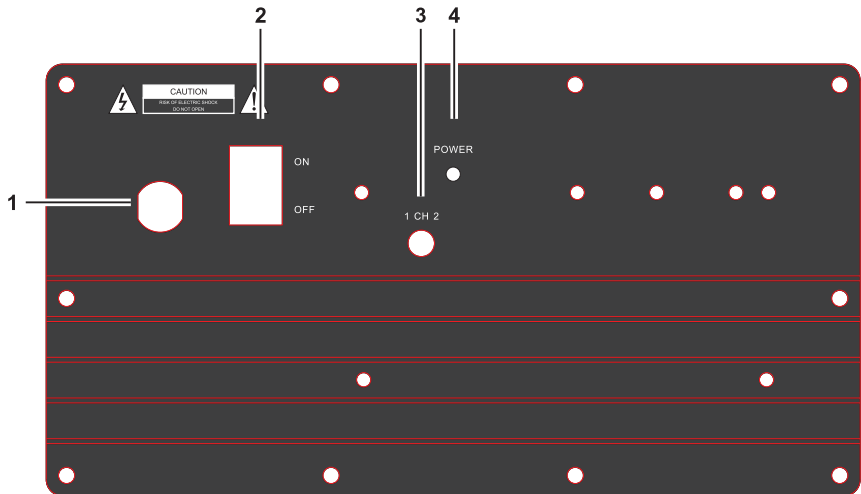

- 1. AC
- 2. Power On/Off
- 3. Band select
- 4. Power indicator

## Remote control system

- |                      |                    |
|----------------------|--------------------|
| 1. Standby           | 10. Treble vol+    |
| 2. SRS effect On/Off | 11. FM/AM switch   |
| 3. Prev              | 12. Freq fine tune |
| 4. Auto search       | 13. Next           |
| 5. Channel select    | 14. Play/Pause     |
| 6. Bass vol+         | 15. Reset          |
| 7. Bass vol-         | 16. Input select   |
| 8. Master Vol        | 17. Mute           |
| 9. Treble vol-       |                    |

## OPERATION

1. Connect input and output correctly per diagram.

Check wireless subwoofer transmission band switch "CH": soundbar and subwoofer should be matched, that is, when soundbar is set at "1", subwoofer should be set at "1" accordingly, otherwise there is no subwoofer output.

2. Power on:

2.1 Put both plugs of soundbar and subwoofer into AC power socket, switch on power of the soundbar and subwoofer, and standby indicator on soundbar is lighted and twinkle.

2.2 Press "STB" on soundbar front panel or on Remote Control. Soundbar and subwoofer enter into working status. Display screen will be "DVD". The default setting is "DVD" sound source input status. Subwoofer indicator light is on.

If you don't want to connect DVD, you can press "INPUT" key to select other input.

3. Music Playing:

3.1 Press "VOL+" and "VOL-" on front panel or on Remote Control to adjust the volume.

3.2 Press "SRS" on front panel or on Remote Control to turn on and turn off SRS status under music playing

3.3 Press "Bass +" or "Bass-" on Remote Control to adjust bass

3.4 Select "Optical" or "Coaxial" accordingly if the sound source is with digital output.

