


# kogan

KASPKXXBLTA

## USER MANUAL



# Safety Information

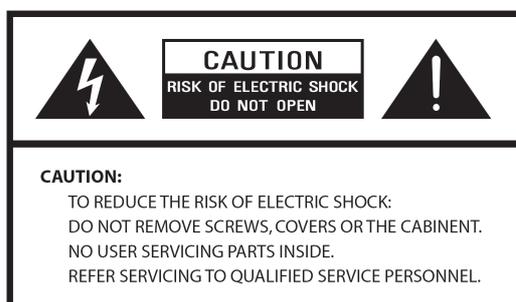

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electrical shock, fire, etc.:

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the apparatus immediately afterwards with a clean cloth. Do not use abrasive clothes, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.
7. Do not block any ventilation openings. The ventilation shall not be impeded by covering the ventilation openings with items, such as newspapers, table clothes, curtains, etc..

8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding

prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. If the power cord is damaged, it must be repaired by a qualified repairer.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
15. The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
16. Please read Rating Labels at the back of the unit for power input and other safety information.

# Contents



<a href="#">Safety Information.....</a>	<a href="#">2</a>
<a href="#">Contents.....</a>	<a href="#">3</a>
<a href="#">Introduction.....</a>	<a href="#">4</a>
<a href="#">Package content.....</a>	<a href="#">4</a>
<a href="#">Front Overview.....</a>	<a href="#">5</a>
<a href="#">Back Overview.....</a>	<a href="#">6</a>
<a href="#">Bluetooth Mode.....</a>	<a href="#">7</a>
<a href="#">Turning on.....</a>	<a href="#">7</a>
<a href="#">Pairing with Bluetooth devices.....</a>	<a href="#">7</a>
<a href="#">Aux in Mode.....</a>	<a href="#">9</a>
<a href="#">Troubleshooting.....</a>	<a href="#">10</a>
<a href="#">Technical information.....</a>	<a href="#">11</a>

# Introduction


Thank you for purchasing the KASPKXXBLTA Wireless Mobile speaker. Enjoy music wirelessly from your smart phone, tablet, laptop, or other Bluetooth enabled device anywhere you choose.

## Package content

What you can find inside of your package:

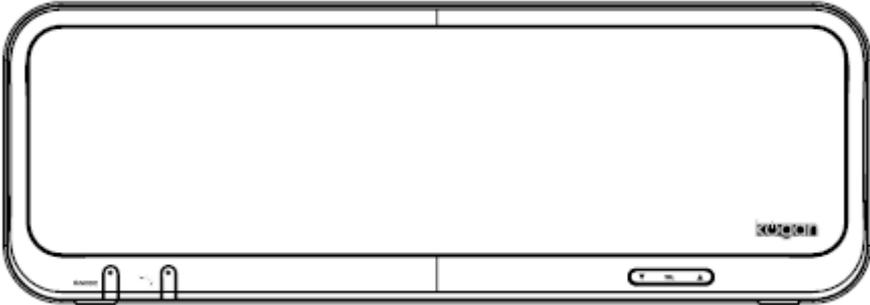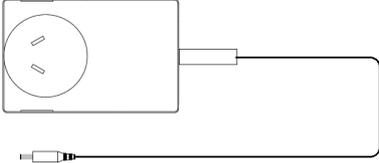
Main unit	
AC/DC Adapter	

## Front Overview

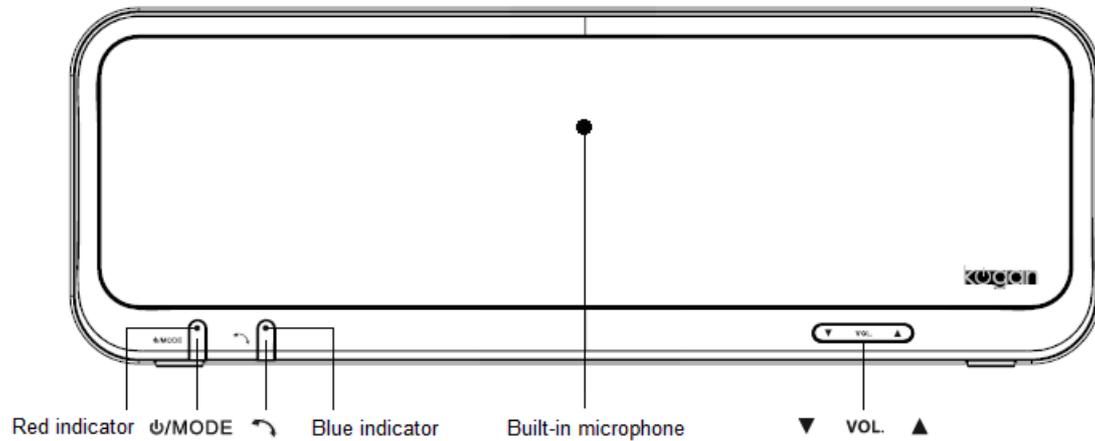

Control	All mode
⏻ / MODE	<ul style="list-style-type: none"> <li>a. Press to turn on speaker.</li> <li>b. While speaker is turned on, press to convert between Bluetooth and Aux in mode.</li> <li>c. Long press to turn off speaker.</li> </ul>
📞	When a call comes, press to answer the call, press again to hang up the phone.
▼ VOL. ▲	Press to adjust volume level.
<b>Red indicator</b>	Illuminates while speaker is turned on.
<b>Blue indicator</b>	<ul style="list-style-type: none"> <li>a. Blink slowly means speaker is attempting to pair with a new Bluetooth device or connect to a paired Bluetooth device.</li> <li>b. Remain steadily on means speaker is connected to a paired Bluetooth device.</li> <li>c. Blink quickly means a call is coming.</li> <li>d. Indicator off means speaker is in Aux in mode.</li> </ul>

## Back Overview

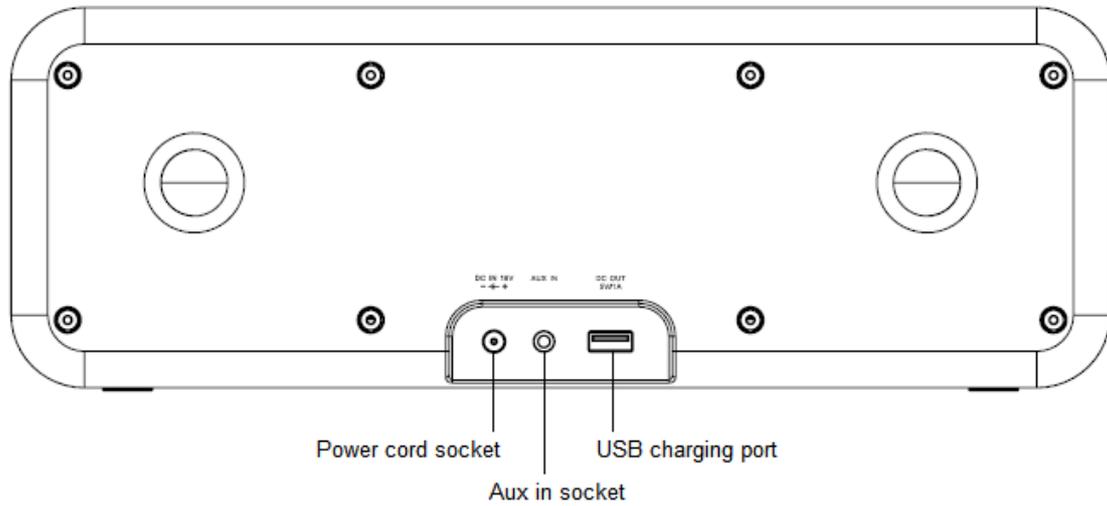

Items	Remark:
Power cord socket:	Connect to DC adaptor.
AUX IN socket:	It is for connecting the audio cable.
USB charging port	Output a 5V voltage for charging your smart phone.

# Bluetooth Mode

## Turning on

1. Before using your new KASPKXXBLTA speaker, firstly, you should connect it to power adapter.
2. Press  / **MODE** to switch on. The Blue indicator blinks slowly and waits for pairing with a new Bluetooth device or connects to an already paired Bluetooth device.

## Pairing with Bluetooth devices

Pairing occurs when two Bluetooth devices communicate with each other and establish a connection. A record of information about this connection is then stored in the memory of each device. Once you pair a device with the KASPKXXBLTA speaker, you should not have to pair it again.

### To begin pairing with a Bluetooth device

1. Turn on your Bluetooth device.
2. Set your Bluetooth device to “discover” the KASPKXXBLTA speaker, then locate the Bluetooth device list.
3. From the Bluetooth device list, select the device named “KASPKXXBLTA”.
4. If your device asks for a passkey, enter digits 0000 (four zeros) and press OK. Some devices also ask you to accept the connection.

Your Bluetooth device indicates when pairing is complete. The KASPKXXBLTA speaker indicates pairing is complete when the Blue indicator remains steadily on.

### To pair additional devices

Follow “**To begin pairing with a Bluetooth device**” steps 1-4.

### Clearing memory

The KASPKXXBLTA speaker memory can hold up to eight paired devices. When the memory is full with eight devices and an additional device is paired, the earliest paired device is deleted from memory

**To** clear the KASPKXXBLTA speaker memory of all devices, press and hold the  button about 10 seconds.

# Aux in Mode

You can use another audio device with your KASPKXXBLTA speaker. This requires using an audio cable with a 3.5mm plug on one end to connect with the Aux input on the KASPKXXBLTA system.

1. Press  / MODE to shift from BT. mode to Aux in mode.
2. Plug the cable from the audio device into the Aux connector on the back of the KASPKXXBLTA speaker.
3. To gain optimal volume levels, adjusting the output volume level on both the source device and the KASPKXXBLTA speaker itself is recommended.

# Troubleshooting

Problem	What to do
Speaker will not turn on	<ul style="list-style-type: none"> <li>• Make sure your system is connected to a working mains outlet.</li> </ul>
Paired Bluetooth device will not connect	<ul style="list-style-type: none"> <li>• If your device requires a passkey, make sure the one you entered was correct.</li> <li>• Turn the KASPKXXBLTA speaker off and back on.</li> <li>• Remove the KASPKXXBLTA speaker from the pairing list on your Bluetooth device pairing list. Then pair the device and the KASPKXXBLTA speaker again.</li> </ul>
KASPKXXBLTA speaker indicates a connection, but is not playing music	<ul style="list-style-type: none"> <li>• Turn off or disable Bluetooth on all other paired devices nearby and reconnect the device you want to hear.</li> <li>• Turn the KASPKXXBLTA speaker off and back on.</li> </ul>
Cannot pair the KASPKXXBLTA speaker with my Bluetooth device	<ul style="list-style-type: none"> <li>• Make sure your Bluetooth device is discoverable.</li> <li>• Your Bluetooth device may be out of range – try moving it closer to the KASPKXXBLTA speaker.</li> <li>• Make sure your Bluetooth device supports the transfer of audio.</li> <li>• Move your Bluetooth device and/or KASPKXXBLTA speaker away from other devices that generate electromagnetic interference.</li> <li>• If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality.</li> <li>• Turn the KASPKXXBLTA speaker off and back on.</li> </ul>
No audio from a Bluetooth device	<ul style="list-style-type: none"> <li>• Make sure your KASPKXXBLTA speaker is not muted, and the volume is up.</li> <li>• Make sure your Bluetooth device is playing audio, and the volume is up.</li> <li>• Your Bluetooth device may be out of range – try moving it closer to the KASPKXXBLTA speaker.</li> <li>• Turn the KASPKXXBLTA speaker off and back on.</li> </ul>
No audio from the AUX source	<ul style="list-style-type: none"> <li>• Make sure your connected device is on and playing.</li> <li>• Make sure your KASPKXXBLTA speaker is in Aux in mode.</li> <li>• Make sure the 3.5mm plug is fully inserted into the KASPKXXBLTA speaker.</li> </ul>

# Technical information

## **Power supply rating**

Input: 100-240VAC, 50/60Hz

Output: 18VDC, 2A Max

## **Dimensions**

H x W x D: 330mm x 135mm x115mm