

# Kids' Interactive Learning Pad

## Quick Start Guide

KATBLLNBLUA / KATBLLNPNKA

The Y-pad English Computer is an educational toy for kids. With five educational modes, the computer exercises eyesight and hearing, while working to develop a child's fine motor skills as well as their cognitive abilities.

### PRODUCT CHECKLIST

The following items are included:

- The Y-Pad English Computer



### Y-PAD SETUP BUTTONS

Note: this device does not have a LCD screen. The device has icon-shaped buttons which need to be pressed. This tablet is similar to the iPad in appearance only and is designed exclusively for educational purposes.



On/Off Button: toggles the computer voice on/off.



Volume Increase Button: increases the volume of the computer.



Volume Decrease Button: decreases the volume of the computer.



Light Switches: toggles the computer backlight on/off. A light surrounds the border of the Y-Pad.

## EDUCATIONAL MODES

The Y-Pad Computer has five different educational modes: Letter mode, Word mode, Spell Mode, Asking Mode and Demo Mode. Each mode has its own specific functions.



### *LETTER MODE*

In Letter Mode:

- When pressed, the numeric keys 1-10 resemble piano keys, each corresponding with a musical note.
- When the letters A-Z are pressed, the English pronunciation of those letters are spoken by the computer
- When the six keys – eg. milk, hotdog, hamburger, duck, frog and sheep - located at the bottom at the Y-Pad are pressed, the English pronunciation of those words are spoken by the computer.

### *WORD MODE*

In word Mode:

- When the letters A-Z are pressed, the English pronunciation of the corresponding words are spoken by the computer. (eg. when the user presses 'Aa', the word 'Apple' is pronounced aloud)

### *SPELL MODE*

In Spell Mode:

When the letters A-Z are pressed, the corresponding word is spelled aloud by the computer. (eg. When 'Aa' is pressed, the word 'apple' is spelled aloud: A-P-P-L-E).

### *ASKING MODE*

In Asking Mode:

- The computer asks the user to locate a specific letter or word. eg. The toy will ask "Where is Aa?" or "Where is 'Apple'?" Once the letter/word is selected, the computer will state if the selection is correct or incorrect.

### *DEMO MODE*

In demo mode:

One of two songs begins to play.

## **Y-PAD SPECIFICATIONS**

Size: 19.5 x 15 x 1.7cm

Box size: 23.5 x 19.5 x 2CM

Weight: 0.4kg approx

Battery requirements: 3x AA batteries

Power type: DC

Rated Voltage: 4.5V

## **WARNINGS / DISCLAIMERS**

- Functionality not equivalent to iPad. Y-Pad to be used as a children's educational device only.
- This product is not suitable for children under 3 years, due to the use of small parts
- Do not expose this device to moisture or sunlight. Doing so may affect normal operation and, in some extreme cases, endanger the user.
- Do not disassemble the product.
- Any misuse of the product will void warranty. In the event of product misuse, Kogan will not be responsible for damage or injury if applicable.
- If you believe the computer has malfunctioned or requires repair, please refrain from attempting to repair it yourself. Refer all servicing matters to qualified personnel, or contact the Kogan Customer Support Team.

### *Battery Warning:*

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries should be removed from the toy before being charged (if removable)
3. Rechargeable batteries are only to be charged under adult supervision (if removable)
4. Do not mix alkaline, standard or rechargeable batteries.
5. Do not mix old and new batteries.
6. Batteries must be inserted in accordance with the correct polarity.
7. Drained batteries must be removed from the toy.
8. The supply terminals are not to be short-circuited.
9. Only batteries of the same or equivalent type are recommended for use.