

# kogan

## Digital Magnetic Timer KATIMERBLKA Quick Start Guide



### Using Timer

1. Clear display by pressing MIN and SEC buttons simultaneously. The display will show "00.00".
2. Set desired time with the MIN and SEC buttons. Press and hold to add time quickly.
3. Press START/STOP button to begin timing; alarm will sound when set time is reached.
4. Press START/STOP button to stop alarm sound.

NOTE: You can press the START/STOP button to pause and resume countdown.

### Cleaning & Care

- Wipe clean with a dry cloth.
- Do not immerse in water or allow to become wet or damp.
- Do not place near fire or heat source or leave in the sun for extended periods of time.
- Change battery promptly when display is faint or product does not work.


### Battery

Replace with same type: 1.5V (LR1154H, AG13 or LR44 also compatible).

#### WARNING – KEEP BATTERIES OUT OF REACH OF CHILDREN



- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.

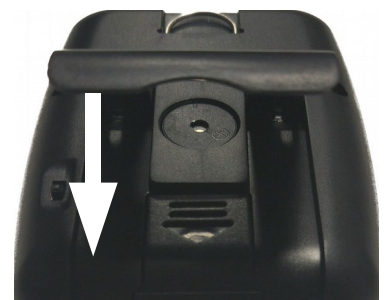

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>