

kogan

Professional 2 in 1 Tripod / Monopod KATPD21PROA Quick Start Guide


Package Contents

- Tripod
- Carry case
- Quick Start Guide

Features

- Holds most camcorders and cameras that take a 1/4-20 mounting screw.
- Removable center column can be used as a 58.7" monopod.
- Ultra-fluid 3-way pan head for precise setting and smooth video.
- Dual bullseye levels to ensure maximum levelling of the camera.
- Quick-flip leg locks for quick and easy setup.
- Collapses to 24.2" for portability.
- Aluminium legs for light weight and ultra durability.
- No-slip rubber feet for stability.
- Supports cameras or camcorders up to 5kg (11lbs).

Product Layout

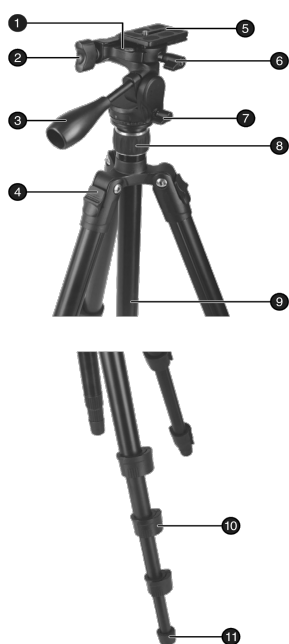

#	ITEM	DESCRIPTION
1	Levelling bubble	Quick release plate is level when the bubble is centred.
2	Vertical tilt lock knob	Adjusts camera angle for landscape and portrait orientations.
3	Vertical tilt lock handle	Adjusts vertical tilt for head.
4	Leg release button	Lets you adjust the leg angle position
5	Mounting plate	Holds the camera
6	Quick-release plate locking knob	Secures the quick-release plate to the tripod.
7	Pan locking knob	Locks the tripod head so that it will not rotate horizontally.
8	Center column locking screw	Locks the center column in place.
9	Center column / monopod leg	Provides quick height adjustment.
10	Flip-lever leg locks	Locks the legs in place.
11	Rubber feet	Provides a secure, non-slip footing for the tripod.

Product Usage

Setting up your tripod

1. Open the flip-lever leg locks on each leg.
2. Extend the leg sections from the top down (thickest section first) to reach the height you want.




3. Close the flip-lever leg locks on each leg.
Caution: incorrectly securing a leg lock can cause the tripod leg to retract unexpectedly and could result in damage to the tripod or to the attached camera or camcorder.
4. Adjust the height of the center column by loosening the center column locking screw, raising the center column to the height you want, then tightening the locking screw.
5. To set the angle position of the legs, press the leg release buttons and lift the tripod leg.
6. To remove the mounting plate, turn the quick-release plate locking knob counter-clockwise to loosen it, then turn the quick-release plate locking knob open. Then lift the mounting plate to remove it.



7. Align the bottom of your camera or camcorder with the 1/4" mounting screw, then secure your camera or camcorder to the plate with the screw. The screw should be tight.
8. To attach the mounting plate to your tripod, loosen the quick-release plate locking knob, then slide the plate onto the tripod head. Tighten the quick-release plate locking knob.

Using your tripod

1. To adjust your camera to the portrait position, loosen the vertical tilt lock knob, rotate the plate up to 90°, then tighten the knob.

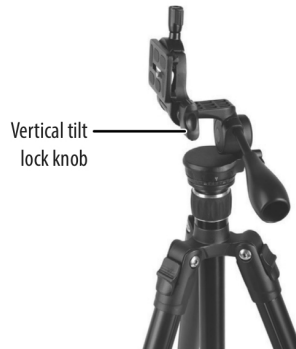

2. To adjust horizontal tilt, turn the pan locking knob counter-clockwise, tilt the tripod head as desired, then tighten the handle.
3. To pan, turn the pan locking knob counter-clockwise, pan the tripod head, then tighten the knob to lock in place.
Note: for maximum stability, always make sure that your camera lens is over a leg.
4. To adjust the vertical tilt, loosen the vertical tilt handle, then use the handle to adjust the vertical position. Tighten the vertical tilt handle.

Convert to a monopod

1. Loosen the center column locking screw, then remove the center column / monopod leg (with the pan head).
2. With one hand, grab all the twist screw leg locks on the monopod leg and twist them counter-clockwise to loosen them.
3. Extend the leg sections, starting with the thickest section, to the height you want.
4. Twist each leg lock clockwise to tighten it.
Caution: incorrectly securing a leg lock can cause the monopod leg to retract unexpectedly, which may result in damage to the monopod or the attached camera or camcorder.



Storing the tripod

1. Remove your camera.
2. Loosen the center column locking screw. Lower the column as far as it will go, then tighten the locking screw.
3. Collapse the legs.
4. Press the leg release buttons, then push the legs in.
5. Store the tripod in the carry case.

Important Safety Instructions

- Make sure that all leg locks are correctly tightened and that the legs are fully open before use.
- Do not carry or transport your tripod with camera equipment attached (for example, over your shoulder or cradled in your arms).
- Do not expose your tripod to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use only a mild detergent and wipe dry with a soft, lint-free cloth.
- Do not exceed the load limit of the tripod.

Specifications

- Maximum operating height: 168.9cm (66.5")
- Minimum operating height: 56cm (22.1")
- Folded height: 61.5cm (24.2")
- Net weight: 2kg
- Maximum operating load: 5kg
- Number of leg sections: 4
- Quick release thread: 1/4" (0.6cm)
- Material: Aluminium alloy

If you have any further questions regarding the use of this product, please contact the Kogan customer support team.