

KOMODO

Magnesium Fire Starter KDFREMGSTRA Quick Start Guide

Product Layout

The Fire Starter consists of a magnesium flint bar attached to a handle, as well as a striker blade.

For added convenience and security, the flint bar and striker blade are connected via rope.



Usage

Preparing the fire

1. **Gather kindling and tinder for your fire.** For example you can use twigs, branches, dry leaves, grass, bark or paper.
2. **Pile the tinder into a loose collection so that all of the flammable items are in close proximity to each other.** This will ensure that when one item catches fire, it will easily transfer to other kindling items.

Starting the fire

1. **Ignite the fire by striking the flint bar sharply in a shaving motion with the striker blade.** By holding the flint bar at a tilted angle over the kindling, you can “fire” the sparks created into the kindling.
2. **Continue to strike the blade against the flint bar, until the sparks you have created have landed onto the tinder and have caught fire.** If the flint bar is not giving off enough sparks, try to scrape harder against the bar.

Maintaining the fire

- Once the fire is lit, you should ensure that the fire continues to burn steadily.
- Blow gently on the fire once the tinder has ignited to spread the flames.
- Once the flames are catching, place additional tinder onto the flames to fuel the fire.

Tips

- Practice using the Magnesium Fire Starter in your backyard or another outdoor location before taking it with you camping or into the wilderness. This will allow you to master the use of the product before you encounter a situation where building a fire could be crucial to your survival.
- Please stay alert to the conditions of your fire. Do not leave the fire unattended, as it may spread. Kogan.com is not liable for any injuries or damages caused by an unattended fire that has been created using this product.