

kogan

**Ionic Fridge and Car
Deodoriser**

KHIONFRDEOA

USER MANUAL



Features and Functions

This innovative device utilises ionic technology to generate ozone (O₃) and anions (negatively charged atoms) to purify the air thoroughly.

1. Neutralise stale and foul odours with fresh air inside refrigerators, closets, bathrooms and cars etc..
2. Kill all kinds of bacteria to avoid the growth of mildew.
3. Ideal for use in the refrigerator to keep food fresh for longer.
4. Built-in micro CPU intelligently controls the operation cycle and mode by one touch, with coloured LED indicators.
5. Operated by 3 AA batteries. Low voltage indicator reminds you when to replace the batteries.

How to Operate

1. Remove the battery door on the bottom of the unit and install 3 AA alkaline batteries (not supplied), taking care to align the correct polarities. Close the battery door.
2. Press the **ON/OFF** button once and the power indicator light will come on. You may feel a slight breeze from the top grilles, which means the unit is working.
3. Press the **ON/OFF** button again to turn off the unit.
4. Operating mode settings:
 - When the machine is turned on, press the **MODE** button to toggle the operating modes between HIGH and LOW.
 - When the HIGH mode is selected, the power indicator will light up in green and flash. The machine firstly performs a continuous cycle for 30 minutes, then the power indicator will blink every 2 seconds. The machine will then go into a cycle of automatic 1-minute sterilisation and deodorisation once every hour. For the rest of the time, the machine will go to sleep and the power indicator will blink once every 10 seconds.
 - When the LOW mode is selected, the power indicator will light up in orange and flash. The machine firstly performs a continuous cycle for 20 minutes, and the power indicator will blink every 2 seconds. The machine will then go into a cycle of automatic 40-second sterilisation and deodorisation once every hour. For the rest of the time, the machine will go to sleep and the power indicator will blink once every 10 seconds.
5. When the power indicator becomes red, this is the built-in low voltage indicator reminding you to change the batteries.

Attention

When the machine is used in the refrigerator:

1. Make sure to place it into the refrigerator compartment and NOT into the freezer.
2. Before taking it out of the refrigerator, be sure to turn off the power first. Due to the lower temperature of the refrigerator, when the machine comes into contact with the warmer outside air, water condensation will form on and in the body. If the machine keeps working in this state, it may lead to a short circuit of the electrical components.
3. When the indicator turns red, it is time to change the batteries. Take the machine from the refrigerator, then wrap it in a clean plastic bag. Before replacing the batteries, make sure the temperature of the unit has risen up to room temperature.

Caution

1. Take out the batteries if the unit will be idle for a long time.
2. Do not operate the unit in areas where flammable or combustible products or vapors may be present.
3. Keep the unit away from water.
4. Do not drop, throw, shake or knock the unit against hard surfaces, as the delicate circuitry inside may be damaged.