

KROMO

Kromo Heated Drying Rack KRRACKHEATA

Voltage: AC220V-240V 50Hz

Power: 230W



To avoid damage or possible injury due to improper use, please keep a copy of this user manual handy for future reference.

Safety

- Never use the rack with a damaged cord. If the power cord is damaged, it must be replaced by a Kogan.com technician or qualified electrician to avoid a shock or fire.
- Before cleaning, the rack should be unplugged from the power supply.
- This rack is intended only for drying fabrics washed in water.
- This rack is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given prior supervision or instruction regarding the use of the rack by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the rack.
- In you hear any strange sounds, smells or smoke coming from the rack, unplug it immediately and contact the Kogan.com customer support team.

Mounting

1. Unfold the clothes rack in a convenient location. (Image A)

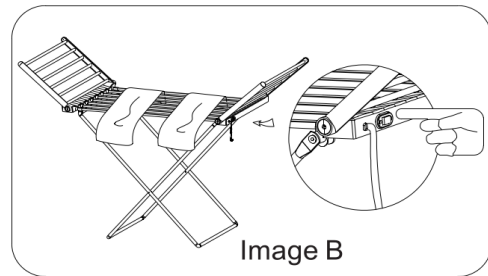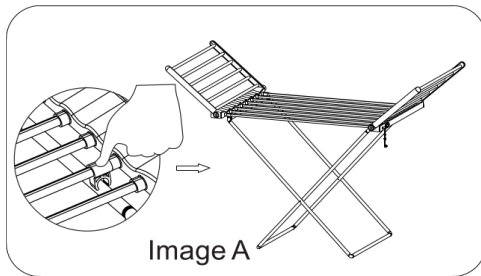

2. Plug the clothes rack into a power socket and switch the socket on.
3. Turn the switch to ON, and the power light will light up. After a short time, the rack will have reached its operating temperature. (Image B)
4. Switch the rack off after use.

Disposal

- Please think of the environment!
- Dispose of packaging via your recycling methods in your local area.
- Do not dispose of the rack at the end of it's lifespan with household waste.

Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact Kogan.com support.