

**Lifepoint Photo Printer**  
User Manual

Welcome to the Lifeprint network. This user manual offers you a brief overview of how to use your new Lifeprint printer. Please contact our team at support@lifeprintphotos.com for additional information and technical support.

### **Safety Information**

For safety, as well as for the longevity of your device, please read these instructions carefully and adhere to them at all times.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.
- Only shielded interface cables should be used.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of this device.

FCC ID: 2AJH8LP001

### **CE Warning**

- Changes and modifications to the equipment not expressly approved by the guarantee or manufacturer could void the user's authority to operate the equipment.
- It is recommended that this equipment be installed and operated with at least 8" between the device and the user (excluding extremities: hands, wrists, feet, and ankles).

CE 0678

### **EN Test Regulations**

ETSI EN 300 328 V1.8.1

ETSI EN 301 489-1 V1.9.2

ETSI EN 301 489-17 V2.2.1

EN 60950-1: 2006+A11: 2009+A1: 2010+A12: 2011

### **Battery Safety**

1. Avoid contact with leaking or damaged battery.
2. Do not short battery terminals.
3. Adult supervision is recommended when young children use product.
4. Avoid exposure to excessive heat or moisture.
5. Do not disassemble battery.

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potentially adverse effects on the environment and human health.



This label on the product means it should not be disposed of as unsorted waste, and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

### Technical Specifications:

Model Number: LP001

Operating Power Voltage (Battery): Li-ion Polymer 7.4 V / 500 mAh

Operating Power Voltage (USB Charging): DC 5 V 1.0A

Height: 22.6 mm

Width: 74.5 mm

Length: 116.5 mm

Weight: 182 g

Communication: Bluetooth 4.0

Support Media: ZINK Lifeprint Film

App Compatibility: iOS 8 or higher, Android 4.2 or higher.

### Disclaimer:

Products design and specifications are subject to change without notice.


### In the Box:

Printer

USB Cable

ZINK® Photo Paper (10 pack)

Quick Start Guide

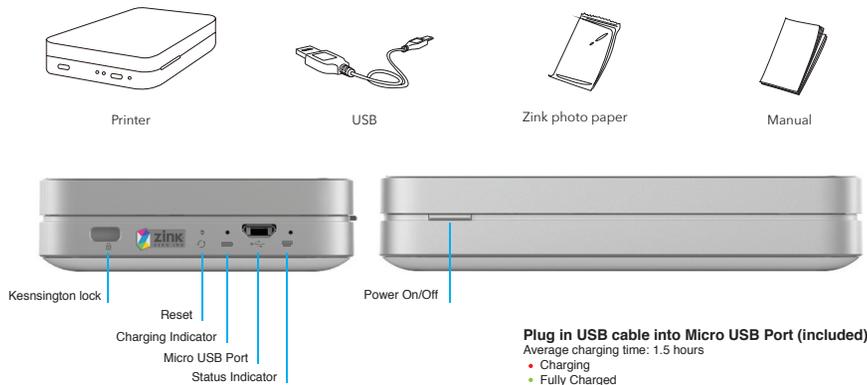


### Charging & Power:

Charge battery fully before first use. Average charging time from empty to full is approximately 1 hour and 30 minutes.

1. Connect smaller end of included USB cable to Micro USB Port.
2. Connect other end to computer, or use adapter (not included) to connect to wall outlet.

3. Charging Indicator will remain red while charging, and turn green when battery is fully charged.
4. To power on, press and hold Power Button for 4-5 seconds.
5. To power off, press and hold Power Button for 2-3 seconds.

### Charging Units:

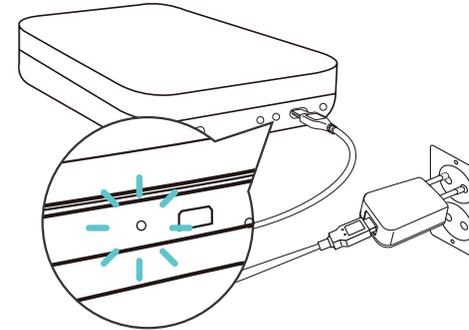


1.2A charger = 1.5 hours\*

\*more or less than 10% difference on time depending on actual charger.


### Inserting Photo Paper:

1. Ensure printer is powered off before inserting paper.
2. Place thumbs on cover while holding onto printer underside with other fingers.
3. Push cover gently away from paper output slot. Cover will slide back just a bit.
4. Lift cover up to remove from bottom of printer.
5. Unpack included photo paper, and insert with blue Smart Sheet facing down.
6. Replace lid by aligning with bottom of printer and sliding forward toward the paper output slot.

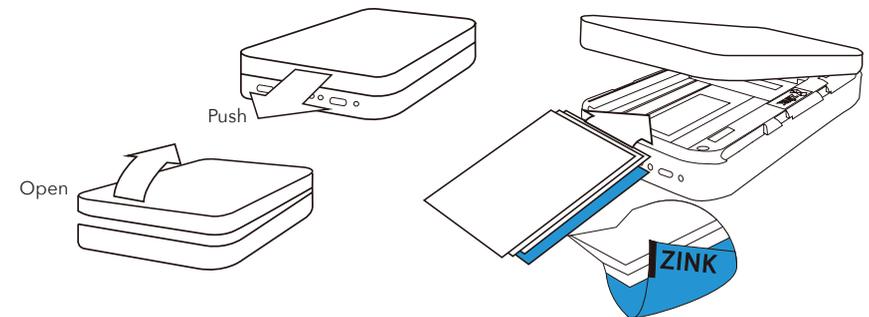

## Bluetooth Pairing for Android:

1. Press and hold the Power button on your Lifeprint printer for 4-5 seconds to power on the printer.
2. Open Settings, select Bluetooth, and make sure Bluetooth is On.
3. Tap Scan for devices to locate the Lifeprint printer.
4. Select Lifeprint from the Available Devices list. Pairing is complete when Lifeprint appears in the list of Paired Devices.

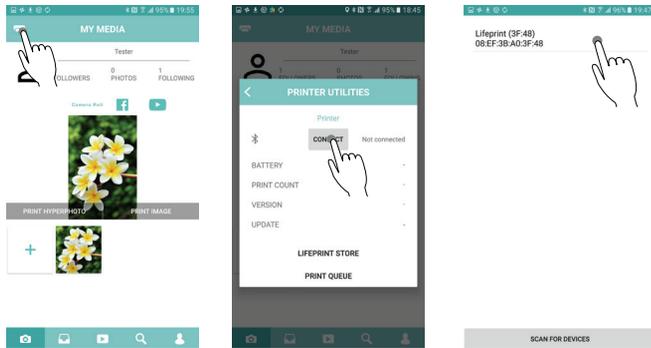

## LED Indicators:

### Charging Indicator

- Off:** Device is not connected
- Red:** Charging is in progress
- Green:** Charging is complete

### Status Indicator:

- Off:** Device is powered off
- Solid White:** Device is on standby, awaiting print command
- Flashing White:** Device is either powering on, accepting image transmission, processing an image, or is cooling on standby
- Flashing Red:** Error alert including no paper, paper jam, canceling print job, cover open, low battery, image not supported, update failure.


## Downloading the Lifeprint App:

Visit the Apple App Store or Google Play and search for Lifeprint.




## Bluetooth Pairing for iOS:

1. Press and hold the Power button on your Lifeprint printer for 4-5 seconds to power on the printer.
2. Open Settings, select Bluetooth, and make sure Bluetooth is enabled.
3. Tap on Lifeprint in the My Devices list. Pairing is complete when the status changes to Connected.

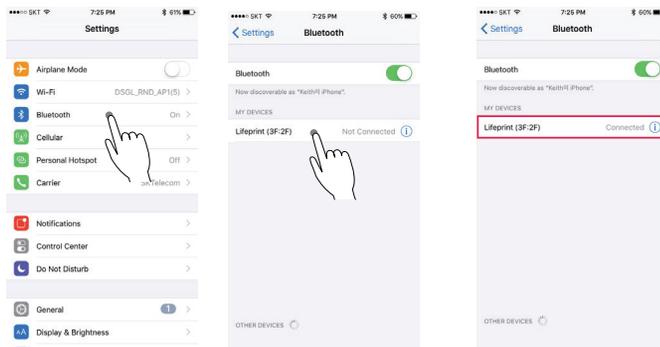

## Using the Lifeprint App:

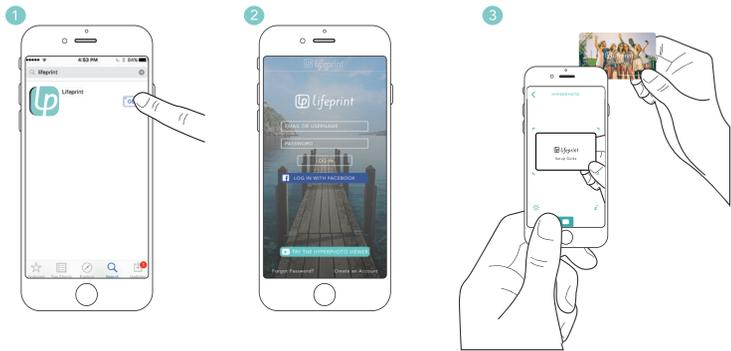

**My Media** - This is a repository of all your photos in your camera roll as well as social media. You can access your various social media accounts through the app so you can print directly from those sources in addition to images stored on your device.



**PrintBox** - The PrinterBox is where you will receive notifications and alerts when someone sends you an image. You can also view your saved photos here.



**LiveViewer** - This is the Lifeprint augmented reality viewer, which you use to make your hyperphotos come to life!



**Explore** - This is where you can see what your friends are up to and also explore to see what other Lifeprint users are sharing in the LifePrint network.



**Profile** - This is what other users will see when they visit your page. Manage the people you follow and your followers, add or remove photos, and update your profile photos.

## Printing Quickly with the Lifeprint App:

1. Select an image or video from the My Media screen and tap Print Image.
2. Crop and edit that photo using our suite of editing tools.
3. Select the amount of copies you want to print and indicate whether you want to share the image with your followers or keep it private.
4. Hit the print button. You will see a status-loading bar and your photo will print in about 30 seconds.

## Compatibility and Trademarks

Requires iOS 8 or later. Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. In Japan the trademark iPhone is used with a license from Aiphone K.K. App Store is a service mark of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Requires Android 4.2 or later. Android and Google Play are trademarks of Google, Inc.

ZINK® Technology and the ZINK® trademarks are owned by ZINK Imaging. Used under license.

© Lifeprint 2016. All Rights Reserved.