


PURE

One Mini
Series 2

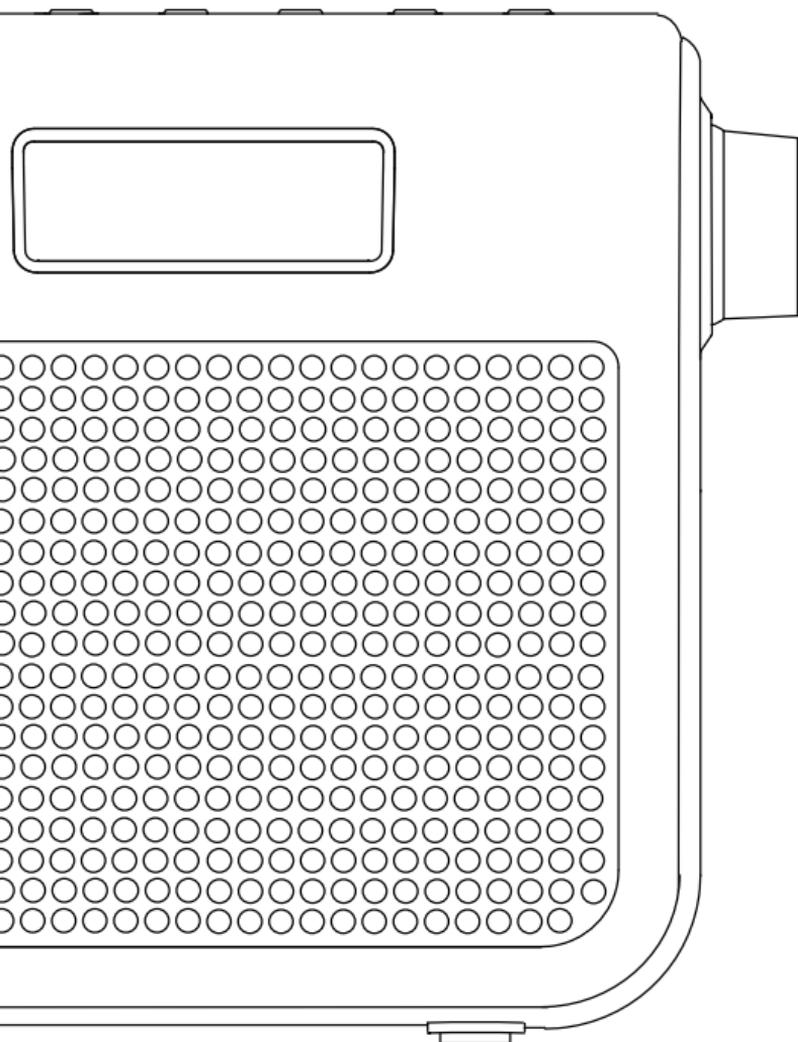

Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at <https://www.pure.com/au/register/register.asp>

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free: 1800 988 268

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear.
- Products with serial number defacement, modification or removal.
- Water damage or corrosion caused by dampness.
- Any damage or deterioration due to shipments.
- Any damage or deterioration due to shipment.
- Any product which has been subjected to misuse, abuse or accident.

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

One Mini

Series 2

Thank you for choosing One Mini. This manual will help you get your product up and running in no time and explains how to get the best out of all its great features. If you need any further assistance, please visit the support pages on our website at www.pure.com.



Safety Instructions

1. Keep the radio away from heat sources.
2. Do not use the radio near water.
3. Avoid objects or liquids getting into the radio.
4. Do not remove screws from or open the radio casing.
5. Fit the mains adapter to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.
6. Always switch the unit off and disconnect it from mains power before inserting or removing a ChargePAK.
7. Should not be immersed in water, used in shower or bathroom if plugged into the mains.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

One Mini Series 2, textSCAN, ChargePAK, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2012 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 1 April 2012.

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Contents

4 Getting started

- 4 Quick set up
- 5 Controls at a glance
- 6 Side connectors
- 6 Display
- 6 Adjusting the volume

7 Listening to radio

- 7 Selecting digital radio
- 7 Changing digital stations
- 7 Selecting FM radio
- 7 Seek tuning
- 7 Manual tuning

8 Using radio presets

9 Basic options

- 9 Autotune
- 9 Using textSCAN to pause and control scrolling text
- 9 Changing the language

10 Advanced options

- 10 Upgrade
- 10 Reset

11 Installing the ChargePAK B1


12 Technical specifications

Getting started


Quick set up

Note: If you have a ChargePAK B1 rechargeable battery (sold separately) fit it now before plugging One Mini in. See page 11 for more information.

- 1 Unclip the aerial and fully extend it (steps **A** and **B**).
Insert the jack of the supplied mains adapter into the socket on the rear of the radio (**C**).
Plug the mains adapter into the mains supply. (**D**).

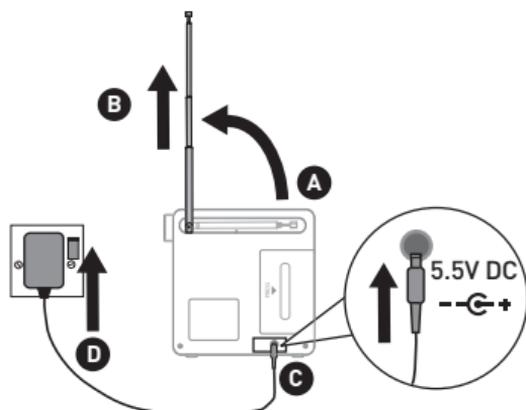


- 2 Wait for the radio to complete an Autotune for all available stations.
When the Autotune is complete, a station will be selected.

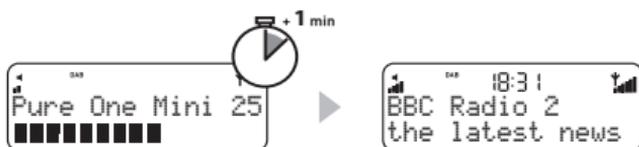


Note: By default, the menus on One Mini are displayed in English. To use another language (Italian, German or French) see page 9.

Controls at a glance

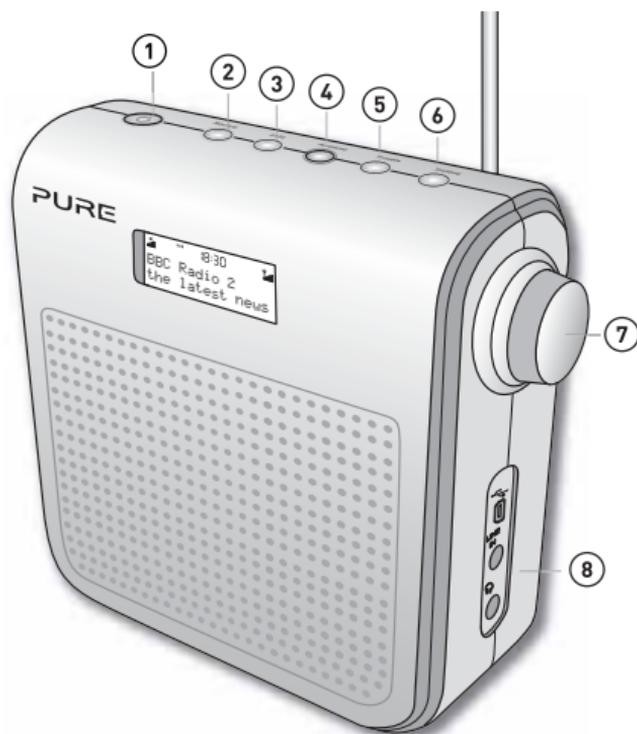


No.	Name	Description
1	Standby	On/standby switch (mains powered) or on/off switch (ChargePAK powered).
2	Source	Press to switch between digital and FM radio.
3	Info	Press to switch between scrolling text and the date.
4	Autotune	Press to scan for new stations and remove inactive ones.
5	Presets	Store and select presets. See page 8.
6	Stations	Press then use the Dial to change stations. See page 7.
7	Dial	Turn to adjust volume or scroll stations. See page 6.
8	Side connectors	USB, headphone and aux in connectors. See page 6.

Side connectors

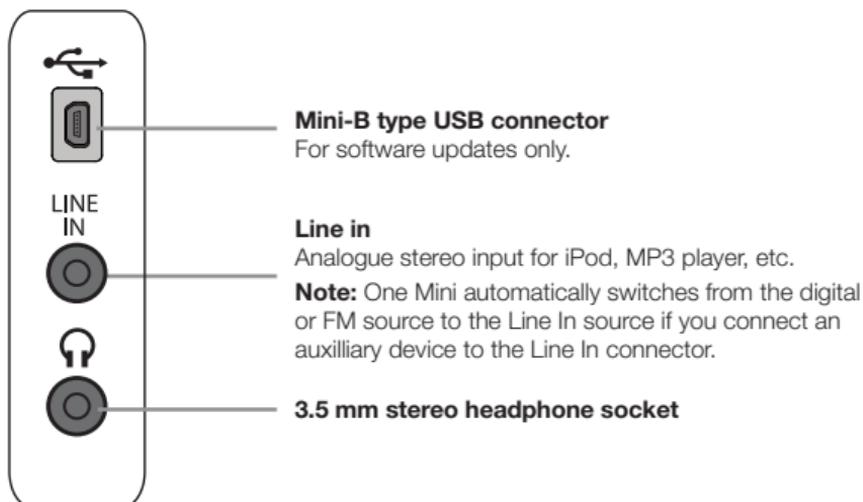

Display

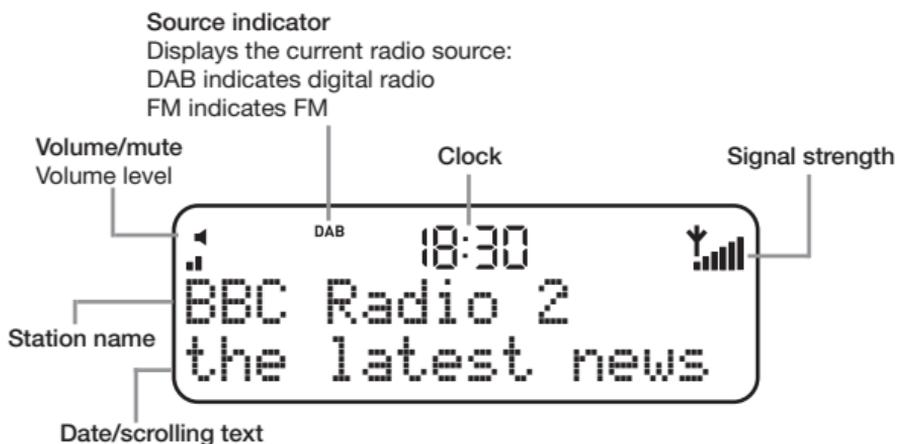

Adjusting the volume

Turn the **Dial** to adjust the volume.



Listening to radio



Selecting digital radio

Press **Source** until 'DAB' is displayed at the top of the screen.




Changing digital stations

1. Press **Stations** so that the scroll symbols ♦ ♦ are shown on the display.
2. Turn the **Dial** to the station you want to listen to.
3. Push the **Dial** to tune into the station.




Selecting FM radio

Press **Source** until 'FM' is displayed at the top of the screen.

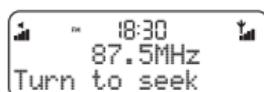

Seek tuning

1. Press **Autotune** so that 'Turn to seek' is shown on the display.
2. Turn the **Dial** to automatically scan for the next station. The scan will stop when a station with a strong signal is found.

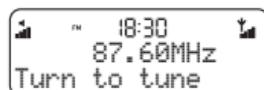


Manual tuning

1. Press **Stations** so that 'Turn to tune' is shown on the display.
2. Turn the **Dial** to the required frequency.

Using radio presets

Store up to 8 digital and 8 FM radio stations for quick access.

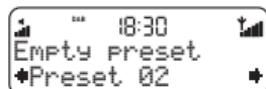

Storing a radio preset





1. Tune into the station that you want to store.
2. Press **Presets**.
3. Turn the **Dial** to the required Preset number.
4. Push and hold the **Dial** for two seconds to store the radio station as a preset.

Note: To overwrite a radio preset, tune into the station that you want to store and follow the above steps.

Selecting a radio preset

1. Press the **Presets** button.
2. Turn the **Dial** to the station that you want to listen to.
3. Push the **Dial** to tune in to the station.

Basic options

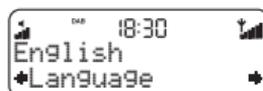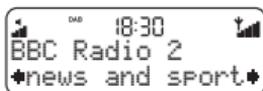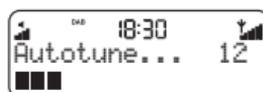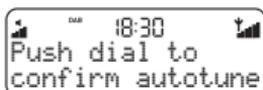

Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.

Note: Autotune is only available when you have selected 'Digital' as the radio source.

1. Press **Autotune**.
2. Push the **Dial**.
The number of stations found will be displayed during the autotune.
3. When the autotune has finished, One Mini will tune to the last station that you were listening to.

Using textSCAN to pause and control scrolling text

1. When 'Scrolling text' information is displayed in either digital or FM radio, push the **Dial** to pause the scrolling text.
2. Turn the **Dial** again to scroll forwards and backwards through the text. To exit textSCAN push the **Dial** again.


Changing the language

1. Press **Info** and hold until 'Language' is displayed on the screen and push the **Dial**.
2. Turn the **Dial** until the language you want to use is displayed.
3. Push the **Dial** to save your changes.

Advanced options

Upgrade

Contact Pure technical support (<http://support.pure.com>) for more information on how to update One Mini to the latest software version.

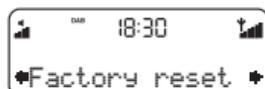


Reset

Resetting your One Mini removes all presets, stored stations and resets all other options to default settings.

1. Ensure your aerial is fully extended and vertical.
2. Press and hold **Info** for two seconds.
3. Turn the **Dial** to 'Factory reset'.
4. Press the **Dial** to confirm that you want to reset the One Mini to default settings.


Installing the ChargePAK B1

2

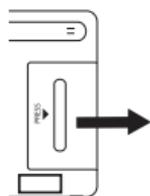


1. Switch One Mini off and disconnect from the mains power supply.
2. Open the battery compartment.
3. Insert the ChargePAK connector plug into the socket in the compartment. Line up the ridges on the plug with the slots in the socket to ensure correct orientation. Do not force the plug.

3

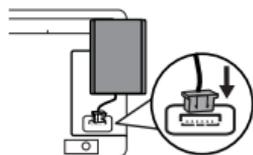


4. Insert ChargePAK into the battery compartment, logo side out.
5. Replace the battery cover and connect One Mini to the mains.
6. ChargePAK will begin charging.

4

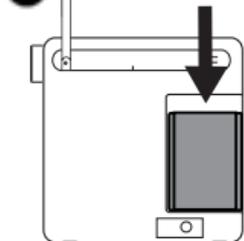

Note: When charging your ChargePAK for the first time or after an extended period of inactivity it is recommended that it is charged for around 24 hours to ensure full battery power. If ChargePAK is in a highly discharged state there may be a slight delay before the battery charging indicator is displayed.

5

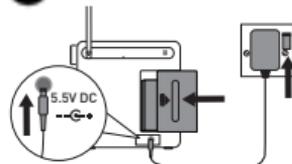

Technical specifications

Radio	Digital and FM, UK products receive DAB and FM; non-UK products receive DAB/DAB+/DMB-Radio/FM depending on region.
Audio	1.6W RMS. Full-range 3" drive unit.
Input Connectors	5.5V DC power adaptor socket (230V supplied), Mini USB connector for product upgrades, 3.5mm Line-in for auxiliary devices
Output Connectors	3.5mm headphone socket.
Power	230V AC to 5.5V (1.0A) DC external power adapter or optional ChargePAK B1.
Power Consumption	Standby: 0.70W, Active: 1.9W.
Approvals	 CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC) ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.

Pure

Imagination Technologies Ltd
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
<http://support.pure.com>

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>

PURE

www.pure.com

www.thelounge.com

www.facebook.com/pure