

REMINGTON®

X-SYSTEM DUAL FOIL X TITANIUM



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

2 YEAR WARRANTY

F5800AU

IMPORTANT SAFETY INSTRUCTIONS - READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, basic precautions should always be observed, including the following. For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off. The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired. Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

SAVE THESE INSTRUCTIONS

F5800AU X-SYSTEM DUAL FOIL X TITANIUM USE AND CARE MANUAL

Thank you for purchasing your new Remington® X-System Dual Foil X Titanium Shaver. Inside this manual you will find tips on using and caring for your shaver.

KEY PARTS

- 1 Dual Foils
- 2 Intercept Trimmer
- 3 Cutter Assembly
- 4 Hair Pocket
- 5 Pop up Trimmer (rear)
- 6 On/Off Switch
- 7 Battery indicator
- 8 Power Port

ALSO INCLUDES


- Head Guard
- Cleaning Brush
- Storage Pouch
- Power Adaptor



ABOUT YOUR SHAVER

F5800AU SPECIFICATIONS	
Power System	Cord/Cordless
Initial Charge Time	24 Hours
Full Charge Time	2 Hours
Runtime	60 Minutes
Quick Charge	5 Minutes
Indicators	LED Battery Indicator
Voltage Type (adaptor voltage type)	Worldwide 100-240V
Washable	Yes
Replacement Part No.	SP-300AU

CHARGING

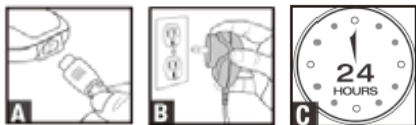


BEFORE USING, READ THE IMPORTANT SAFETY INSTRUCTIONS IN THIS MANUAL.

1. Ensure the product is switched off. Connect the shaver to the adapter (Diagram A).
2. Connect to the mains (Diagram B) and charge for at least 24 hours when using for the first time (Diagram C). This first charge is important to the shaver's battery life.
3. When plugged in, the charging indicator will light up.
4. When empty, the battery should be charged for 2 hours, and will provide 60 minutes of shaving time.
5. To preserve the life of the batteries, allow them to fully discharge every six months, and then recharge them for 24 hours.

CAUTION!

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

SHAVING

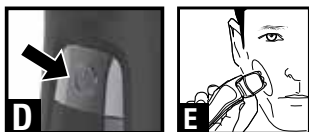

1. Press power button to turn on. (Diagram D)
2. Pull the trimmer release button to engage the trimmer, and use it to remove long hair first. Then push the trimmer downward to lock it in when finished.
3. Shave the face and neck using short, circular strokes. (Diagram E). The independent flexing foils will automatically adjust to the contours of your face.
4. After shaving, turn the shaver off by pressing the power button.

SHAVING TIPS

- Ensure your skin is free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movements.
- The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.

- Do not press hard against the skin to avoid skin irritation and/or damage to the shaver head.

NOTE: We recommend that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system.

CLEANING AND CARE

CARING FOR YOUR SHAVER:

This shaver is a washable appliance. The head assembly part may be cleaned under warm water.

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

CAUTION!

- Shaver can be placed under running water for cleaning only. Never submerge the shaver in water.
- Never clean the shaver or replace the cutters while it is plugged into an electrical outlet. Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's foils and cutters.
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.

Cover the shaver foils with the protective head guard between uses. When removing the head guard or placing it back onto the shaver, do not apply pressure to the foils as you may damage them.

CLEANING YOUR SHAVER:

Daily Cleaning:

NOTE: We recommend following these steps after each use.

1. Grasp the front and back of the cutter assembly and pull away from the shaver body. (Diagram G)
2. Tap the stubble from the foils and cutters.
3. Use the cleaning brush to sweep any loose hairs from the cutters and trimmer. Rinse them in cold or warm water. DO NOT use hot water. DO NOT submerge the shaver in water. (Diagram H & I)
4. After cleaning, replace the hair pocket assembly. (Diagram J)



Monthly Cleaning:

1. Perform the daily cleaning steps 1-3.
2. Place a drop of liquid soap on the inside near each set of cutters. (Diagram K)
3. Brush the soap around vigorously with the supplied cleaning brush. (Diagram L)
4. Add a small amount of water to the cutters.
5. Replace the foil assembly. (Diagram M)
6. Turn on the shaver for approximately 30 seconds.
7. While the shaver is running, rinse the foils under running water. (Diagram N)
8. Turn off shaver.
9. Remove foil assembly.
10. Rinse cutters and foil assembly thoroughly. (Diagram O)
11. Shake off excess water.
12. Replace foil assembly. (Diagram M)
13. Allow shaver to dry before next use.

NOTE: Lubricate teeth of trimmer with oil every six months.



REPLACING YOUR HEADS & CUTTERS

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- Irritation: As foils get worn, you may experience skin irritation. As the foils become excessively worn you may experience some skin irritation or redness.
- Pulling: As the cutters wear, your shaver may not feel as close and you may feel your cutter pulling your hair.
- Wear through: You may notice that the cutters have worn through the foils.

Replacement heads & cutters may be obtained from your local retailer, or directly from Remington®. Simply fill out the enclosed accessory order form or alternatively your order can be processed over the phone via the Remington® Service Hotline.

STORAGE

When not in use, always unplug the power adaptor from the power outlet. Never wrap the cord of the power adaptor around the unit as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug. If the cord becomes twisted in use, periodically straighten it.



This product is not suitable to use in a bath or shower

This product conforms to radio frequency interference requirements

Any product purchased and used commercially carries a limited 90 Day Warranty.



MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State: Postcode:

Contact No: Area Code: Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes No

What is the reason you are returning this product?

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc.(SBI), or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 02/15

Part No. T22-0003385

