

# REMINGTON®

## CERAMIC PRECISION HAIRCUT KIT

**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)

**2 YEAR WARRANTY**

**HC366AU**

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using an electric appliance, basic safety precautions should always be observed, including the following. Read all instructions before using this hair clipper.**

### **KEEP POWER ADAPTOR AWAY FROM WATER**

#### **WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- This appliance is for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with this appliance.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorised service centre for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the hair clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F)
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adaptor to the outlet. To disconnect, turn all controls to OFF, then remove adaptor from outlet, then detach power cord from the hair clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.


**Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.**

**SAVE THESE INSTRUCTIONS**

# HC366AU CERAMIC PRECISION HAIRCUT KIT

## USE AND CARE MANUAL

Thank you for purchasing your new Remington® Ceramic Precision Haircut Kit. Inside this manual you will find tips on using and caring for your hair clipper.

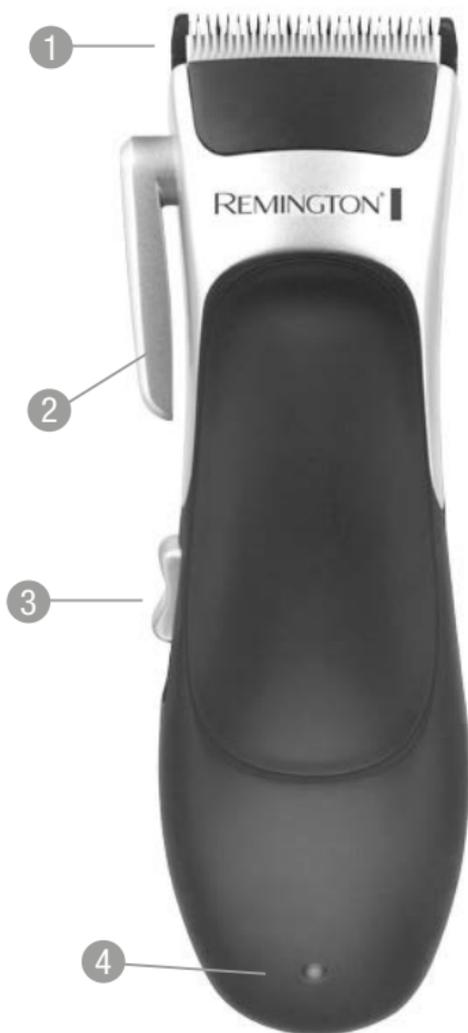

### KEY PARTS

1. Ceramic coated blades
2. Taper control lever
3. On/Off switch
4. Charging indicator light

### Also Includes:

- 6 x trimming combs, 3mm - 25mm
- Left & Right ear guides
- Blade guard
- Storage bag

## ABOUT YOUR HAIR CLIPPER

### HC366AU SPECIFICATIONS

<b>Power System</b>	<b>Cord/Cordless (Rechargeable)</b>
<b>Initial Charge Time</b>	<b>24 Hours</b>
<b>Full Charge Time</b>	<b>16 Hours</b>
<b>Runtime</b>	<b>30 Minutes</b>
<b>Indicators</b>	<b>Charging</b>
<b>Voltage Type</b>	<b>Single</b>

**Power System:** Cord/Cordless – can be used with or without the power cord.

**Charging Indicator:** red light that glows when the hair clipper is being charged.

**Voltage Type:** Single – 220-240V only.

## CHARGING YOUR HAIR CLIPPER

### CORDLESS USE

- Before using your hair clipper for the first time, charge it for 24 hours.
- Charge your hair clipper by plugging in the power adaptor directly into the bottom of the hair clipper.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to a mains power outlet. The charging indicator will light up and will remain illuminated until the hair clipper is disconnected from the power source regardless of whether the batteries are full or not.
- If the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store.
- Fully recharge your hair clipper when you would like to use it again.
- It is not advisable to use this hair clipper directly from the power outlet when it has been fully charged, however, while using the hair clipper in cordless mode, if there is a noticeable drop in power, you can use the hair clipper directly from the power outlet.
- To preserve the life of your batteries, let them run out every six months then recharge for 24 hours.

### CORDED USE

Once the mains power source is turned on the charging indicator will light up to indicate that the hair clipper is receiving the mains power. Turn the hair clipper ON to begin drawing power from the mains power supply, the charging indicator will then turn off when it is in corded use. When the clipper is switched OFF the charging indicator light

will illuminate once again to indicate power source connection. Either leave the clipper connected to complete a full charge (16 hours) or disconnect it from the mains for storage if you are finished using it.

**CAUTION: Extended mains (corded) only use will result in the reduction of the battery life.**

## HOW TO USE

### BEFORE STARTING TO CUT

1. Inspect the hair clipper making sure that it is free from hair and dirt.
2. Ensure that the hair is thoroughly dry and tangle free.

### INSTRUCTIONS FOR HAIR CUTTING

**NOTE: For even cutting, allow the trimmer comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum length trimmer comb, until you know how short you would like your hair to be.**

**NOTE: The comb guide lengths described for use in the steps below are an example only, if you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.**

### STEP 1 - NAPE OF THE NECK

- a. Use 3mm or 7mm guide comb.
- b. Hold the hair clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- c. Slowly lift the hair clipper, working upwards and outwards through the hair, trimming just a little at a time.

### STEP 2 - BACK AND SIDE OF THE HEAD

With the 9mm or 12mm guide comb attached, cut the hair at the back of the head.

### STEP 3 - SIDE OF THE HEAD

- a. With the 9mm or 12mm guide comb attached, trim sideburns.
- b. Then change to the longer 25mm guide comb and continue to cut to the top of the head.

### STEP 4 - TOP OF THE HEAD

- a. Attach the 25mm guide comb, cut the hair on top of the head against the direction in which the hair normally grows.
- b. For longer hair on top, use scissors. Lift the hair on top of the head with a styling comb. Cut over the styling comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- c. Always work from the back of the head.

## STEP 5 - THE FINISHING TOUCHES

- a. Use the hair clipper without an attachment comb for close trimming around the base and sides of the neck.
- b. To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed hair clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

## TAPER LEVER

Your hair clipper has a taper lever located on the left side of the clipper near the blades. Adjust the lever to change the closeness of the cut gradually and also to improve the effectiveness of the comb attachments (for blending between layers). The taper lever also extends the life of the blades because a different cutting edge is used in each setting.

## CLEANING & MAINTENANCE

To ensure long lasting performance of your hair clipper, clean the blades and unit regularly. Always keep the blade cover on the hair clipper blade.

**NOTE: Ensure that the hair clipper is turned off and unplugged when cleaning.**

## AFTER EACH USE

1. Ensure the hair clipper is switched off and disconnected from the mains household power outlet.
2. Brush the accumulated hair from the blades. Do not submerge the hair clipper in water.
3. To clean the body of the unit, wipe with a damp cloth and dry immediately.
4. Gently blow the remaining hairs away from the hair clipper comb and hair clipper blade. Do not rinse the cutter assembly under water.

## EVERY SIX MONTHS

At regular intervals the blade set should be removed and cleaned.

1. Ensure that the hair clipper is empty of power, is switched off and disconnected from the mains household power outlet.
2. Remove the two screws retaining the fixed blade with a screwdriver. Do not remove the blade set.
3. Blow out hairs from between the blades. Do not remove the lubricating grease from the blades. It is not necessary to remove the small moving blade from the unit. If the moving blade has been removed this can be re-fitted by slotting the long grooved edge of the blade onto the two white plastic guide ridges and then seating the blade over the plastic actuator bar. The fixed blade is fitted

with the raised profile pointing outwards and fixed with the two screws.

4. Before fully tightening the 2 screws, adjust the taper lever to the lower position and align the blades so that their cutting edges are parallel to one another. Tighten the 2 screws. Note that if the blades are not correctly aligned then cutting efficiency will be impaired.

When not in use, unplug the hair clipper and store it out of reach of children in a safe dry place. Never wrap the cord around the hair clipper as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections.

## **TROUBLESHOOTING**

### **THE HAIR CLIPPER DOES NOT WORK WHEN TURNED ON**

Hair clipper must be charged for a full 16 hours, or use hair clipper while plugged into wall.

### **HAIR CLIPPER CUTTERS DO NOT MOVE**

The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintaining section.

### **HAIR CLIPPER DOES NOT HOLD CHARGE**

Fully discharge battery by running hair clipper until it stops; then follow recharging instructions (see section on Charging Your Hair Clipper).



**This product is not suitable to use in a bath or shower.**

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

# REMINGTON®

## **REMINGTON SERVICE HOTLINE**

📞 Australia 1800 623 118 (toll free)

📞 New Zealand 0800 736 776 (toll free)

® Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries

Made in China to the specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands, Inc.

REV: 01/16

PART NO: T22-0003910



PLEASE  
RECYCLE