

# REMINGTON®

## PROFESSIONAL BEARD TRIMMER

USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

2 YEAR WARRANTY

MB4130AU

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using electrical appliances, basic precautions should always be observed, including the following.**

### **READ ALL INSTRUCTIONS BEFORE USING**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

### **KEEP THE APPLIANCE DRY**

### **WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

**DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- Do not place in or drop into water or any other liquid.
- Do not use while bathing or in the shower.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience

and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Keep the appliance and the power cord away from edge of tables or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be supplied with approved safety isolating adaptor model PA-0501 (for Australia) with the output capacity of 5V $\overline{\text{---}}$  1A (adaptor output).

#### **WARNING - KEEP THE APPLIANCE DRY**

**Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.**

#### **SAVE THESE INSTRUCTIONS**

# MB4130AU PROFESSIONAL BEARD TRIMMER

## USE AND CARE MANUAL

Thank you for purchasing your new Remington® Professional Beard Trimmer. Inside this manual you will find instructions on using and caring for your new trimmer.



### KEY PARTS

1. On/Off Switch
2. Zoom Wheel
3. Length Position Indicator
4. Removable Blades (not shown)
5. Adjustable Comb
6. Charging Indicator (not shown)

### Also Includes:

- Storage Pouch
- Lubricating Oil
- Cleaning Brush
- Power Adaptor

## MB4130AU SPECIFICATIONS

Power System	Cord/Cordless (rechargeable)
Charge Time	4 Hours
Runtime	60 Minutes
Indicators	Charging
Voltage Type (adaptor voltage type)	Worldwide 100-240

## CHARGING

- Before using your trimmer for the first time, charge it for 4 hours. Note during this charge ignore the electronic indicators as they are in “start-up cycle”.
- The beard trimmer will be fully charged in 4 hours.
- Plug the adaptor into your trimmer and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. Check to ensure that the trimmer On/Off switch is OFF. The charging indicator light will turn on to indicate that it is charging. The light will turn off when charging is complete. When the batteries are low and require recharging, the appliance indicator light will blink red after use.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the trimmer stored away if it will not be used for an extended period of time (2-3 months).
- To preserve the life of the batteries, it is recommended that this appliance should not be left plugged in to a mains power outlet for extended periods of time.
- Use the trimmer only with the charging adaptor supplied.

## INSTRUCTIONS FOR USE

**NOTE:** The adjustable trimmer comb must be attached to the product in order to use the hair length selector.

### ATTACHING & REMOVING THE ADJUSTABLE COMB

- To attach the adjustable comb, first ensure the adjustable zoom wheel is set to 1.5. Then slide on the comb so that the comb rails align into the slots found at the top of the trimmer head.
- To remove the adjustable comb, grasp the comb on either side and pull away from the trimmer.

### BEARD AND STUBBLE LENGTH SETTINGS

- Select the comb length by rotating the zoom wheel upwards to increase the length and downwards to decrease the length.
- Length settings (1.5mm, 2mm, 2.5mm, 3mm, 4mm, 6mm, 8mm, 10mm, 12mm, 15mm, 18mm)

**NOTE:** Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

### TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach an attachment comb to the trimmer blade.
- Use the zoom wheel to set the trimmer comb to the desired length setting.
- The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the trimmer on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull the comb and brush the hair off.

### TRIMMING THE NAPE OF YOUR NECK

**NOTE:** You will need a hand mirror for this operation if performing it alone.

- Remove the adjustable comb from the trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
- Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the roots at the base of your head out of the way of the trimmer.

## **TO DEFINE THE BEARD/MOUSTACHE LINE**

- Hold the trimmer with the trimmer blade facing you.
- Start with the edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards the edge of the beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

## **BLADE RELEASE**

- Ensure the trimmer is switched off.
- Remove the adjustable comb.
- Remove the blades by pushing your thumb upwards under the blades and move the blade set away from the trimmer body.
- To reattach the blades, align the back of the blades with the back housing at the top of the trimmer and push down until the blade set clicks into place.

## **TIPS FOR BEST RESULTS**

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows

## **CLEANING AND MAINTENANCE**

- To ensure long lasting performance of the trimmer, clean the blades and unit after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- Do not use harsh or abrasive cleaners on the unit or blades.
- This product has washable blades. Ensure the blades are detached from the trimmer before washing the blades.
- Wash the blades under a running tap to remove any hair clippings.
- After rinsing under a tap ensure the blades are dry.
- Do not rinse while the product is connected to the mains.
- Please note the main body of the trimmer is not washable and should be kept away from water.

- After each use, it is recommended to clean hair from blades either by using the cleaning brush or by rinsing the blades under running water. When rinsing the blades it is necessary to lubricate them once dry. With the unit turned off apply 3 drops of oil to the moving blade facing up, one drop on each end and one in the middle, then switch the unit on for a few seconds to distribute the oil, then turn the unit off and wipe off excess oil.

**NOTE: Do not disassemble the blades.**

## **BATTERY DISPOSAL**

**NOTE: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.**

The MB4130AU contains a lithium-ion battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.**

This appliance conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.



**Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited**  
**WARRANTY AGAINST DEFECTS**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We** or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### **Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

# REMINGTON®

#### **REMINGTON SERVICE HOTLINE**

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

® Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

Made in China to the specifications of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc.

REV: 03/16

PART NO: T22-0004175

