

REMINGTON®

BARBER'S BEST BEARD TRIMMER

**LITHIUM
POWERED Li**



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au

5 YEAR WARRANTY

MB4850AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice

**WARNING - TO REDUCE THE RISK OF BURNS,
ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Do not use while bathing or in the shower while plugged into a mains power outlet.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.

- Do not store the appliance in the shower. Store in a dry safe place.
- For household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be supplied with approved safety isolating adaptors SW-120060AU (for Australia) with the output capacity of 12Vdc; 600mA (adaptor output).

Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

MB4850AU BARBER'S BEST BEARD TRIMMER

USE AND CARE MANUAL

Thank you for purchasing your Remington® Barber's Best Beard Trimmer. Inside this manual you will find instructions on using and caring for your new trimmer.



KEY PARTS

1. On/Off Switch
2. Adjustable Zoom Wheel
3. Length Position Indicator
4. Charging Indicator Light
5. Stubble Blade
6. Adjustable Beard Comb
7. Blade Release Button
8. Power port
9. Beard Blade

Also Includes

- Storage Pouch
- Power Adaptor
- Cleaning Brush
- Lubricating Oil

ABOUT YOUR BEARD TRIMMER

MB4850AU SPECIFICATIONS

Power System	Cord/Cordless (Rechargeable)
Full Charge Time	4 Hours
Runtime	120 Minutes
Indicators	LED Charging/Low/Full
Voltage Type (adaptor voltage type)	Worldwide 100-240V

CHARGING

- Before using your trimmer for the first time, charge it for 4 hours. Note during this charge ignore the electronic indicators as they are in "start-up cycle".
- Plug the adaptor into your trimmer and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. Check to ensure that the trimmer On/Off switch is OFF. The Charging Indicator Light will pulse on and off to indicate that it is charging. The light will stay solid when charging is complete. When the batteries are low and require recharging, the appliance indicator light will blink red after use.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the trimmer stored away if it will not be used for an extended period of time (2-3 months).
- The beard trimmer will be fully charged in 4 hours.
- To preserve the life of the batteries, it is recommended that this appliance should not be left plugged in to a mains power outlet for extended periods of time.
- Use the trimmer only with the charging adaptor supplied.

CLEANING AND MAINTENANCE

To ensure long lasting performance of the trimmer, clean the blades and unit regularly.

- Ensure the appliance is switched off and unplugged from the mains.
- Always store the attachment guide comb on the trimmer blade.
- Do not use harsh or corrosive cleaners on the unit or blades.
- This product is showerproof and fully washable, after rinsing under a tap ensure the product is dry. DO NOT rinse while the product is connected to the mains power outlet under any circumstances.
- Wash the heads under a running tap to remove any hair clippings.

- After each use, it is recommended to clean hair from blades using the cleaning brush or by rinsing the blades under running water. When rinsing the blades it is necessary to lubricate them once dry. With the unit turned off apply 3 drops of oil to the moving blade facing up, one drop on each end and one in the middle, then switch the unit on for a few seconds to distribute the oil, then turn the unit off and wipe off excess oil.

NOTE: Do not disassemble the blades.

INSTRUCTIONS FOR USE

Your beard trimmer may be used cordlessly when charged, or alternatively it may be used while plugged into the mains power outlet. It is advisable not to use this beard trimmer directly from the power outlet when it has been fully charged, but if while using the trimmer in cordless mode there is a noticeable drop in power, it can be used directly from the power outlet.

WARNING: DO NOT use the product in the shower while it is connected to the power outlet.

TO USE YOUR BEARD TRIMMER:

- Switch the product on by sliding up the on/off switch.
- Always comb your beard or moustache with a fine comb before you start trimming. To attach the adjustable comb, first ensure the adjustable zoom wheel is set to 1. Then slide on the desired comb so that the comb rails align into the slots found at the top of the trimmer head.
- Select the comb length by rotating the zoom wheel upwards to increase the length and downwards to decrease the length. Please see the table below for the different length increments.

SETTING	HAIR DESCRIPTION	HAIR LENGTH	
		mm	inches
1	Stubble or Cropped look	1.5mm	0.06"
2		2.5mm	0.1"
3	Short	4mm	0.16"
4		5.5mm	0.22"
5	Medium	7mm	0.28"
6		9mm	0.35"
7		11mm	0.43"
8		14mm	0.55"
9	Long	18mm	0.71"

- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the accumulated hairs away with your finger.

NOTE: Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

ATTACHING AND REMOVING THE BLADES

- To remove, press the release button and pull upwards and away from the trimmer.
- To attach, snap the desired blade in place until it clicks.
- The stubble blade is intended for short stubble, it is not recommended for use with the adjustable comb. The main blade can be used for trimming beards with or without the adjustable comb.

TIPS FOR A BARBER'S BEST BEARD TRIM

TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting.

TO THIN AND TAPER THE BEARD/MOUSTACHE

- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the accumulated hairs away with your finger.

TRIMMING EDGE OF SIDEBURNS

- Hold the trimmer with the trimmer blade facing you.
- Start with the edge of your sideburn and with the trimmer blades resting lightly against your skin. Use motions towards the edge of your sideburn line to trim to desired locations in facial area.
- Shape as desired.

TRIMMING THE BOTTOM OF YOUR NECK

- You will need a hand mirror for this operation if performing it alone.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

BATTERY REMOVAL

- Remove the blade cartridge from the trimmer.
- Remove the 4 screws from the back side of the trimmer body.
- Pry apart the two halves of the trimmer body to expose the internals.
- With the top half of the trimmer body removed and the internals facing upward, pull the end of the charge port upward to release the battery enclosure.
- Cut the red and black wires which lead into the battery enclosure
- Pry up the small plastic plate on the end of the battery enclosure that the red and black wires lead into and move it out of the way
- Remove the 2 screws from the end of the battery enclosure
- Pry off the battery enclosure end cap
- Pull firmly on what remains of the red and black wires to remove the batteries and circuit board from the battery enclosure
- Firmly pull the individual batteries away from the circuit board to remove them from the circuit board and better expose the red and black battery leads.
- Cut the remaining red and black battery leads to fully disconnect the batteries
- Dispose of the batteries safely and responsibly according to your state and local regulations and to the warnings section of this instruction book.



Suitable for cleaning under an open tap.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195 AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149 NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®

REMINGTON SERVICE HOTLINE

☎ Australia 1800 623 118 (toll free)

☎ New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc. or one of its subsidiaries

Made in China to the specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 08/15

Part No. T22-0003226



PLEASE
RECYCLE