

# REMINGTON®

## trim & shape™

### Beauty Trimmer

USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE



To register your product go to  
[remington-products.com.au](http://remington-products.com.au)  
[remington.co.nz](http://remington.co.nz)



MPT3801AU

## **IMPORTANT SAFEGUARDS**

**WHEN USING APPLIANCES, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

### **WARNING**

- Do not submerge or use under running water, while bathing or in the shower. This trimmer is not watertight.
- Do not place or store trimmer where it can fall or be knocked into a tub or sink. Do not place in or drop into water or other liquid.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Keep away from flammable materials.
- To prevent accidents keep the appliance away from hair on your head, your eyelashes as well as clothes, brushes and wire.
- Never drop or insert any object into any opening.
- Do not use this trimmer with a damaged or broken cutting unit.
- Always store your trimmer in a moisture-free area.
- For household use only.

### **CAUTION**

 
- Do not use this appliance with a damaged or broken cutting unit, as injury may occur.
- For hygiene reasons do not let another person use your trimmer. It is recommended for use by one person only.

**SAVE THESE INSTRUCTIONS**

# MPT3801AU BEAUTY TRIMMER

## USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Beauty Trimmer. Inside this manual you will find tips on using and caring for your trimmer.

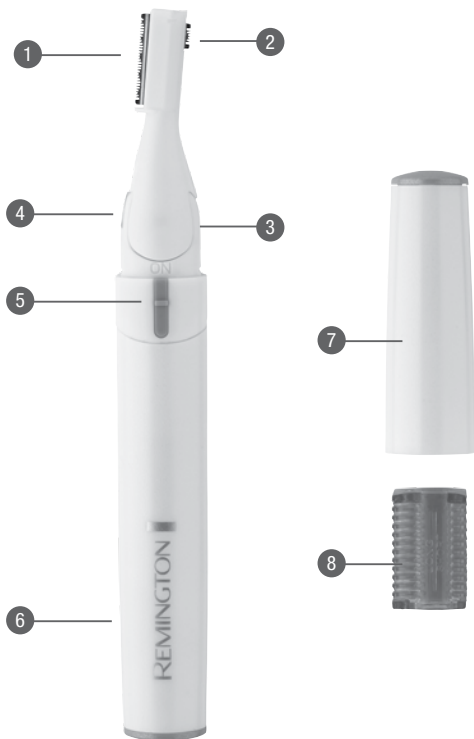

### KEY PARTS

- |    |                     |    |                                 |
|----|---------------------|----|---------------------------------|
| 1. | Trimmer             | 6. | Battery compartment (not shown) |
| 2. | Fine detail trimmer | 7. | Protective cap                  |
| 3. | Pivoting head       | 8. | Eyebrow comb guide              |
| 4. | Illuminating light  |    |                                 |
| 5. | On/Off/Light Switch |    |                                 |

 
 
 
## REPLACING THE BATTERY

Your Remington® trimmer runs on one “AAA” ALKALINE battery.

## INSERTING THE BATTERY

1. Make sure the trimmer is “OFF” and remove the protective cap.
2. Hold the upper part of the unit and gently slide the lower part off. (Figure A)
3. Insert one “AAA” ALKALINE battery positive end down. (Figure B)
4. Slide bottom part back onto the unit, making sure the notch slides over the ON/OFF switch. (Figure C)

Use of any batteries other than alkaline will negatively affect the unit's operating performance. Batteries should not be left in the unit if the unit is not in use for long periods. To prevent battery corrosion the unit should be kept in a dry environment. Dead batteries should be removed immediately and disposed of properly. Do not use rechargeable batteries. The lower voltage in recharged batteries impairs the performance of the cutting unit.

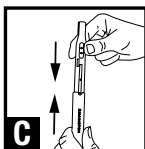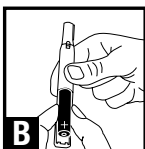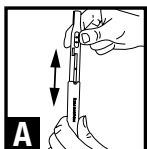



## BEFORE USE

Test a small area on an arm or leg before using your trimmer completely. Discontinue use immediately if any sensitivity or allergic reaction occurs. Do not use on sensitive or irritated skin.

## HOW TO USE

- This trimmer comes with two trimming blades. The larger blade can be used for trimming body hair, neck and sideburns. The smaller blade is ideal for detailing nose/ear hair and eyebrow trimming.
- It also comes with an attachment comb that helps you to achieve an even cut when you do not want to completely remove the hair. The attachment comb has two sides, the long tooth leaves hair longer than the short tooth (we recommend starting with the long tooth).

  - To use the attachment comb, be sure the unit is in the “off” position and slide it over the trimming blades. (Figure D)
- Make sure that the teeth of the comb are facing in the same direction as the trimming blade and that the top of the comb is even with the top of the trimmer.
- If you want to completely remove hair, use the trimmer without the attachment comb.
- To operate the trimmer, slide the on/off switch towards the trimming blades. When you are finished trimming, slide the on/off switch away from the blades.
- Slide the On/Off Switch upward to the top position which will turn the light on. The trimmer will continue to operate in this position. (Figure E)

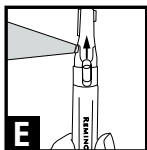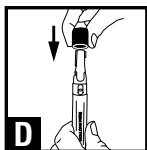

### Using the Pivoting Head:

1. Remove the protective cover and be sure the trimmer is turned off.
2. Gently move the trimming head to the right. Be sure the head is locked into position prior to use.

To put the head back to the original up-right position:

1. Turn the trimmer off.
2. Gently move the trimming head to the left (opposite direction of the arrow). Be sure the head is locked into position prior to use.
3. Replace the protective cover when finished.

### TRIMMING TIPS

1. Place the trimmer at a slight angle to the skin, and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin taut with one hand during the trimming process to ensure the closest possible cut.

 
## CLEANING YOUR TRIMMER

After each use, brush or blow accumulated hair from the cutting unit.

### CLEANING INSIDE THE HANDLE

For a more thorough cleaning, remove hairs from inside the handle. Make sure the trimmer is OFF and push down the lock to release the trimmer head. (Figure F)

1. Remove trimmer head and clean both head and handle tip with brush.
2. Apply a drop of mineral oil or baby oil to the top of the cutting blades.
3. Replace trimmer head and snap into place by pushing the lock back up.

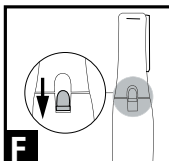

**Note:** This product does not contain any user-serviceable parts. Your trimmer is designed to give you comfortable use. To ensure that you get optimal performance from it, follow these simple cleaning and lubrication tips.



**This product is not suitable to use in the bath or shower.**

This product conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.

**Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited**  
**WARRANTY AGAINST DEFECTS**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of one (1) year from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

**Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195 AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

**Website: [www.remington-products.com.au](http://www.remington-products.com.au)**

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149 NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

**Website: [www.remington.co.nz](http://www.remington.co.nz)**

# REMINGTON®

#### **REMINGTON SERVICE HOTLINE**

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

® Registered Trademark and ™ Trademark of Spectrum Brands, Inc., or one of its subsidiaries

©2017 Spectrum Brands Inc.

Rev. 07/17

Part No. T22-0005203

