

REMINGTON®

BARBER'S BEST PERSONAL GROOMER

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
remington-products.com.au
remington.co.nz

3 YEAR WARRANTY

PG526AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Do not use while bathing or in the shower.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Keep the appliance and the power cord away from edge of tables or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be supplied with approved safety isolating adaptor SA050035D(AUS version) with the output capacity of 5 ac; 350mA (adaptor output).


WARNING - KEEP THE APPLIANCE DRY

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

PG526AU BARBER'S BEST PERSONAL GROOMER USE AND CARE MANUAL

Thank you for purchasing your Remington® Barber's Best Personal Groomer. Inside this manual you will find instructions on using and caring for your groomer.

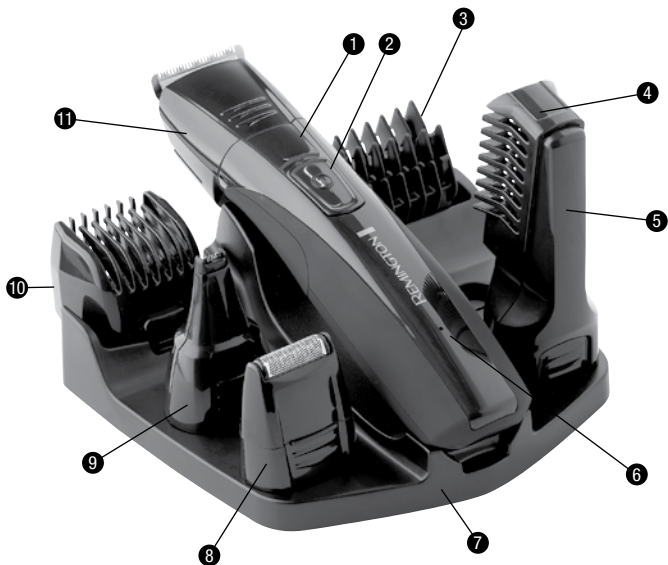

KEY PARTS

- | | |
|---|--|
| 1. Trimmer | 8. Foil Shaver Head |
| 2. On/Off Switch | 9. Nose/Ear/Eyebrow Trimmer Head |
| 3. 3x Clip-on Stubble Combs (3, 6, 9mm) | 10. Adjustable Beard Comb (2, 4, 6, 8, 10, 12, 14, 16mm) |
| 4. 3 Length Body Hair Comb (3, 6, 9mm) | 11. Beard Trimmer Head |
| 5. Body Hair Trimmer Head | Also Includes: |
| 6. Charging Indicator Light | • Power Adaptor |
| 7. Storage Stand | |

NOTE: The Adjustable Comb Attachments have various length settings. When first becoming familiar with your Barber's Best Personal Groomer, begin with a higher numbered setting. Adjust cutting length, as desired.

ABOUT YOUR GROOMER

PG526AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Full Charge Time	4 Hours
Runtime	60 Minutes
Indicators	LED Charging Indicator
Voltage Type (adaptor voltage type)	Single 220-240V only

CHARGING

- Before using your groomer for the first time, charge it for 4 hours. The groomer will be fully charged in 4 hours. Note during this charge ignore the electronic indicators as they are in “start-up cycle”.
- Plug the adaptor into your groomer and then plug the charging adaptor unit into a 220-240 volt domestic power outlet. Check to ensure that the groomer On/Off switch is OFF. The Charging Indicator Light will illuminate to indicate that it is charging. When the battery is full the Charging Indicator will remain illuminated until disconnected from the power outlet.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the groomer stored away if it will not be used for an extended period of time (2-3 months).
- To preserve the life of the batteries, discharge them by running the groomer until the blades move slowly. Switch off and recharge for 4 hours. Do this every 6 months.
- Use the groomer only with the charging adaptor supplied.

HOW TO USE YOUR PERSONAL GROOMER

What attachments to use:

	Nose/Ear/ Eyebrow trimmer	Hair length combs	Foil shaver	Beard trimmer	Body hair trimmer
Beard		X		X	
Beard line			X	X	
Ear	X				
Eyebrow	X				
Moustache		X		X	
Nape of neck				X	X
Nose	X				
Sideburns		X	X	X	
Body			X		X
Back					X

ATTACHING THE GROOMING ATTACHMENTS

- The trimmer attachments are removed by rotating anticlockwise and lifting off.
- Insert the required attachment and rotate clockwise to lock into position.
- The Adjustable Beard Comb attachment has 8 Length settings: 2-16mm (in increments of 2mm). Begin with a higher numbered setting. Adjust cutting length as desired once you are familiar with using the groomer, it is better to select a longer hair length setting in order not to trim too much hair.

GROOMING TIPS

HAIR:

- Should be dry and free of lotions or other liquids.
- Comb outward to obtain maximum height / length and facing in the same direction.

BEARD / MUSTACHE:

- Use a small comb to straighten hairs for trimming.
- When TRIMMING, first select the Beard Trimmer Attachment. Starting under the chin, follow the jaw line back toward ear. Trim in multiple directions to capture all stray hairs.
- When THINNING or TAPERING, use a small comb to hold beard in place. In your opposite hand, hold the Groomer with the cutting system facing outward while slowly moving the trimmer along the length of the comb. The Adjustable Beard Comb Attachment can also be used to achieve the desired look.

FOIL SHAVER:

- Use the Foil Shaver attachment to clean-up detailed areas. For best results, avoid holding at an angle.

NOTE: The foil shaver is designed to shave the detailed areas around your beard, moustache and sideburns. It is not designed to shave your entire face.

EARS:

- When trimming inner ears, avoid inserting the groomer more than 1/4" into ear canal.
- Rotate the groomer in a circular motion while gently moving in and out of ear canal.

EYEBROWS:

- Guide cutting edges to stray hairs along eyebrows.
- For best results, do not use the trimmer to define entire eyebrow.

NAPE OF NECK:

- Using a hand-held mirror is necessary if self-trimming.
- Lift hair off neck, using index finger to cover & protect hairs NOT needing trimming.
- Carefully touch cutting blade to neck, slowly moving the groomer in an upward direction until stopped by index finger.

NOSE:

- Carefully insert groomer no more than 1/4" into nostril.
- Rotate the groomer in a circular motion while gently moving in and out of nose.

BACK AND BODY:

- The Body Trimmer is designed to quickly trim hair over large areas such as the chest and back. The Body Comb can be used in any of the three length settings (3, 6, 9mm) by sliding the comb in the grooves on the trimmer. Alternatively the comb can be removed for a close trim.

NOTE: Use slow light pressure. Too much pressure may trim off more hair than desired.

CLEANING, CARE & MAINTENANCE

NOTE: Always clean the groomer attachments regularly to ensure maximum performance and a proper operating life.

CLEANING ATTACHMENTS WITH WATER

1. Remove attachment.
2. Rinse **ONLY** the attachment under warm running water. Do **NOT** use hot water as this might cause damage.

NOTE: Do not rinse the foil shaver.

CLEANING ATTACHMENTS WITH BRUSH

- After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of groomer handle.

CLEANING FOIL SHAVER

NOTE: Do not rinse or lubricate the foil shaver with oil, as it is permanently lubricated.

1. Remove attachment by pressing security latches on front of foil shaver.
2. Remove head, shake to remove excess clippings.
3. Replace attachment by gently snapping into place.

OILING BLADES & CAUTIONS

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

NOTE: Do not lubricate the foil shaver with oil, as it is permanently lubricated.

TROUBLESHOOTING

Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

A: The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

A: The groomer might simply need charging. Follow instructions for charging as described previously - refer to page 4. Should charging prove unsuccessful, contact the REMINGTON SERVICE HOTLINE for assistance - refer to page 10

Q: WHAT IF THE GROOMER FAILS TO HOLD A CHARGE?

A: Fully discharge the groomer by running until it completely stops. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact the REMINGTON SERVICE HOTLINE for assistance - refer to page 10

BATTERY DISPOSAL

NOTE: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

The PG526AU contains a lithium-ion battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.



This product is not suitable for bath or shower.

This product conforms to radio frequency interference requirements

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON 

REMINGTON SERVICE HOTLINE

☎ Australia 1800 623 118 (toll free)

☎ New Zealand 0800 736 776 (toll free)

® Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries

Made in China to the specifications of Spectrum Brands, Inc.

© 2016 Spectrum Brands, Inc.

REV: 05/16

PART NO: T22-0004307