

REMINGTON®

TITANIUM ALL-IN-ONE RECHARGEABLE GROOMING SYSTEM



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au

2 YEAR WARRANTY

PG6020AU

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, basic precautions should always be observed, including the following.

For additional protection, the installation of a residual current device (rCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be charged by approved safety isolating adaptors SA050035D (AUS version) with the output capacity of Li-ion 5V ac; 350mA.

Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

PG6020AU TITANIUM ALL-IN-ONE RECHARGEABLE GROOMING SYSTEM USE AND CARE MANUAL

Thank you for purchasing your Remington® Titanium All-in-one Rechargeable Grooming System. Inside this manual you will find instructions on using and caring for your groomer.

KEY PARTS

1. Full Size Trimmer Attachment
2. Hair Clipper Comb Attachment
3. On/Off Switch
4. Groomer Handle
5. Nose, Ear, Eyebrow Trimmer Attachment
6. Stubble & Beard Comb Attachment
7. LED Charging Indicator Light
8. Arc Detail Trimmer Attachment
9. Foil Shaver Attachment
10. Storage Stand

ALSO INCLUDES

- Power Adaptor



ABOUT YOUR MULTI-GROOMER

PG6020AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	14-16 Hours
Runtime	30 Minutes
Indicators	LED
Voltage Type	Single

CHARGING

- Before using your multi-groomer for the first time, charge it for 24 hours. Note during this charge ignore the electronic indicators as they are in “start-up cycle”.
- Plug the adaptor into your multi-groomer and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. Check to ensure that the multi-groomer On/Off switch is OFF. The Charging Indicator light will illuminate when it is connected to the power source, the light will remain on until it is disconnected from the power source (even when it is fully charged).
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the multi-groomer be stored away if it will not be used for an extended period of time (2-3 months).
- The multi-groomer will be fully charged in 14 to 16 hours.
- To preserve the life of the batteries, discharge them by running the multi-groomer until the blades move slowly. Switch off and recharge for 24 hours. Do this every 6 months.
- Use the multi-groomer only with the charging adaptor supplied.

CLEANING AND MAINTENANCE

DO NOT submerge the groomer handpiece in water.

Cleaning the Beard Trimmer, Nose & Ear Detail Trimmer and Arc Detail Trimmer Attachments:

Brush away and blowout any hair clippings from the cutting system, attachment, and top of groomer handle. Alternatively, these attachments can also be rinsed under cold water.

Cleaning the Foil Shaver Attachment:

Remove the foil head by pressing the button on the front of the foil shaver attachment. Gently tap the foil head to remove excess clippings (never use a brush on the foil). Blow away hair clippings from the cutter. Replace foil head onto the shaver attachment by gently snapping into place.

NOTE: The Beard Trimmer attachment is permanently lubricated. If you do rinse this attachment with cool or warm water (never use hot water) then it will need to be re-lubricated with light grade oil or sewing machine oil (1-2 drops over the cutters).

ATTACHING THE GROOMING ATTACHMENTS

- The multi-groomer attachments are removed by rotating anticlockwise and lifting off.
- Insert the required attachment and rotate clockwise to lock into position.

WHAT ATTACHMENTS TO USE?

Your Multi-Groomer offers a solution for easily removing any facial hair and personal grooming. The table below will help you select which attachment will work best for your grooming requirement:

	Detail Arc trimmer	Full size trimmer	Nose & Ear trimmer	Adjustable combs	Foil shaver
Beard		X		X	
Beard line	X	X			X
Ear			X		
Eyebrow	X		X		
Moustache	X	X		X	
Nape of neck	X	X			
Nose			X		
Sideburns	X	X		X	X

NOTE: The Adjustable Beard Comb has 8 length settings (1-8mm) and is designed for use on the beard. The Adjustable Hair Clipper Comb has a further 8 length settings (9-16mm) and may be used on long beards or on the hair on your head.

Begin with a higher numbered setting. Adjust cutting length as desired once you are familiar with using the groomer, it is better to select a longer hair length setting in order not to trim too much hair.

NOTE: The foil shaver is designed to shave the detailed areas around your beard, moustache and sideburns. It is **not** designed to shave your entire face.

TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before using your groomer.
- Comb your hair in the direction that it grows.
- Remove the Adjustable Beard Comb attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.
- Before trimming beards, comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming methods (i.e. upwards, downwards or across). Practice is best for optimum results.
- Use slow light pressure. Too much pressure may trim off more hair than desired.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Firstly, pry the detail blade head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely



This product is not suitable to use in a bath or shower.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc. or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

© 2015 Spectrum Brands Inc.

Rev. 05/15

Part No. T22-0003693

