

# kogan


## Coin Sorter & Counter KACOINCNTXA Quick Start Guide

### Safety Warnings

For your safety, it is very important that you always follow these simple precautions:

- Do not operate the unit if you or the unit itself are damp. Operating the machine under damp conditions may lead to an electric shock hazard.
- Turn off and unplug the power supply before performing any maintenance.
- Never start the unit with the back cover open.
- Do not put your fingers inside the hopper or channels when the unit is under operation.
- Turn off and unplug the power if the unit will not be used for some time.
- Should you have any questions or concerns regarding the use of this product, please contact the Kogan.com customer support team.

### Product Layout

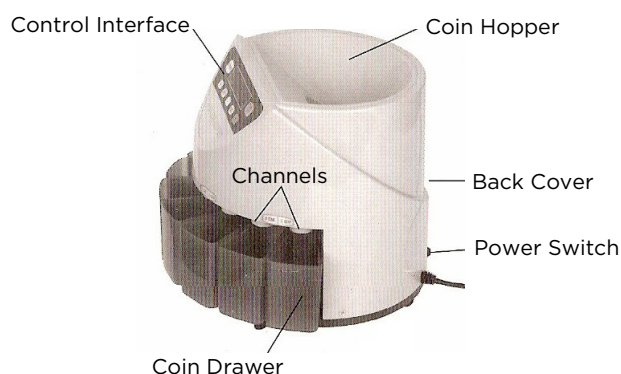

### Technical Specifications

Operating Temperatures	0°C ~ 40°C
Ambient Humidity	30 ~ 80%
Hopper Capacity	Maximum of 500 coins
Coin Drawer Capacity Each	50 ~ 300 coins
Batch Preset Number Display	3 Digits LED
Counting Number Display	4 Digits LED
Power Source	AC 220V/ 50Hz AC 110V / 60Hz
Power Consumption	<45W
Dimensions	345 x 306 x 260mm
Weight	3.9kg
Counting Speed	Max 270 coins per minute

In the interest of ongoing development and improvement of our products, these specifications are subject to change without prior notice.

## Attention

Please handle this product with care and inspect it regularly to ensure it is in good working order.

If the product, power supply cord or plug shows any signs of damage: stop use, unplug and contact [Kogan.com](http://Kogan.com) support.

# Operation

1. Ensure that the machine is placed on a flat, level surface, then turn the unit on.
2. Set an expected batch  
Each channel can be set an expected batch (from 0 to 999)  
Press the "**SET**" key to select the channel, and the "**BAT**" key, "**+**" key and "**-**" key to set the expected batch number.  
Note 1: If some channels have the batch set to 0, the machine will not stop this channel, even if the drawer is full, unless "**START/STOP**" has been pressed or no coins drop through the channel within 20 seconds.  
Note 2: Keep "**-**" pressed for 7 seconds to set ALL channels to 0.  
Note 3: The batch settings can be automatically memorized.
3. Start Counting  
Put coins in the hopper, then press the "**START/STOP**" key to start counting. Press "**START/STOP**" again to stop counting.
4. Check Report  
Press the "**REPORT**" key when the machine is in standby state and you can check the counting results of each channel. Pressing the "**C**" key will exit this checking procedure.

 
# Maintenance

**WARNING:** Turn machine off and unplug from the power supply before performing maintenance!

If foreign object falls into the hopper it will cause jamming and may even damage the unit! Take care to not allow foreign objects to fall into the hopper. As shown to right, to remove a foreign object, open the back cover and and remove the foreign object.



If a coin gets jammed, use a finger to push the jammed coin upwards, then let it fall out through the gap between the channels, as shown to right.



When the unit is switched on, it undergoes a self-testing process. The following error messages may be displayed:

**EA** : This means the optical sensor is blocked. Stop the machine, unplug the unit from the power supply and remove the back cover. If you then turn the carry tray with your hands, you should see the glass covering. If it looks like the glass is dirty/dusty, please clean it. If you are getting the EA error message often, it may mean that the working environment is resulting in too much dust/dirt getting into the inner parts of the machine.

**E1 ... E8** : This means the counting sensor is blocked (according to diameter from smallest to largest).

**E9** : This means the running sensor is blocked.

**If after cleaning the sensors the error messages continue to appear or the unit does not operate as desired, please contact the Kogan.com customer support team for further advice.**