

kogan

120" Motorised Projector Screen KAMPS120XA Quick Start Guide

All specifications and configurations are subject to change without prior notice.

 
 
 
 
PROTECT YOUR SCREEN by keeping it rolled up in the case when not in use. Make sure the screen is free of dust or dirt before re-rolling it into its case. Use a soft duster to gently remove any dirt on the surface.

Important Safety Instructions

When using your video equipment, basic safety precautions should always be followed, including the following:

- Read and understand all instructions before use.
- Place the cord neatly to keep it away from being accidentally pulled down or touching a heat source.
- If an extension cord is necessary, a cord with a current rating equal to the requirements of the unit is required, as overheating may result.
- To reduce the risk of electric shock, do not disassemble this appliance. If repair work is required, contact the Kogan.com customer support team.

Suggested Installation methods

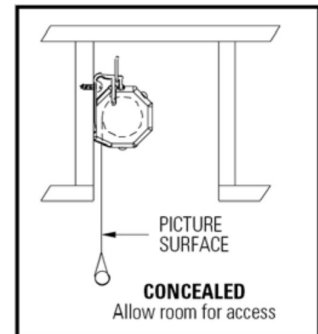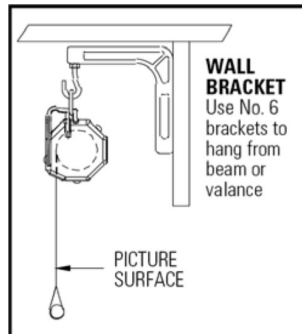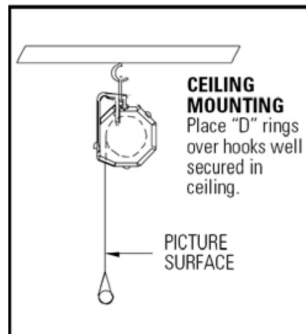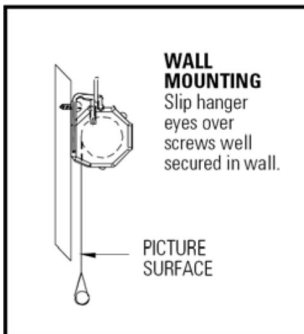

Operation Instructions

To Lower Screen

Press the lower end of the slide switch to lower the screen automatically.

To Raise Screen

Press the upper end of the slide switch to raise the screen.

To Stop the Screen

The screen may be stopped in any intermediate position by moving the slider switch to "OFF".

Note: It is suggested that when the screen is not in use, the slide switch should be positioned in the center "OFF" position.

Daily Maintenance

1. Store and protect the surface from dirt and insects.
2. The screen should not be raised and lowered recklessly, as the motor may overheat and cut out due to the thermal overload feature. If this occurs, allow time for the motor to cool down before continuing use.
3. There is no need for the customer to ever lubricate the motor.