

# OVELA Fitted Electric Blanket

## OVELBLKTQNA

### Quick Start Guide

#### Before Use

Read and follow all of the instructions in this quick start guide, even if you feel that you are familiar with the product, and keep a copy handy for future reference. The energy rating of this product is based on specific loading tests. Normal use may draw significantly less power.


When using any electrically powered products, basic safety precautions must be followed.  
**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT**

#### WARNING


- To reduce the risk of fire, electric shock or injury to persons or property:
- Read all instructions before using the blanket and keep for future reference.
- Use only with a plug with voltage that matches the blankets rating.
- Do not immerse the blanket in liquid, or allow running water into its interior as this could create an electrical shock hazard.
- Do not reach for an appliance that has fallen into water. Switch off at the supply and unplug immediately.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact the Kogan customer support team for advice.
- Do not operate the blanket with wet hands.
- This appliance is not designed for outdoor use.
- Do not allow the cord to come into contact with the heated surface during use.
- All covers and fabric must be in place to prevent direct access to the heating elements and must all be in place when the blanket is in use.

#### Overview of the Blanket

Before first use, please remove all packaging from the blanket and then place the electric blanket on the mattress, centered towards the foot of the bed. Please ensure the control leads are near the head of the bed where the user can access them easily.

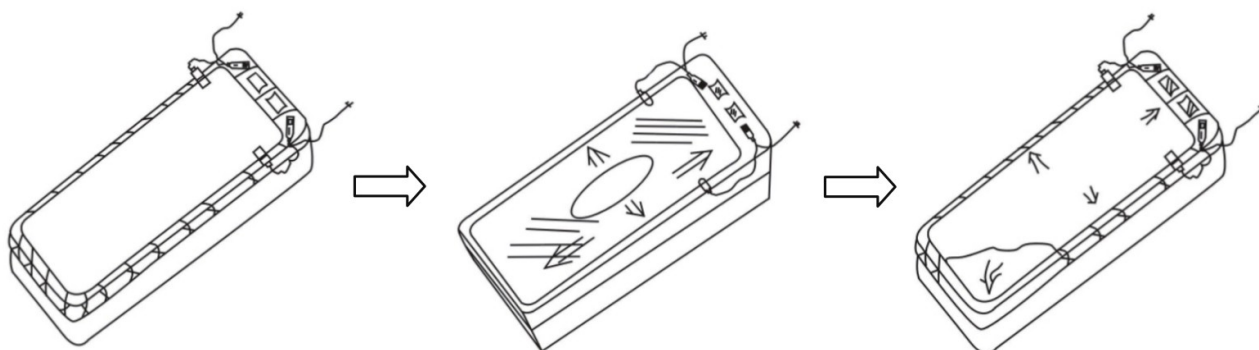

## Control Panel Guide

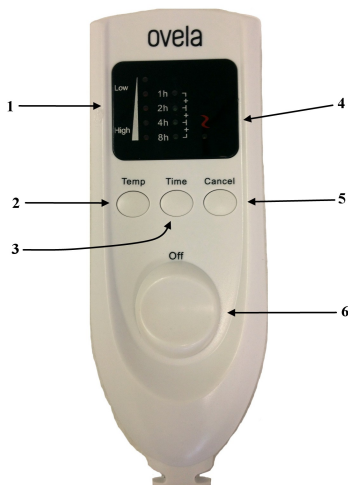

1 – Temperature/Timer Indicators	2 – Temperature Button
3 – Timer Button	4 – Power Indicator
5 – Cancel Button	6 – ON/OFF Switch

## Operation Guide

### Connect The Controller

The blanket has a detachable controller and a waterproof element that makes your blanket machine washable. **Please ensure the electric blanket controller is in the OFF position and not connected to the power supply before washing it.**

Ensure that the locking clip engages with the small plastic pin on the plug. Turn the electric blanket over, position and fit it to the mattress.

### Disconnect The Controller

The socket has a locking clip that engages with a small pin on the plug. With the controller set to the OFF position and the power plug removed from the power supply, push the clip out to release the socket pin and withdraw the connector plug by pulling it away from the socket.

### Usage of the Controller

- Switch the power button to ON, at which point the indicator light will illuminate.
- Press the 'Temp' button to activate the thermostat display and then cycle through the different available heat settings.
- Press the 'Time' button to set the timer (timer range can be from 1 hour to 10 hours).
- Switch the power button to OFF, at which point the indicator light will extinguish.
- This product is automatically temperature controlled. It will fast heat when powered on, and then it will automatically control the temperature after 15 minutes.